





Startup Guide 入門指南

Sound Bar : HT-Z9F

What's in the box 盒中內容

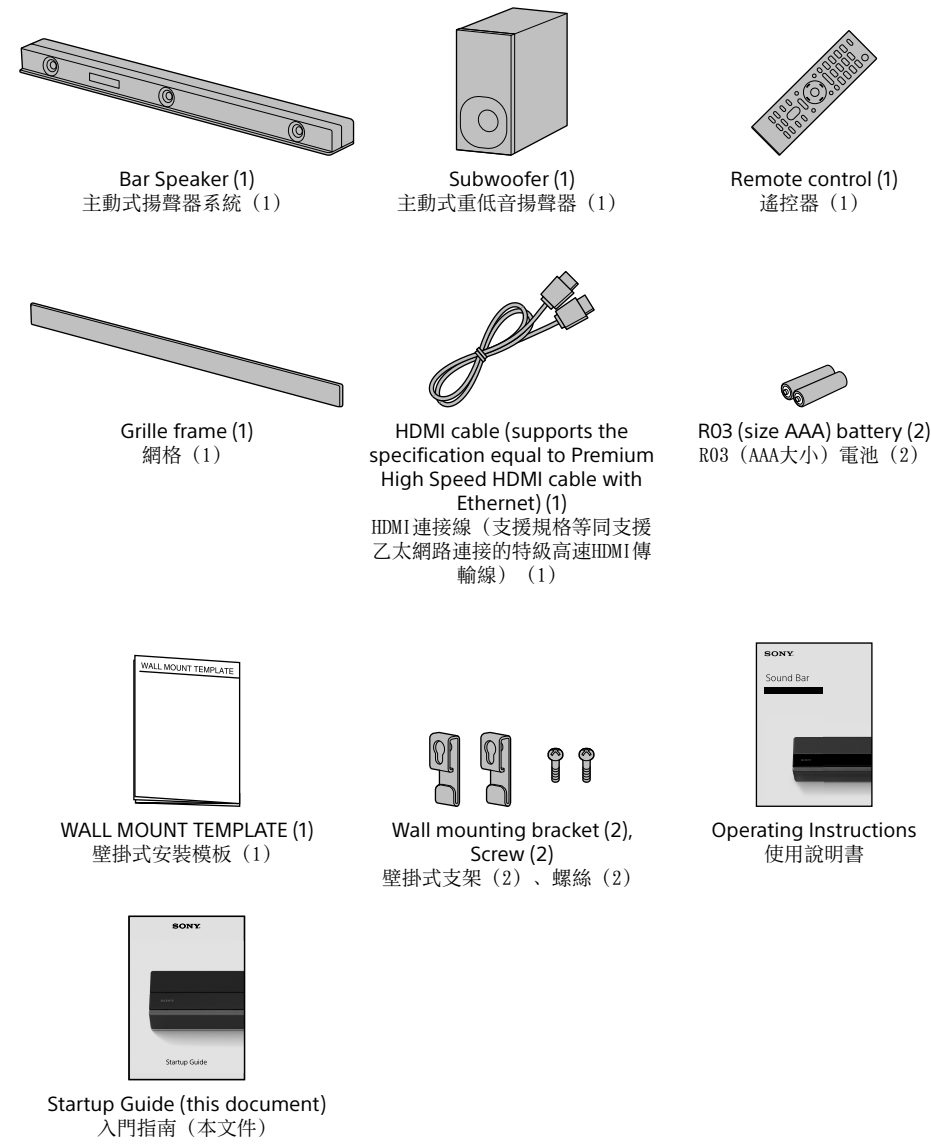


Installation position 安裝位置

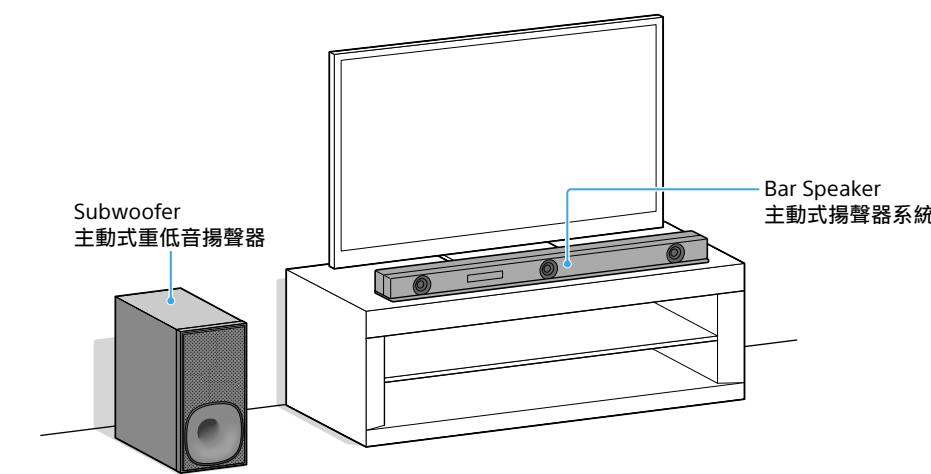


- Note**
- Do not place magnetic cards on the system or near the system.
 - Do not cover the top of the Bar Speaker with metal objects such as TV frame, etc. Wireless functions may become unstable.
 - Do not place metal objects around the system. Wireless functions may become unstable.

- 註**
- 請勿將磁卡放在系統上或系統附近。
 - 請勿在主動式揚聲器系統頂端覆蓋金屬物體，例如電視機架等。否則無線功能可能不穩定。
 - 請勿將金屬物體放在系統周圍。無線功能可能不穩定。

To mount the Bar Speaker on a wall
Refer to "Mounting the Bar Speaker or Rear Speaker on a Wall" in the Operating Instructions (separate document).
若要將主動式揚聲器系統安裝在牆上
請參閱使用說明書（另外的文件）中的“在牆壁上安裝主動式揚聲器系統或後置揚聲器”。

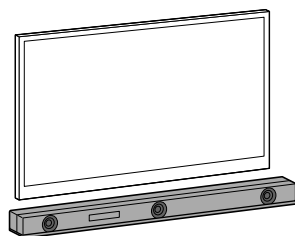

1 Connecting with a TV and other devices 連接電視機和其他裝置

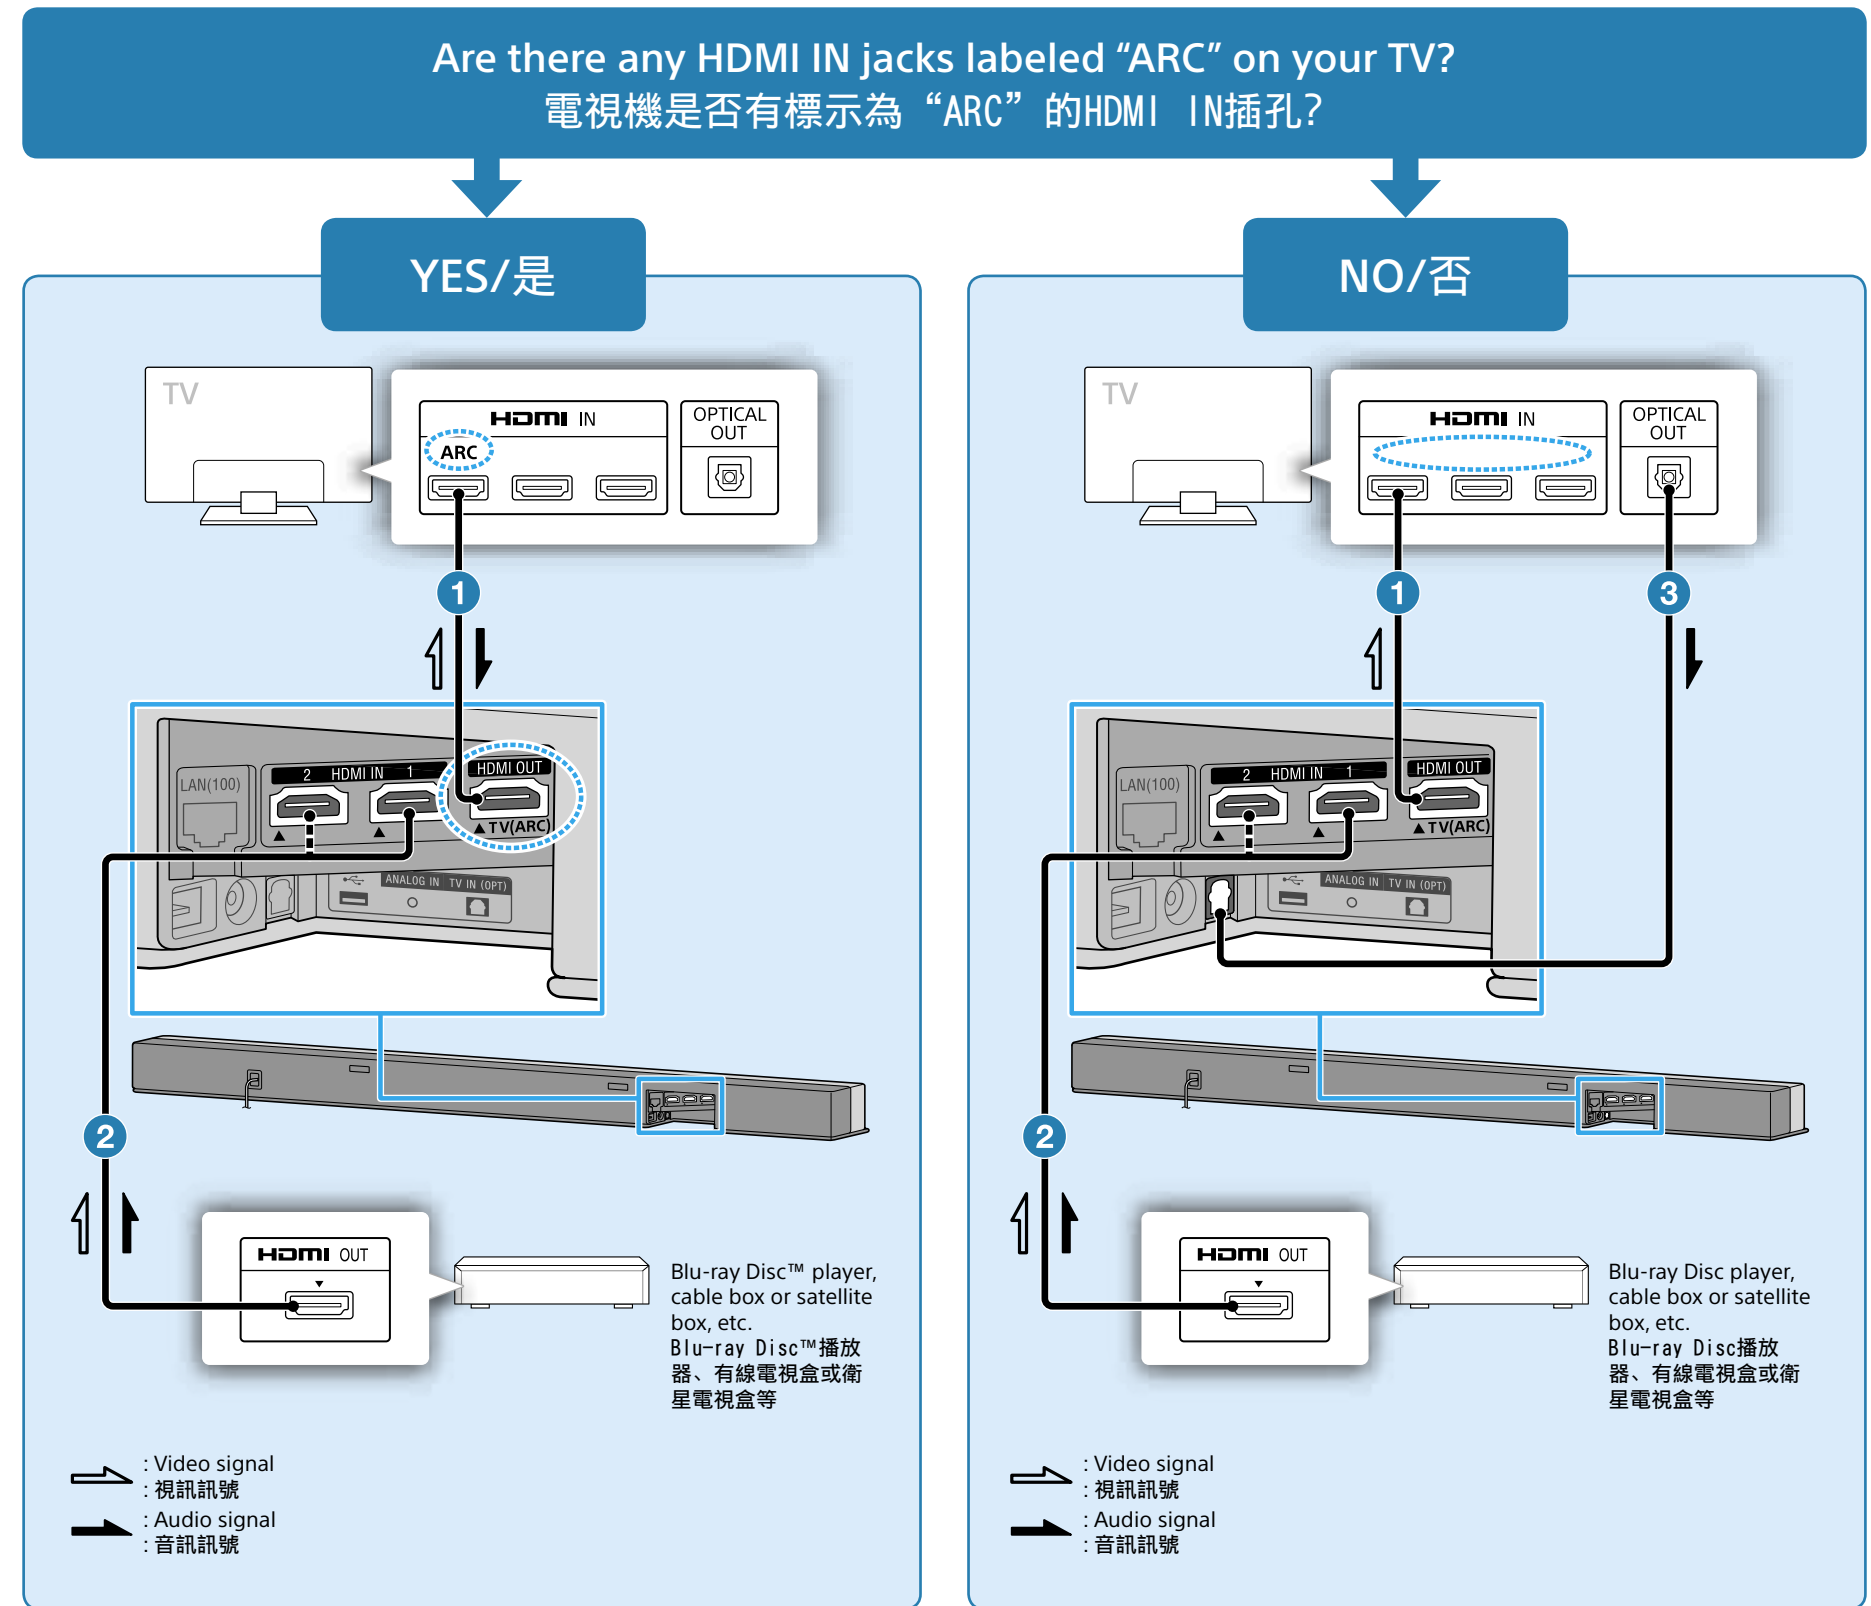

Refer to the Operating Instructions (separate document) for the TV connection methods below.

Connecting Sony TV with the BLUETOOTH Function
Wirelessly

Connecting a 4K TV and 4K Devices

Connecting a TV with an Analog Audio Cable

Startup Guide (this document) explains how to connect the Bar Speaker
and a TV via an HDMI cable.

請參閱使用說明書（另外的文件）以瞭解下列 電視機的連接方法。

無線連接具有BLUETOOTH功能的Sony電視機

連接4K電視機和4K裝置


使用類比音訊連接線連接電視機

入門指南（本文件）說明如何透過HDMI連接線，連接主動式揚聲器系統與電
視機。



Use the HDMI cable (supplied) to connect an HDMI IN jack on your
TV and the HDMI OUT (TV (ARC)) jack on the Bar Speaker.

- Note**
- Make sure that the cable is firmly inserted.
 - If your TV does not have an HDMI IN jack labeled "ARC," you also need to connect the TV and the Bar Speaker via an optical digital cable (not supplied) as instructed in step 3. There will be no sound output from the TV if the TV and the Bar Speaker are connected only via the HDMI cable.
 - To watch 4K video content, refer to "Connecting a 4K TV and 4K Devices" in the Operating Instructions (separate document).

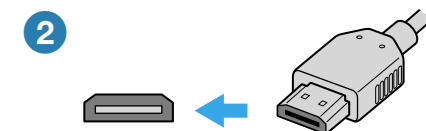

Use an HDMI cable (not supplied) to connect an HDMI OUT jack
on a device and either the HDMI IN 1 jack or HDMI IN 2 jack on the
Bar Speaker.

- Note**
- Make sure that the cable is firmly inserted.
 - To watch 4K video content, refer to "Connecting a 4K TV and 4K Devices" in the Operating Instructions (separate document).

Tip

- When devices such as a Blu-ray Disc player, cable box, or satellite box are currently connected to a TV, disconnect the device from the TV and then connect it to the Bar Speaker to reproduce the high quality surround sound.



When there is no HDMI jack labeled "ARC" on your TV, use an
optical digital cable (not supplied) to connect an optical out jack
on your TV and the TV IN (OPT) jack on the Bar Speaker.

- Note**
- Check the shape of the optical digital cable's connectors and the jacks on the TV and the Bar Speaker. Insert the connectors into the jacks in the right directions. If you forcibly insert the connectors in the wrong directions, the connectors and the jacks may be damaged.

使用HDMI連接線（附帶）連接電視機的HDMI IN插孔與主動式揚聲器
系統的HDMI OUT (TV (ARC))插孔。

- 註**
- 確定連接線牢固地插入。
 - 如果您的電視機沒有標示為“ARC”的HDMI IN插孔，就必須透過步驟3中所示的光纖數位線（無附帶）連接電視機與主動式揚聲器系統。如果僅透過HDMI連接線連接電視機與主動式揚聲器系統，電視機就沒有聲音輸出。
 - 若要觀看4K視訊內容，請參閱使用說明書（另外的文件）中的“連接4K電視機和4K裝置”。

使用HDMI連接線（無附帶）連接裝置的HDMI OUT插孔與主動式揚聲器
系統的HDMI IN 1插孔或HDMI IN 2插孔。

- 註**
- 確定連接線牢固地插入。
 - 若要觀看4K視訊內容，請參閱使用說明書（另外的文件）中的“連接4K電視機和4K裝置”。

提示


- Blu-ray Disc播放器、有線電視盒或衛星電視盒等裝置目前已連接到電視機時，將裝置與電視機斷開連接，然後將它連接到主動式揚聲器系統以重現高品質環繞聲。

如果您的電視機沒有標示為“ARC”的HDMI插孔，請使用光纖數位線
（無附帶）連接電視機的光纖輸出插孔與主動式揚聲器系統的TV IN
(OPT)插孔。


- 註**
- 請檢查光纖數位線連接器與電視機及主動式揚聲器系統插孔的形狀。以正確的方向將連接器插入到插孔內。如果您以錯誤方向強力插入連接器，連接器與插孔可能會損壞。

Continued on back page
續背面


2 Setting up the remote control 設定遙控器

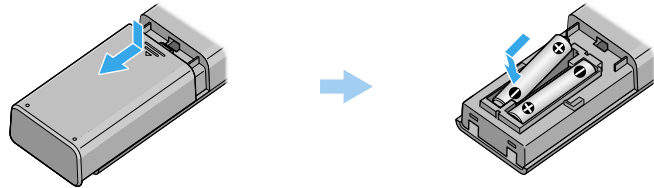

3 Turning on the TV 開啟電視機的電源

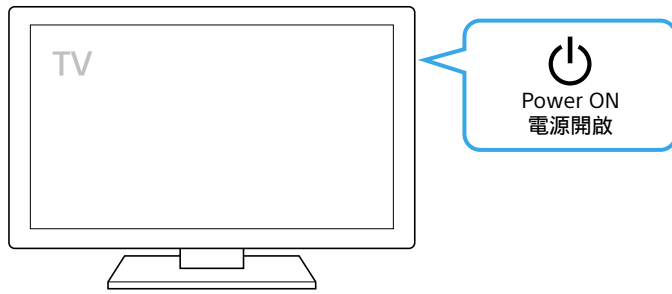



4 Turning on the system 開啟系統的電源

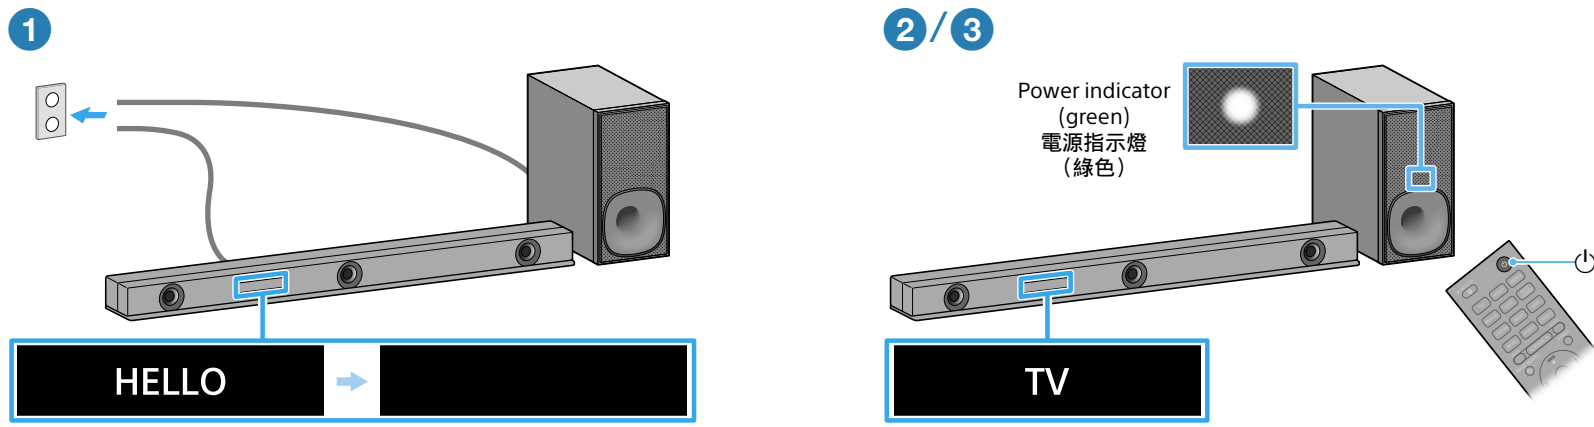

- 1 Connect the AC power cords (mains leads) of the Bar Speaker and subwoofer to the AC outlet (mains). The remote control of the system does not work until "HELLO" in the front panel display on the Bar Speaker disappears.
- 2 Press (power) on the remote control of the system. "TV" appears in the front panel display on the Bar Speaker.
- 3 Confirm that the power indicator of the subwoofer is lit in green. If the power indicator of the subwoofer is lit in green, the connection with the Bar Speaker is complete. If not, refer to "Subwoofer" of "Troubleshooting" in the Operating Instructions (separate document).

- 1 將主動式揚聲器系統和主動式重低音揚聲器的交流電源線連接到交流電插座。在主動式揚聲器系統前顯示面板上的 "HELLO" 消失之前，系統的遙控器沒有作用。
- 2 按下系統遙控器上的 (電源)。主動式揚聲器系統的前顯示面板上出現 "TV"。
- 3 確認主動式重低音揚聲器的電源指示燈亮綠色。如果主動式重低音揚聲器的電源指示燈亮綠色，表示主動式揚聲器系統的連接已完成。否則，請參閱使用說明書（另外的文件）中 "故障排除" 的 "主動式重低音揚聲器"。

5 Listening to sound 聆聽聲音

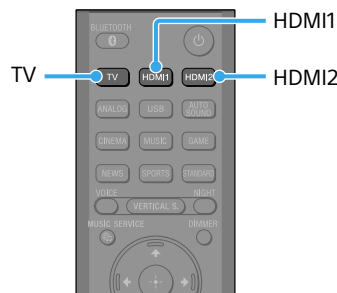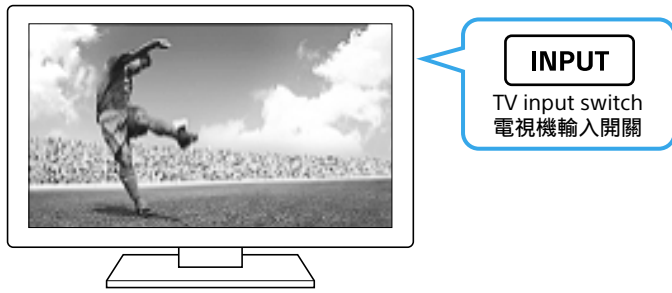

To listen to the audio of the TV

- 1 Select the desired input using the TV remote control. The screen switches to the television broadcast screen and the TV audio is output from the system. If "TV" does not appear in the front panel on the Bar Speaker, press TV on the remote control of the system to select the TV input. "TV" appears in the front panel display on the Bar Speaker.

To listen to the audio of a device that is connected to the HDMI IN jack on the Bar Speaker

- 1 Turn on the connected device. Then use the TV remote control to switch the TV input to that for the HDMI IN jack to which the system is connected.
- 2 Press HDMI1 or HDMI2 on the remote control of the system depending on the HDMI jack to which the device is connected. "HDMI1" or "HDMI2" appears in the front panel display on the Bar Speaker and the audio of the connected device is output from the system.

Note

- Depending on the order in which you connect the TV and the system, the system may be muted and "MUTING" may appear on the front panel display on the Bar Speaker. If this happens, turn on the TV first, then the system.

聆聽電視機的聲音

- 1 使用電視機遙控器選擇所要的輸入。畫面切換為電視廣播畫面，而且系統輸出電視機的聲音。如果主動式揚聲器系統的前顯示面板上沒有出現 "TV"，請按下系統遙控器上的TV以選擇電視機輸入。主動式揚聲器系統的前顯示面板上出現 "TV"。



聆聽連接到主動式揚聲器系統HDMI IN插孔的裝置之音訊

- 1 開啟連接的裝置之電源。然後使用電視機遙控器將電視機輸入切換為系統連接的HDMI IN插孔輸入。
- 2 根據連接裝置的HDMI插孔，按下系統遙控器上的HDMI1或HDMI2。主動式揚聲器系統的前顯示面板上出現 "HDMI1" 或 "HDMI2"，連接裝置的音訊會從系統輸出。

註

- 依據您連接電視機與系統的順序，系統可能會靜音，而且主動式揚聲器系統的前顯示面板上可能會出現 "MUTING"。如果發生這種狀況，請先開啟電視機，然後開啟系統。

6 Enjoying immersive surround experience 享受令人沈醉忘我的環繞體驗

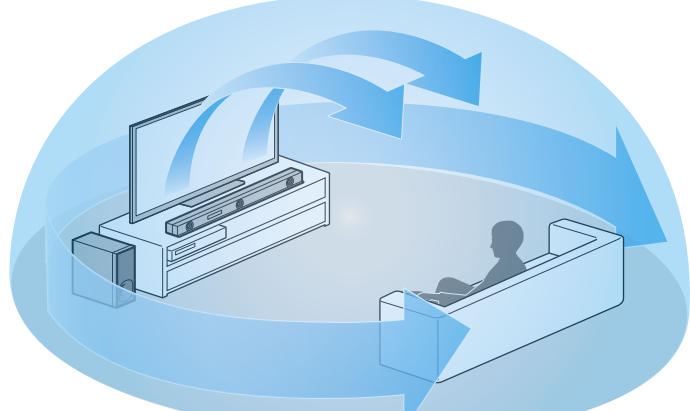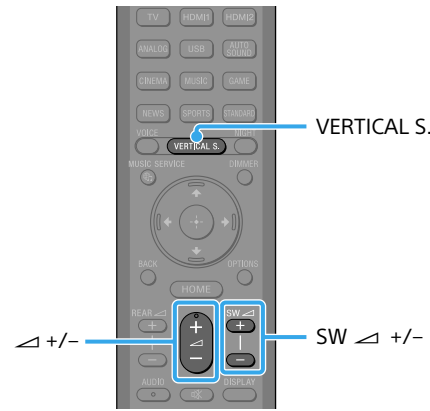

- 1 Press VERTICAL S. on the remote control of the system. Enjoy movies, music, and more with sound that flows all around the room, surrounding you from all directions.
- 2 Adjust the volume. Adjust the volume of the Bar Speaker by pressing +/- on the remote control of the system. Adjust the volume of the subwoofer by pressing SW +/- on the remote control of the system.

Note

- The surround effects differ depending on a sound source.

- 1 按下系統遙控器上的VERTICAL S.。享受電影、音樂與更多，聲音從所有方向環繞您，在整個房間內流動。
- 2 調整音量。按下系統遙控器上的 +/-，以調整主動式揚聲器系統的聲音。按下系統遙控器上的SW +/-，以調整主動式重低音揚聲器的音量。

註

- 環繞效果因音源而異。

How to display the operation screen of the system on the TV 如何在電視機上顯示系統的操作畫面

Perform Easy Setup to display the system's menu on the TV.

- 1 Press HOME on the remote control of the system. The Easy Setup screen is displayed on the TV screen. If the Easy Setup screen does not appear, use the TV remote control to switch the TV input to that for the HDMI IN jack to which the system is connected.
- 2 Select the language that you want for the system on-screen display.
- 3 Perform settings by following the on-screen instructions.

執行簡易設置，在電視機上顯示系統的選單。

- 1 按下系統遙控器上的HOME。電視機螢幕上顯示簡易設置畫面。如果沒有顯示簡易設置畫面，請使用電視機遙控器將電視機輸入切換為系統連接的HDMI IN插孔輸入。
- 2 選擇您要的系統畫面顯示語言。
- 3 按照畫面上的指示進行設定。

Troubleshooting

No TV sound is output from the system, or no picture is displayed on the TV.

- Press TV on the remote control of the system to select the TV input. "TV" appears in the front panel display on the Bar Speaker.
- Make sure that the input and output of the HDMI jacks on the system are correct.
- Disconnect the cables that are connected between the TV and the system, then connect them firmly again. Disconnect the AC power cords of the TV and the system from the AC outlets (mains), then connect them again.
- When the TV and the system are connected via an HDMI cable, enable the Control for HDMI function on the TV. For details on the TV's settings, refer to the operating instructions supplied with the TV. For more information about the Control for HDMI function, refer to the Operating Instructions (separate document).
- Check the sound setting of the TV. When the TV is set to output the sound from the TV speakers, change the setting to output the sound from the external speakers.

No picture or sound from the device connected to the system is output.

- Press one of the input buttons (TV, HDMI1, HDMI2, BLUETOOTH or ANALOG) on the remote control of the system to select the desired input. The input type that corresponds with the selected input appears in the front panel display on the Bar Speaker.
- Make sure that the input and output of the HDMI jacks on the system are correct.
- Disconnect the cables connected to the system, and then connect them again. Make sure that the cables are firmly inserted.

The TV remote control does not work.

- When the Bar Speaker obstructs the remote control sensor of the TV, the TV remote control may not work. In that case, set [IR-Repeater] to [On]. You can control the TV with the TV remote control. For details, refer to "When the TV Remote Control does not Work" in the Operating Instructions (separate document).

No sound or only a very low-level sound is heard from the subwoofer.

- Press SW +/- on the remote control of the system to increase the volume of the subwoofer.
- Make sure that the power indicator on the subwoofer is lit in green. If the power indicator does not light up, refer to "Subwoofer" of "Troubleshooting" in the Operating Instructions (separate document).

If the problem is not solved even though you have tried the measures above, refer to "Troubleshooting" in the Operating Instructions (separate document).

故障排除

系統沒有輸出電視機聲音，或是電視機沒有顯示圖像。

- 按下系統遙控器的TV，以選擇電視機輸入。主動式揚聲器系統的前顯示面板上出現 "TV"。
- 確定系統上的HDMI插孔輸入和輸出正確。
- 中斷連接電視機與系統之間的連接線，然後重新穩固連接它們。從交流電插座拔出電視機與系統的交流電源線，然後重新連接它們。
- 透過HDMI連接線連接電視機和系統時，在電視機上啟用HDMI控制功能。如需電視機設定的詳細資訊，請參閱電視機附帶的使用說明書。如需HDMI控制功能的詳細資訊，請參閱使用說明書（另外的文件）。
- 檢查電視機的聲音設定。電視機設定為從電視揚聲器輸出聲音時，請將設定變更為從外部揚聲器輸出聲音。

連接系統的裝置沒有輸出圖像或聲音。

- 按下系統遙控器上的輸入按鈕（TV、HDMI1、HDMI2、BLUETOOTH或ANALOG），選擇所要的輸入。主動式揚聲器系統的前顯示面板上出現對應所選輸入的輸入類型。
- 確定系統上的HDMI插孔輸入和輸出正確。
- 將連接系統的連接線拔出，然後重新連接。確定連接線牢固地插入。

電視機遙控器無效。

- 當主動式揚聲器系統阻礙電視機的遙控感應器時，電視機遙控器可能無效。在此狀況下，請將[IR-Repeater]設為[開]。您可用電視機遙控器控制電視機。如需詳細資訊，請參閱使用說明書（另外的文件）中的 "電視機遙控器不能操作時"。

主動式重低音揚聲器沒有發出聲音或聲音非常微弱。

- 按下系統遙控器上的SW +/-提高主動式重低音揚聲器的音量。
- 確認主動式重低音揚聲器的電源指示燈亮綠色。如果電源指示燈沒有亮起，請參閱使用說明書（另外的文件）中的 "故障排除" 的 "主動式重低音揚聲器"。

如果嘗試以上措施後問題仍然沒有解決，請參閱使用說明書（另外的文件）中的 "故障排除"。