

Reverse Door

 
5. Move shaft sleeve and pin hole plug from left side to right side.




6. Move the hinge hole covers from left side to right side.



7. Unscrew bottom hinge. Then remove the adjustable feet from both sides.

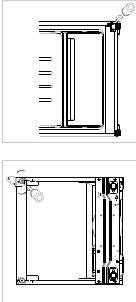

 8. Disassemble right hinge. Find our right bottom hinge from spare parts bags and fix it.

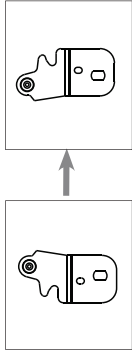

Daily Use

Using the Control Panel

 
Freezer compartment Temperature Setting

- Plug on your appliance. The internal temperature is controlled by a sensor. There are 3 settings: COLD, RECOMMENDED and COLDEST. COLD is warmest setting and COLDEST is coldest setting.
- The appliance may not operate at the correct temperature if it is in a particularly hot or if you open the door often.




Fridge compartment Temperature Setting

- 1.0 Control panel
 - 1.1 Key operation
 - B — temperature setting key.
 - 1.2 led indication light
 - L1 — show the setting of fridge compartment.
 - L2 — Power Off.
- 2.0 Operation
 - 2.1 The temperature setting is cycle change between "cold", "colder" and "coldest", when you push the "SET" key.
 - After each operation is finished for 5 seconds, the setting temperature is confirmed.
 - 2.2 Power off and power on
 - The power is switched off after press "SET" key 3 seconds.
 - Then the compressor stopped, the OFF indication light on.
 - And the power will be switched on, when you press "SET" key 3 seconds again.




Reverse Door

 
9. Split the bracket fitting the bottom hinge pin. Remove both adjustable feet. Transfer the lower door to the property position.

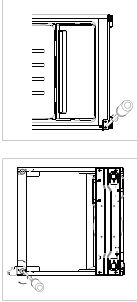

 10. Make the middle hinge reverse the direction 180°C, then transfer it to the left property position. Make the middle hinge pin in the upper hole of the lower door, then adjust the hinge.



 11. Place the upper door back on. Ensure the door is correctly reconnected and vertically set that the door is closed on all sides before finally tightening the top hinge. Then insert the top hinge and screw it to the top of unit and then fix hinge cover (in necessary bag) by screw.

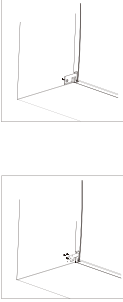

12. Fix the screw cover.



Daily Use

First Use

Cleaning the Interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and a mild soap so as to remove the typical smell of a brand new product. Wipe dry thoroughly.

Important: Do not use detergents or abrasive powders, as these will damage the finish.

Daily Use

Freezing fresh food

- The freezer compartment is suitable for freezing fresh food and storing frozen and deep-frozen food for a long time.
- The maximum amount of food that can be frozen in 24 hours is specified on the rating plate.
- The freezing process lasts 24 hours; during this period do not add other food to be frozen.

Storing frozen food

When first starting-up or after a period out of use. Before putting the product in the compartment let the appliance run at least 2 hours on the higher settings.

Important: In the event of accidental defrosting, for example the power has been off for longer than the recommended maximum, the food must be refrozen. If the food has been defrosted for more than 24 hours, it must be consumed quickly or cooked immediately and then re-frozen (after cooked).

Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in the fresh compartment or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

 
Ice-cube

This appliance may be equipped with one or more ice-cube to produce ice.

Accessories

Movable shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.



Positioning the door shelves

To permit storage of food packages of various sizes, the door shelves can be positioned as desired. The shelves are equipped with a series of runners so that the shelves can be positioned as desired.

 
Helpful hints and tips

Hints for freezing

Installation


Space Requirement

- Select a location without direct exposure to sunlight; easily.
- Select a location with level (or nearly level) flooring;
- Allow sufficient space to install the refrigerator on a flat surface;
- Allow clearance to the right, left, back and top when installing. This will help reduce power consumption and keep your energy bills lower.

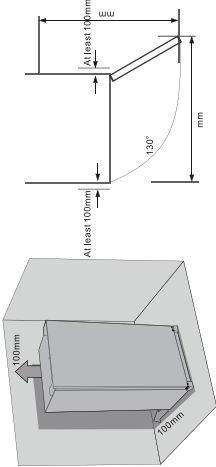

Levelling the unit

 To do this adjust the two levelling feet at front of the unit. If the unit is not level, the doors and magnetic seal alignments will not be covered properly.

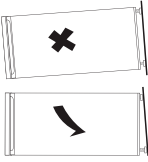

Installation

Positioning

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is to be installed in a room with a high ceiling, it should be installed with a minimum of 100mm clearance above overhanging wall units. Accurate levelling is ensured by one or more adjustable feet at the base of the appliance.

Warning! It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.

Electrical connection

The appliance must be connected to the mains power supply by a qualified electrician. The power supply cable plug is not earthed, connect the appliance to a domestic power supply. The appliance must be earthed. The power supply cable plug is provided with a 3-core cable. The appliance must be connected to the mains power supply by a qualified electrician. The manufacturer declines all responsibility if the above safety precautions are not observed. This appliance complies with the E.E.C. Directives.

Daily Use

Troubleshooting

Caution! Before troubleshooting, disconnect the power supply. Only a qualified electrician OR electrician should be called in to repair the appliance. The appliance is not to be repaired by the user. **Important!** There will be some sound/noise during normal operation (compressor or refrigerant circulation).

Problem	Possible cause	Solution
Mains plug is not plugged in or is loose	Mains plug is not plugged in or is defective	Insert mains plug.
Appliance does not work	Fuse has blown or is defective	Check fuse, replace if necessary. Mains malfunctions are to be corrected by an electrician.
	Socket is defective	Check socket, replace if necessary.
	Temperature is not properly set	Please look in the initial Temperature Setting section.
	Door was opened for an extended period.	Open the door only as long as necessary.
The food is too warm.	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Appliance cools too much	Temperature is set too cold.	Turn the temperature regulation knob to a warmer setting temporarily.
	Appliance is not level.	Re-adjust the feet.
Unusual noises	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the appliance is touching another part of the component out of the way.	If necessary, carefully bend the component out of the way.
Water on the floor	Water drain hole is blocked.	See the Cleaning and Care section.
Side panels are hot	It's normal. Heat exchange in the side panels	Take gloves to touch side panels if need.

If the malfunction shows again, contact the Service Center.