# 30cm 2 Burner S.S Gas Hob

# COOKTOP

PRODUCT CODE: ECT30GX



# INSTALLATION DIAGRAM

## FEATURES:

- + Stainless steel cooktop
- + 2 gas burners + front knob controls
- One piece hob for ideal cleaning
- + 1 touch electric ignition
- Non-slip trivets
- + Flame failure safety device
- + Natural gas or LPG (jets included)

# 480 260

eurocooking

### **IDEAL CLEANING**

Cook top surface all in a "one piece hob setting" which makes cleaning the cooktop a simple, non-time consuming activity.

### ONE TOUCH ELECTRONIC IGNITION

This gas cooktop uses a one touch electronic ignition system. Simply push down the knob and turn and the flame will ignite automatically.

### **CAST IRON TRIVETS**

Non-slip, cast iron trivets are standard with this cooktop and removable for easy cleaning.

### FLAME FAILURE SAFETY DEVICE

The flame failure device is a safety mechanism which ensures the gas is automatically turned off in the case of the flame extinguishing.

### SPECIFICATIONS:

| Electrical Requirements    | Cooktop is supplied with 10 amp plug & cord. |
|----------------------------|--|
| Gas Rated Pressure:        |  |
| - LPG                      | 2.75 kPa                                     |
| - Natural                  | 1.00 kPa                                     |
| Gas Burners:               |  |
| Rapid Gas Burner (Rear)    | 10.8 MJ/h                                    |
| - Auxiliary Burner (Front) | 3.60 MJ/h                                    |
| Weight                     | 8.5 kg net / 10.5 kg gross                   |
| Product Dimensions         | 300mm x 520mm x 100mm                        |
| Barcode                    | 9347726024820                                |

### CLEANING AND MAINTENANCE

- Cleaning operations must only be carried out when the appliance is completely cool.
- + Clean the appliance regularly, preferably after each use
- Abrasive cleaners or sharp objects will damage the appliance surface; you should clean it using water and a little washing up liquid

### SAFETY INFORMATION

- Do not use this appliance if it comes in contact with water. Do not operate this appliance with wet hands
- The heating and cooking surfaces of the appliances become hot when in use, take all due precautions.
- Unstable pans should not be used on the appliances as they can cause an accident by tipping or spillage.
- + Never leave the appliance unnattended when cooking.
- + Please refer to the manual for more information

