



**24 BOTTLE
WINE COOLER**

CONTENTS

02	Package Contents
02	Technical Specifications
03	Important Safety instructions
06	Assembly and parts
08	Instructions
09	Cleaning and Maintenance
10	Tips
11	Wiring Diagram
11	Troubleshooting

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

PACKAGE CONTENTS

1 x Sheffield 24 Bottle Wine Cooler
1 x Instruction Manual
1 x Warranty Card

Confirm all parts before disposing of carton. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

TECHNICAL SPECIFICATION

Model:	PLA2400
Rated Voltage:	220-240V~, 50Hz
Power Consumption:	65W
Gross Volume:	70L (24 Bottles)
Climate Class:	N; SN; St; T
Power Consumption:	0.488 kWh/24h
Min/Max Temperature:	5°C - 18°C
Working Environment:	7°C - 25°C
Max Temp Difference:	>15°C
Size (W x H x D):	430 x 450 x 740mm
Net Weight:	21.3kg

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Page 2



IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Carefully read this manual before using this appliance.

- Ensure that you know how the appliance functions and how to operate it.
- Maintain the appliance in accordance with the instructions to ensure that it functions properly.
- Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
- The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Do not use this appliance if it has been dropped or damaged in any way, or if the supply cord is damaged.

Intended Use

- Indoor domestic use only: this appliance is intended for indoor domestic use only. Do not use it outdoors. Do not use in moving vehicles or boats.
- Intended Purpose: Do not use the appliance for anything other than its intended purpose, and only use it as described in this manual
- Accessories: Do not use any accessories with the appliance that are not supplied or specifically recommended.

WARNING: Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer.

Supply Cord and Plug

Always unplug from mains supply when not in use. Do not abuse or damage the power cord. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Ensure that the socket is located near the appliance and easily accessible in order to quickly unplug the appliance from the mains in the event of an operating problem. Always pull out the plug from the socket (pull on the plug, not the cable)

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Page 3

Never bend the mains lead and never wind it around the appliance as this may lead to cable breakages. Risk of electrocution!

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Avoid the use of an extension cord as this may overheat and cause a risk of fire. Do not run cord under carpeting and do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.

Earth Safety

This appliance must be earthed. Only connect to a suitably earthed 220-240V ~ 50Hz supply socket.

Use and Environment

Ensure that the appliance is placed on a flat, stable, slip-free and dry surface. Do not cover the appliance while it is operating. Ensure that there is sufficient clearance and that a safe distance to walls, ceilings and other objects are kept.

To avoid a hazard due to instability, the unit must be fixed in accordance with the instructions.

The air intake and outlet openings must never be covered or blocked. Clean the ventilation slots regularly to keep them free of dirt and prevent the openings from clogging.

Do not place any objects on the appliance.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Supervision

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Damaged or Dropped

Always inspect your appliance before use. Check parts are correctly attached. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water. Return it to an authorised service dealer for examination and repair.

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Water

Do not immerse the appliance or its supply cord in water. Do not use with wet hands or use in damp situations. Do not use near a laundry, bath, shower or swimming pool.

If the appliance does fall into water, first remove the plug from the mains socket before lifting the appliance out of the water! Do not turn the appliance on again until it has been checked at an approved service point. The same applies if the mains lead or appliance is damaged, or if the appliance has fallen on the floor. Risk of electrocution!

Do not operate near flammable gas or fumes.

Do not use Wine Cooler in any other orientation other than upright as shown in this manual.

Disposal

WARNING: Risk of child entrapment.

Junked or abandoned appliances are dangerous, even if they "just sit around in the garage a few days"

- Before you throw away your wine cooler; take the door off, leaving the shelves in place so that children may not climb inside easily.
- Never allow children to operate, play with or crawl inside the appliance.

Environment Friendly Disposal

Old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out Wheeled Bin symbol on the product reminds you of your obligation that when you dispose of the appliance, it must be separately collected. Contact your local authority for information concerning the correct disposal of your appliance.

Refrigerant: Flammable Refrigerant Gas!

WARNING: Do not damage the refrigerant circuit.

DANGER - Risk of fire or explosion. Flammable refrigerant used. DO NOT use mechanical devices to defrost Beverage cooler. DO NOT puncture refrigerant tubing.

To be repaired only by trained service personnel.

Consult repair manual / owner's guide before attempting to service this product. All safety precautions must be followed.

Dispose of property in accordance with federal or local regulations. Flammable refrigerant used.

 
AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

CAUTION - Risk of fire or explosion due puncturing of refrigerant tubing. Follow handling instructions carefully. Flammable refrigerant used.

ASSEMBLY AND PARTS

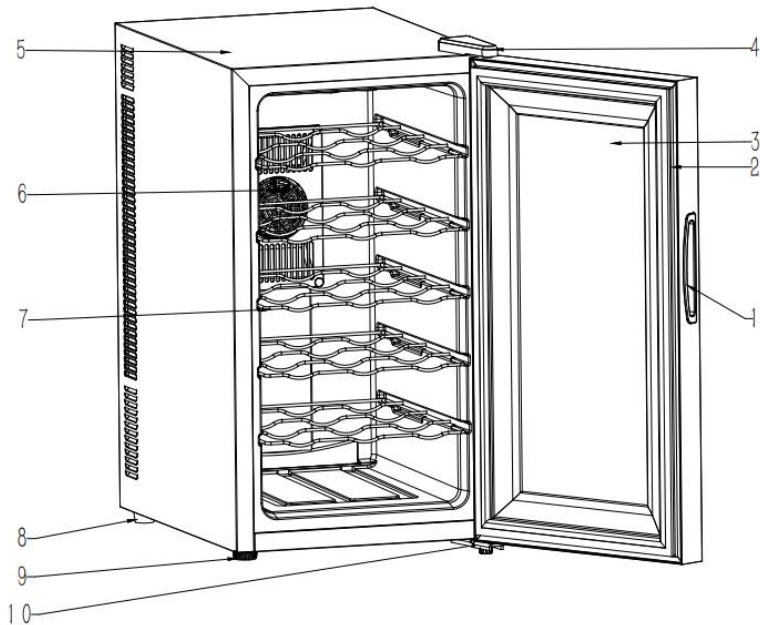

- | | |
|---------------------|------------------------|
| 1. Handle | 6. Cold Sink Fan Cover |
| 2. Gasket | 7. Shelf (5 pce) |
| 3. Glass Door | 8. Rubber Leg |
| 4. Upper Door Hinge | 9. Levelling Leg |
| 5. Cabinet | 10. Bottom hinge |

Before First Use

1. Remove all packaging materials and safely dispose of.
2. Remove any stickers or labels from the appliance. (Except the rating label!).
3. Wipe the outside of the appliance with a moist cloth and dry with a towel.

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Installation and Clearance

- This appliance is designed to be free standing only, and should not be recessed or built-in.
- Place your unit on a floor that is strong enough to support the unit when it is fully loaded. To level your unit, adjust the levelling legs at the bottom of the unit.
- This appliance is not designed to be installed inside of a cabinet where the front is covered by any type of door.
- Allow 10 cm of space between the top, the back and sides of the wine unit, which allows the proper air circulation to cool the compressor and condenser.
- Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the unit into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorised Products service centre.
- After plugging the Wine Chiller into a wall outlet, allow the unit to cool down for 2-3 hours before placing any items in the compartment.

Remark: Please remember to keep a small amount of water in the cabinet to keep the humidity.

WARNING! DO NOT COVER THE APPLIANCE

WARNING! DO NOT BUILD THE APPLIANCE INTO CABINETS

NOTE:

When you use the wine cooler for the first time or restarting the wine cooler after having been shut off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LCD readout. This is normal and it is due to the length of the activation time. Once the wine cooler is running for a few hours everything will be back to normal.

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm






INSTRUCTIONS

Power


1. Connect the supply plug to a suitable 220-240V AC 50/60Hz power outlet and switch on.
2. After plugging the appliance, allow the unit to cool down for 2-3 hours before placing beverage into the cooler compartment.


Setting the Temperature.



- Your Wine Cooler has been equipped with an “automatic” control panel lock, which will activate 20 seconds after the last time a button has been touched.
- Push the  button simultaneously for 2 seconds to unlock the control panel. You will hear a “BEEP” sound to alert you that the control is now active.
- You can set the temperature as you desire by pushing the  or  button on the control pane. The temperature that you desire to set will increase 1°F or 1°C if you push the  button once, on the contrary the temperature will decrease 1°F or 1°C if you push the  button once.
- When you store mostly red wines, the temperature needs to be set at between 14 - 18°C (57° - 65°F).
- When you store mostly white wines, the temperature needs to be set at between 10 - 14°C (49° - 58°F).

Interior Light

You can turn the interior light ON or OFF by pushing the button marked with the “Light” symbol. 

The light will turn off automatically after 10 minutes. You have to push the button marked with the “Light”  symbol again and the light will turn back on.

°F/°C

To change between °F and °C press and hold the  button

Storage Capacity

 
You can place 24 standard bottles in the PLA2400.

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Many bottles may differ in size and dimensions. As such the actual number of bottles you may be able to store may vary. Bottle capacities are approximate maximums when storing traditional Bordeaux 750ml bottles and include bulk storage. Oversized bottles may have an impact on the number of bottles stored in the wine cooler.

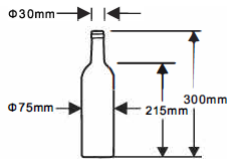

Moisture

High build-up of moisture on the interior or exterior is not unusual during periods of high humidity. Simply wipe moisture and also minimise the times that the door is opened. Do not leave the door open longer than is necessary.

Energy Saving Tips

- The unit should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.
- Overloading the unit forces the compressor to longer.
- Be sure to wipe bottles dry before placing them in the unit. This cuts down on frost build-up inside the unit.
- Unit storage area should not be lined with aluminium foil, wax paper, or paper towelling. Liners interfere with cold air circulation, making the unit less efficient.
- Remove as many items as needed at one time, and close the door as soon as possible.

CLEANING and MAINTENANCE

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Before Cleaning

- When not in use or before cleaning, always disconnect the appliance from the mains supply.

Care and Cleaning

- Wipe the main outer body with a hot damp cloth and mild cleaning agent only, dry with a dry towel, and do not immerse this appliance in any liquid. Do not put water into the appliance.
- Wipe the inside of the appliance with a warm damp cloth.
- Wash the racks in hot soapy water, dry with a dry towel.
- Spray and wipe the door with a suitable glass cleaner.

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

NOTE: Never use rough scouring pads or abrasive cleansers on any plastic or metal parts as the surface may be damaged.

TIPS

Wine Storage Temperature Guide

Important! Wine is a perishable beverage and storage conditions can impact greatly on the overall taste, quality and aroma. To achieve the best possible taste wine needs to be stored and served at the right temperature.

Stored at the wrong temperature, or extremes of temperature, will damage the quality of the wine. Stored at too high a temperature ages wine prematurely. Stored at too cold a temperature delays maturation and can result in deposits in the wine. The old adage 'serve reds at room temperature and refrigerate whites' doesn't hold true in reality. If you serve a wine too cool, the flavour will be disguised and if you serve wine too hot alcohol becomes the dominant taste.

Also important to the overall quality of the wine is fluctuations in temperatures. Wine needs to be kept at relatively constant temperatures. Serving a wine at the right temperature is a hard task as you have to take into account several elements like: the presence of tannins, the structure of the wine, its age, and the style of the wine. Left over wine in a bottle will also last longer when kept at the correct temperature.

The below table gives an indication of suitable serving temperatures for the main varieties available. Alter to suit your taste.

15 - 18°C	Syrah, Pinot Noir, Cabernet Sauvignon, Merlot, Malbec
14 - 17°C	Pinot Noir, Cabernet Sauvignon, Merlot, Malbec
10 - 12°C	Rose wines
10 - 14°C	Chardonnay, Chenin Blanc
10 - 13°C	Riesling, Sauvignon Blanc, Pinot Gris
12°C	Long term wine storage for both whites and reds


AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Page 10

 Wiring Diagram

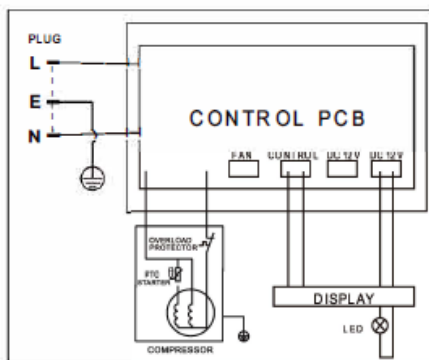

Troubleshooting

Problem	Possible Cause
Unit does not operate.	<ul style="list-style-type: none"> Not plugged in. The circuit breaker tripped or a blown fuse.
Turns on and off frequently.	<ul style="list-style-type: none"> The room temperature is hotter than normal. A large amount of bottles has been added to the unit. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not properly seal. The unit does not have the correct clearances.
Vibrations	<ul style="list-style-type: none"> Check to ensure that the unit is level.
The unit seems to make too much noise.	<ul style="list-style-type: none"> The rattling noise may come from the flow of the refrigerant. this is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your unit. Contraction and expansion of the inside walls may cause popping and cracking noise. The unit is not level.
The door will not close properly.	<ul style="list-style-type: none"> The unit is not level. The door was reversed and not properly installed. The gasket is dirty or bent. The shelves, bins, or baskets are out of position.

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4:30pm