 


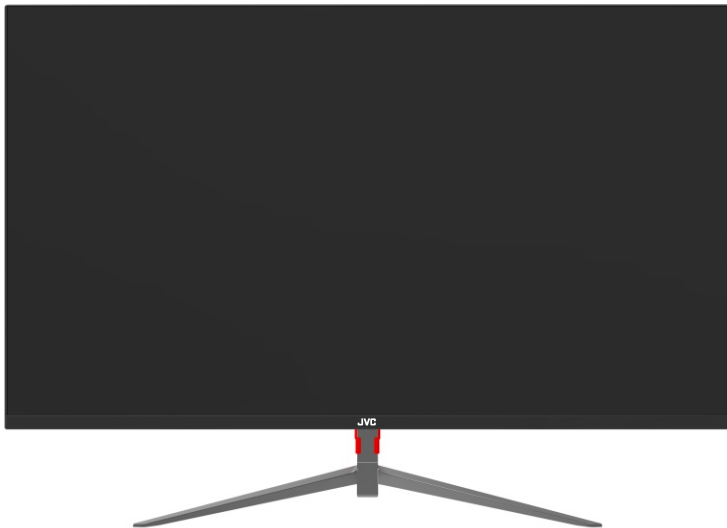

LED Monitor Users Guide

LT-GN27225A 68.5 cm (27") class



HDMI TM
HIGH-DEFINITION MULTIMEDIA INTERFACE

Content

Warning and Precautions	2-4
Base Installation Instructions	5
Accessories	6
Product Overview	7
Ports	8
Button Functions	9
Operation Menu Functions (OSD)	10-11
Standard Signal Mode Table	12-13
Technical Features	14
Troubleshooting	15

Important Notice:

Please retain original packaging for Warranty purposes. Please return with ALL supplied accessories.

Supplier reserves the right to make changes at any time without prior notice.

Warning and Precautions

	Warning Risk of electric shock, do not open.	
Warning: To avoid the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION: TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS UNIT.

1. Operate only from the power source specified on the unit.
2. Avoid damaging the AC plug and power cord.
3. Avoid improper installation and never position the unit where good ventilation is unattainable.
4. Do not allow objects or liquid to fall into the cabinet openings.
5. In the event of mechanical damage, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

Changes or modifications not approved by JVC could void the warranty.

- * When you don't use this monitor for a long period of time, be sure to disconnect the power plug from the AC outlet for your safety.
- * To prevent electric shock do not use this power plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Do not attempt to service the product yourself

Caution

To prevent electrical shock, do not open the monitor casing.
There are no user serviceable parts inside.
Please refer to qualified service personnel for repairs.

WARNINGS

- Ensure at least a 10 cm gap around the product for ventilation. An internal temperature rise may cause a fire and damage the product.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, cloths, curtains, etc.
- When installing the product on a cabinet or shelf, make sure that the bottom edge of the front of the product is not protruding.
- Do not install the product within the reach of young children.
- Do not place objects containing liquid (vases, pots, bottles, etc.) or metallic objects on top of the product.
- If the product falls or the exterior is damaged, power off the product, remove the power cord, and contact Customer Service.

Warning and Precautions

 
- Do not place the power cord or product near heat sources such as direct sunlight, heat, or a hot object such as a stove.
- The monitor must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the unit.
- Always handle the monitor with care when moving it. Don't put any pressure on the screen as it is fragile.
- Do not install the product in a vehicle or a place exposed to dust, moisture (water drips, etc.), oil or smoke.
- Installing the product in an unusual place (a place exposed to a lot of fine dust, chemical substances, extreme temperatures or a significant presence of moisture, or a place where the product will operate continuously for an extended period of time) may seriously affect its performance.
- If the product generates a strange noise, a burning smell or smoke, remove the power cord immediately and contact Customer Service.
- Looking at the screen too close for an extended period of time can deteriorate your eyesight.
- Rest your eyes for at least 5 minutes for every 1 hour of product use.
- Disconnect the power cord from the power socket if you do not plan on using the product for an extended period of time (vacation, etc.).
- To move the product, first disconnect all the cables from it, including the power cable.

Base Installation Instructions

The Stand Base must be securely installed as shown below, unless using an external mount.
VESA100 x100mm ,M4 Screw.
Place the monitor face down on a flat surface, onto a towel or blanket to avoid damaging the screen.


1

Align the screw holes on the back of the monitor with the ones on the Support Pole and use the screws (4 pieces PM4 x 5mm) to attach the Pole to the monitor.

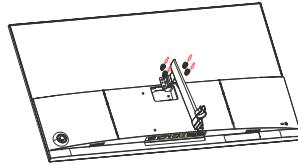


2

 Fix the Cover over the Screw Compartment.

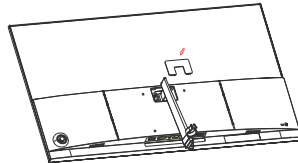


3

 Attach the Base to the Support Pole using the screw (1 piece PM4 x 10mm) and attach the Rubber Pad as shown.


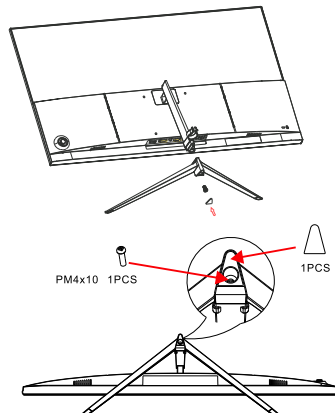


4

 Assembly is complete. Monitor can now be placed on a stable, flat surface.

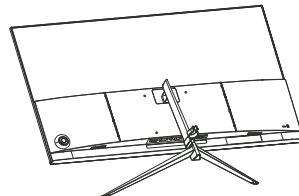



Accessories

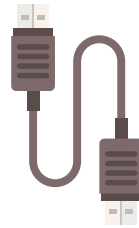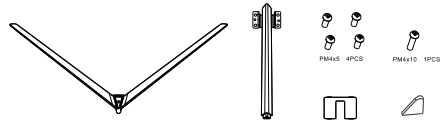  

ACCESSORIES:

- | | |
|--------------------------------------|----|
| 1. Monitor | x1 |
| 2. Stands (1x Support Pole, 1x Base) | x2 |
| 3. Screws | x5 |
| 4. Decorative Cover | x1 |
| 5. Rubber Pad | x1 |
| 6. User Manual | x1 |
| 7. DP Cable | x1 |
| 8. Power Adaptor | x1 |

  
Product Overview

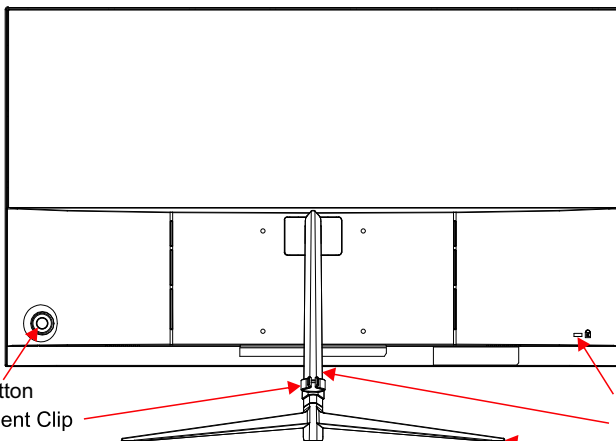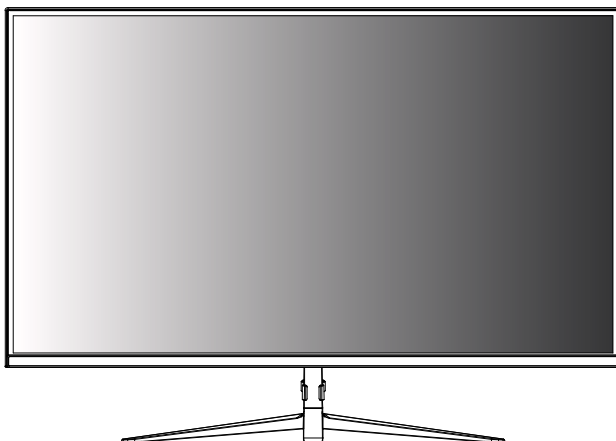

Multifunction Button
Cable Management Clip


Anti theft lock mounting hole
Support Pole
Base

 Ports

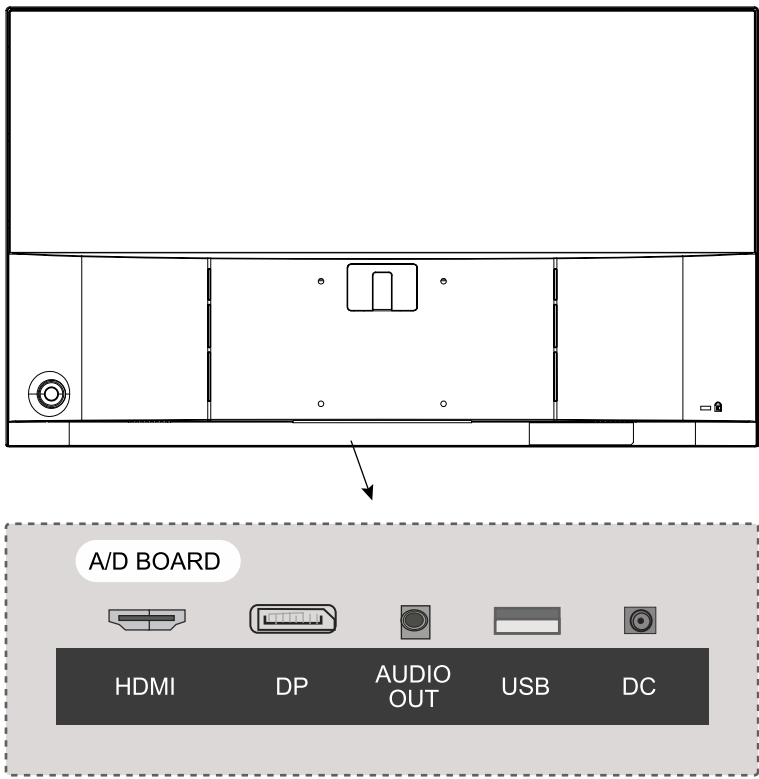

HDMI	Connect to a device using an HDMI cable.
DP(DISPLAY PORT)	Connect to a PC or other source device using the provided Display Cable.
AUDIO OUT	Connect to an audio output device such as headphones or earphones.
USB	DC 5V, 1A power output for charging devices
DC 12V/4A	Connect to the AC/DC adapter.

 Button Functions

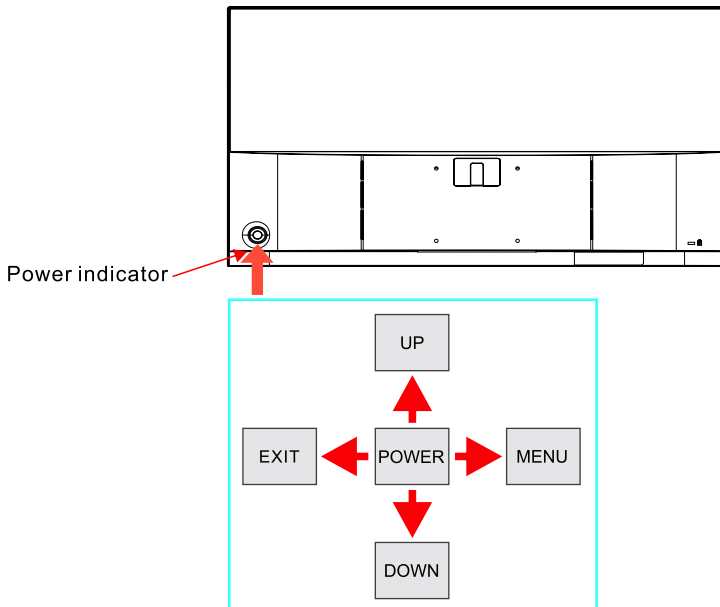

Note: The Multifunction Button has several functions. Press it or move to the correct direction as shown to perform the desired function.

(1)Power

Press and hold for a few seconds to turn the monitor on or to switch it to shutdown status.

(2)Power Indicator

When the monitor is on, the indicator light will be blue. When the monitor is in Standby mode, the indicator light will be red and when the monitor is off, the indicator light will be off.

(3) EXIT

Push to the left to select input sources or to exit the current menu.

(4)DOWN

Select and adjust the OSD items (Decrease the value).

(5)Menu

 
Push to the right to bring up the OSD menu.

(6) UP

Select and adjust the OSD items (Increase the value).

1. Push to the right to access the main menu.
2. Push up or down to scroll through the main function options.
3. Push to the right again to enter the selected sub-menu. Push up or down to adjust the desired options.
4. Push to the left to return to the main menu.

Operation Menu Functions (OSD)

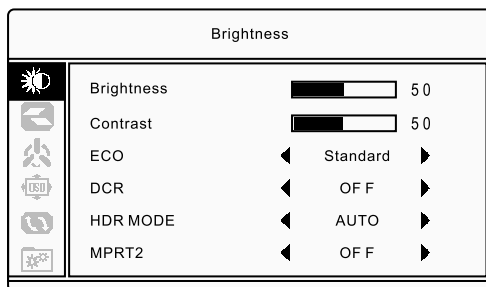

Main Menu	Sub-Menu	Option	Description
Brightness	Brightness	0-100	Adjust display brightness
	Contrast	0-100	Adjust display contrast
	ECO	Standard, RTS, FPS, TEXT, Movie, Game	Set vertical mode
	DCR	On/Off	Turn DCR (Dynamic Contrast Ratio) function On/Off
	HDR Mode	AUTO, OFF, 2048	Turn HDR function auto/off/2048
	MPRT2	On/Off	Turn MPRT2 function On/Off
Image.Setup	H.Position	0-100	Adjust the horizontal position
	V.Position	0-100	Adjust the vertical position
	Clock	0-100	Adjust the clock setting
	Phase	0-100	Adjust the clock phase setting
	Aspect	16:9, 4:3	Set aspect ratio
	Low Blue Light	0-100	Adjust the Low Blue Light setting
Color Setup	Color Temp	Warm, Cool, User	Adjust color temperature
	Red	0-100	Customize RGB components
	Green	0-100	
	Blue	0-100	

Operation Menu Functions (OSD)

OSD Setup	Language	English,Français, DEUTSCH,简体中文,Italiano,ESPAÑOLO,PORTUGUESE,TURKCE,POLSKI,NEDERLANDS,日本語, 한글	Set OSD language
	OSD H.Positon	0-100	Adjust the horizontal postition
	OSD V.Positon	0-100	Adjust the vertical postition
	OSD TIMEOUT	0-60	Set how long the OSD remains
	TRANSPARENCY	0-100	Adjust the OSD transparency value
RESET	RESET	N/A	Reset OSD settings to factory default; press Menu button to confirm
Other Setup	Signal Source	DP/HDMI	Set input source
	MUTE	On/Off	Turn MUTE function On/Off
	Volume	0-100	Adjust Volume
	Freesync	On/Off	Turn Freesync On/Off. Press menu to confirm
	OD	On/Off	Turn Over Drive function On/Off

Standard Signal Mode Table

Synchronization	Horizontal Frequency	30 – 81 kHz
	Vertical Frequency	50 – 75 Hz
Resolution	Optimum Resolution	1920 x 1080 @ 60 Hz
	Maximum Resolution	1920 x 1080 @ 60 Hz

If a signal that belongs to the following standard signal modes is transmitted from your PC, the screen will automatically be adjusted. If the signal transmitted from the PC does not belong to the standard signal modes, the screen may be blank even though the power LED turns on. In such a case, change the settings according to the following table by referring to the graphics card user manual.

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
IBM, 720 x 400	31.469	70.087	28.322	-/+
VESA, 640 x 480	31.469	59.940	25.175	-/-
MAC, 640 x 480	35.000	66.667	30.240	-/-
VESA, 640 x 480	37.861	72.809	31.500	-/-
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 800 x 600	35.156	56.250	36.000	+/+
VESA, 800 x 600	37.879	60.317	40.000	+/+
VESA, 800 x 600	48.077	72.188	50.000	+/+
VESA, 800 x 600	46.875	75.000	49.500	+/+
MAC, 832 x 624	49.726	74.551	57.284	-/-
VESA, 1024 x 768	48.363	60.004	65.000	-/-
VESA, 1024 x 768	56.476	70.069	75.000	-/-
VESA, 1024 x 768	60.023	75.029	78.750	+/+
VESA, 1152 x 864	67.500	75.000	108.000	+/+
MAC, 1152 x 870	68.681	75.062	100.000	-/-
VESA, 1280 x 720	45.000	60.000	74.250	+/+

Standard Signal Mode Table

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
VESA, 1280 x 800	49.702	59.810	83.500	-/+
VESA, 1280 x 1024	63.981	60.020	108.000	+/+
VESA, 1280 x 1024	79.976	75.025	135.000	+/+
VESA, 1440 x 900	55.935	59.887	106.500	-/+
VESA, 1600 x 900	60.000	60.000	108.000	+/+
VESA, 1680 x 1050	65.290	59.954	146.250	-/+
VESA, 1920 x 1080	67.500	60.000	148.500	+/+
VESA, 1920 x 1080	177.7	120	279.8	+/+
VESA, 1920 x 1080	213.2	144	335.7	+/+
VESA, 1920 x 1080	244.3	165	384.7	+/+

— Horizontal Frequency

The time required to scan a single line from the left to the right side of the screen is called a horizontal cycle. The reciprocal number of a horizontal cycle is called horizontal frequency. Horizontal frequency is measured in kHz.

— Vertical Frequency

Repeating the same picture dozens of times per second allows you to view natural pictures. The repeat frequency is called "vertical frequency" or "refresh rate" and is indicated in Hz.

— This product can be set to only one resolution for each screen size to obtain the optimum picture quality due to the nature of the panel. Using a resolution other than the specified resolution may degrade the picture quality.

To avoid this, it is recommended that you select the optimum resolution specified for your product.

— Some resolutions listed in the table above may not be available depending on graphics card specifications.

Technical Features

Display	68.5 cm (27")
Aspect Ratio	16:9
Resolution	1920X1080@165Hz
Brightness	250 cd/m ²
Contrast	3000:1 Dynamic Contrast
Viewing Angle	178 °(H); 178 °(V)
Menu OSD	Multi-Language
Input Terminals	HDMI DP AUDIO-OUT USB DC
Power	DC 12V/4A
Consumption	≤ 48W
Unit Size(incl.stand)	614x179x435mm
Net Weight	3.5kg
VESA	100x100mm

Troubleshooting

Failures	Possible solutions
The power indicator does not work.	• Make sure the power is switched on. • Make sure the power cord is connected. • Press the Power Button to turn on the monitor.
The plug-and-play function does not work.	• Make sure the PC matches the plug-and-play function. • Make sure the display card matches the plug-and-play function. • Make sure the DP or HDMI cable is properly connected.
Dim image.	• Adjust the brightness and contrast.
Unsteady image or picture ruffling.	• Some nearby electric equipment may cause electronic interference.
The indicator lamp of the power works (flickers) but there is no image on the display.	• Check to see whether the power of the computer is switched on. • Check to see if the computer's graphics card is inserted correctly. • Check to see if the monitor's signal cable is properly connected to the computer. • Check the plug of the monitor's signal cable and confirm that each pin is not deformed. • Tap any key on keyboard of PC to power up if PC is in standby mode. • Look at power indication on PC keyboard and confirm whether the computer is working correctly.
Colour loss (red, green, blue)	• Check the signal cable of the display and confirm that each pin is not curved.
Chromatic aberration in the picture (the white colour doesn't look white)	• Adjust the RGB colour or reselect the colour temperature



Register your product at jvctv.com.au/warranty-registration