

Operating instructions



Vacuum cleaners

To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions before using it for the first time.

These operating instructions apply to standard models S 6710 - S 6790 as well as to Special Edition models which are distinguished by names rather than numbers.

en - AU

Contents

Caring for the environment	3
Description of the appliance	4
Warning and Safety instructions	6
Preparing for use	12
Using the accessories supplied	16
Use	17
Mains connection cable	17
Switching on and off	18
Selecting the suction power	19
Interrupting operation	21
Setting down, transportation and storage	22
ParkSystem for pauses in vacuuming	22
ParkSystem for storage	22
Maintenance and care	23
Purchasing new dustbags and filters	23
Ordering the correct dustbags and filters	23
When to change the dustbag	24
Replacing the dustbag	25
When to change the exhaust filter	26
Correctly replacing the Air Clean filter	27
Replacing the Active Air Clean or Active HEPA filter	28
Replacing one type of exhaust filter with another	29
When to change the dust compartment filter (for motor protection)	30
Correctly changing the dust compartment filter	30
When to change the battery in the radio frequency operated handle	31
How to change the battery in the radio frequency operated handle	31
When to change the thread lifters	32
Correctly replacing the thread lifters	32
Cleaning and care	33
Problem solving guide	34
After sales service / Electrical connection	35
Optional accessories	36

Disposal of packing material

The packing material protects the vacuum cleaner from transport damage. The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Rather than just throwing these materials away, please ensure they are offered for recycling. Sort packing materials for disposal according to the type of material (e.g. plastics or cardboard).


Disposing of the dustbag and filters

These are made from environmentally friendly materials, and can be disposed of with the normal household waste, as long as they have been used exclusively for general household dust.

Disposing of your old appliance

Before disposing of your old appliance, remove the dustbag and filter and dispose of them with the normal household waste.


Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

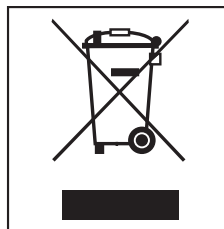

Please dispose of it at your local community waste collection/recycling centre, or contact your Miele Vacuum Cleaner Specialist for advice.

Ensure that your old appliance presents no danger to children while being stored for disposal.

Description of the appliance

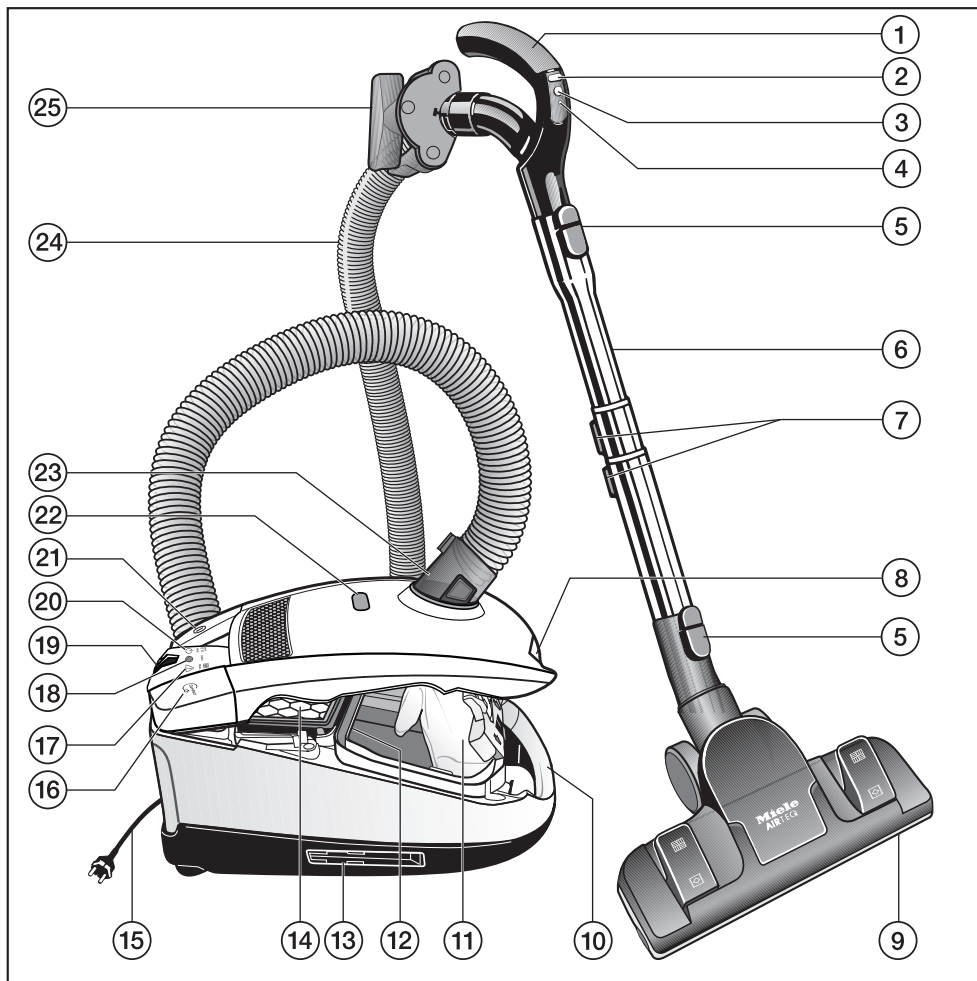







The illustration shows the maximum number of features available on these Miele vacuum cleaners.

Certain models are supplied as standard with the following accessories which are not illustrated on this page.

- Classic Allergotec floorhead
- TurboBrush

These floorheads and brushes are supplied with their own operating instructions.

Description of the appliance

- ① Handle
- ② Suction power selector + / -
- ③ Stand-by button for pauses in vacuuming 
- ④ LED
- ⑤ Release button
- ⑥ Telescopic wand *
- ⑦ Slide controls for the telescopic wand *
- ⑧ Dust compartment release button
- ⑨ Floorhead *
- ⑩ Carrying handle
- ⑪ Dustbag
- ⑫ Dust compartment filter (for motor protection)
- ⑬ ParkSystem for storage (on either side of vacuum cleaner)
- ⑭ Exhaust filter *
- ⑮ Mains connection cable
- ⑯ Foot switch for automatic cable rewind 
- ⑰ Overheating warning light 
- ⑱ Exhaust filter change indicator (Reset button) 
- ⑲ ParkSystem for pauses in vacuuming
- ⑳ Stand-by indicator 
- ㉑ On/Off foot control 
- ㉒ Dustbag change indicator
- ㉓ Hose connector
- ㉔ Suction hose
- ㉕ VarioClip

Those features marked * depend on the model, and may vary or not be available on your model.

Warning and Safety instructions

This appliance conforms to current safety requirements. Improper use of the appliance can, however, present a risk of both personal injury and material damage.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before installation and before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Keep these instructions in a safe place and ensure new users are familiar with the content. Pass them on to any future owner.

Correct application

► This vacuum cleaner is designed for domestic use and for use in similar environments by guests in hotel or motel rooms, bed & breakfasts and other typical living quarters. This does not include common/shared facilities or commercial facilities within hotels, motels or bed & breakfasts.

► This appliance is not suitable for outdoor use.

► This vacuum cleaner must only be used to vacuum dry floor surfaces. Do not use on people or animals. Any other usage, modification or alteration is at the owner's risk and could be dangerous.

Warning and Safety instructions

► This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Safety with children

► Supervise children whilst you are using the vacuum cleaner. This vacuum cleaner is not a toy! To avoid the risk of injury, keep children well away and do not allow them to play with it or to use the controls.

► Older children may only use the appliance when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

► Cleaning and maintenance work may only be carried out by older children under the supervision of an adult.

► The batteries for the radio controls in the handle must be kept out of the reach of children.

Technical safety

► Ensure that the connection data on the data plate (voltage and frequency) match the mains electricity supply. This data must correspond in order to avoid the risk of damage to the appliance.

Warning and Safety instructions

- ▶ The wall socket must be protected against short circuit by a delay fuse 16 A or 10 A.
- ▶ Before installation, check the appliance for visible signs of damage. Do not use a damaged appliance.
- ▶ Repairs should only be carried out by a Miele authorised service technician. Repairs and other work by unqualified persons could be dangerous and will invalidate the warranty. The manufacturer cannot be held liable for unauthorised work.
- ▶ Do not use the vacuum cleaner if the mains cable is damaged. If the cable is damaged, it must be replaced together with a complete cable rewind. For safety reasons, this must only be done by the Miele Service Department or by a Miele authorised service technician.
- ▶ Do not pull or carry the vacuum cleaner by the cable and be careful not to damage the cable when withdrawing the plug from the socket.
Keep the cable away from sharp edges and do not let it be squashed, for example, under a door.
Avoid running the vacuum cleaner over the cable.
This could damage the cable, plug or socket and pose a safety hazard.
- ▶ There is a metal inlay underneath the handle which is designed to avoid the unpleasant effects of electrostatic discharges. Please make sure that you keep your hand in constant contact with this metal strip during vacuuming.

Warning and Safety instructions

- ▶ It is important to switch off the vacuum cleaner after use, before changing any accessories and before any cleaning or maintenance. Switch off at the wall socket and remove the plug.
- ▶ Do not let the vacuum cleaner get wet. Clean only with a dry cloth, slightly damp cloth or suitable proprietary cleaner when disconnected from the mains supply.
- ▶ While the vacuum cleaner is under warranty, repairs should only be undertaken by a service technician authorised by Miele. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Correct use

- ▶ To avoid the risk of damage, do not use the vacuum cleaner without the dustbag, dust compartment filter and exhaust filter in place.
- ▶ If a dustbag is not inserted, the dust compartment cover cannot be closed. Do not force it.
- ▶ Do not vacuum up any liquids or damp dirt. Wait until any freshly cleaned or shampooed carpets or floor coverings are completely dry before attempting to vacuum.
- ▶ Do not vacuum toner dust. Toner, such as that used in printers and photocopiers, can conduct electricity.

Warning and Safety instructions

► Do not vacuum up anything which has been burning or is still glowing e.g. cigarettes, ashes or coal, even if apparently extinguished.

► Do not vacuum up any inflammable or combustible liquids or gases and do not vacuum in areas where such substances are stored.

► Floor attachments, accessories and tubes must not be used at head level to avoid the risk of injury, e.g. to eyes and ears.

► Important information on handling the batteries from the radio controls in the handle:

- Do not short circuit or recharge batteries, or throw them into a fire. Danger of explosion!
- Disposing of batteries: Remove the batteries from the handle and dispose of them at a local battery recycling bin. Do not dispose of them with the normal household waste.

Accessories


- ▶ To avoid the risk of injury when vacuuming with a Miele TurboBrush, do not touch the rotating roller brush.
- ▶ It is not advisable to vacuum directly with the handle, i.e. without an accessory attached as the rim could get damaged and you could hurt yourself on sharp edges.
- ▶ Only use genuine Miele approved dustbags and filters. This will ensure optimum performance of the appliance throughout its life and will guarantee the safety of the vacuum cleaner.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Preparing for use


Attaching the suction hose

- Insert the hose connector into the suction socket until it clicks into position. To do this, line up the guides on the two pieces.

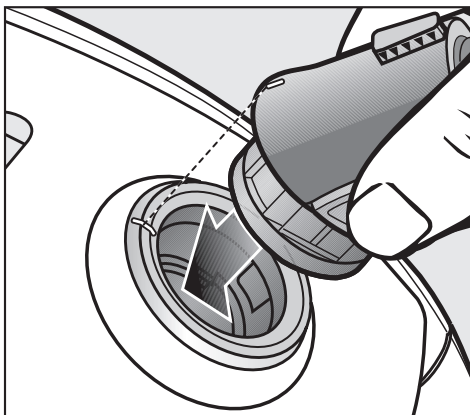


To remove the suction hose from the vacuum cleaner

- Press the release buttons at the side of the hose connector, and lift the hose from the socket.

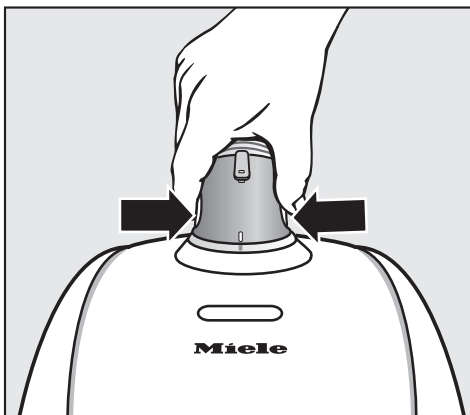


Fitting together the suction hose and the handle

- Insert the other end of the suction hose into the handle until it clicks into position.

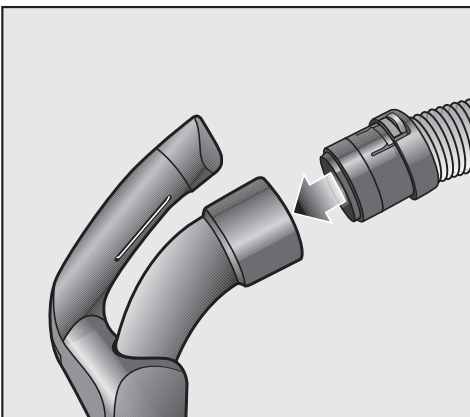

Connecting the handle to the telescopic wand


- Insert the handle into the telescopic wand until it clicks into position. To do this, line up the guides on the two pieces.
- Press the release button (arrow) if you want to separate the parts and pull the handle out of the telescopic wand with a slight twist.

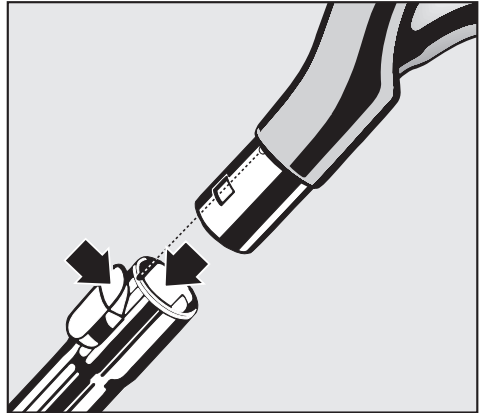

Adjusting the 2-piece telescopic wand (depending on model)

One part of this telescopic wand is packed inside the other and can be adjusted to suit your height for comfortable vacuum cleaning.


- Press the telescopic wand release button to release the tubes and adjust to the required height.

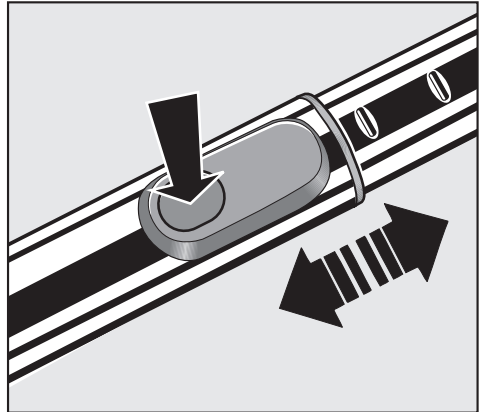

Adjusting the 3-piece telescopic wand (depending on model)

This telescopic wand has three sections. Two sections of the tubes are packed together inside a third outer tube.

- Press the release button ① to release the lower tube and pull it right out until it clicks. Press the button again when you want to retract the tube again. The tube will click into place.
- Press the telescopic wand release button ② to release the tubes and adjust to the required height.

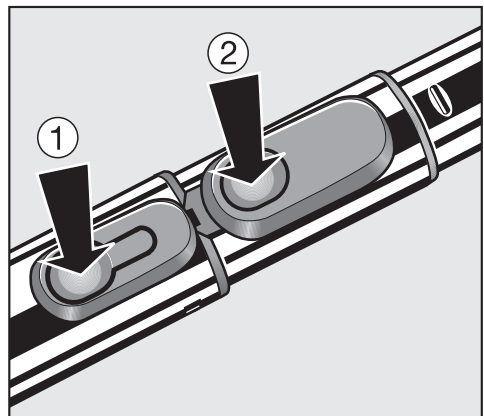


Preparing for use

Fitting the standard floorhead

- Push the telescopic wand into the floorhead and turn it clockwise or anti-clockwise until it clicks into position.
- To release the floorhead from the telescopic wand, press the locking button (see arrow) and pull the telescopic wand away from the floorhead.



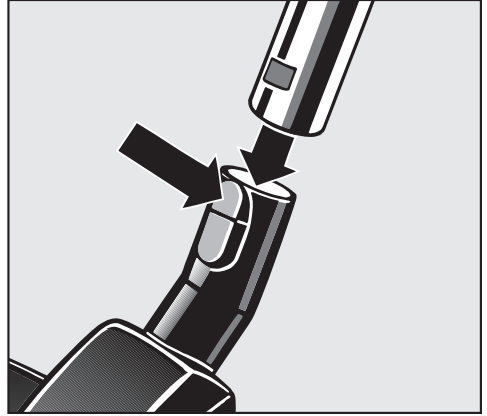

The floorhead can be used for all normal cleaning of carpets, rugs and robust hard flooring. For hard flooring, such as stone and floors which are susceptible to scratching, e.g. parquet, we recommend using the special Miele Hard Floor Brush (see "Optional accessories").



Adjusting the standard floorhead

It is important to observe the flooring manufacturer's cleaning and care instructions.

The following symbols are found on your vacuum cleaner's floorhead depending on the model.

-  and 
-  and 



Vacuum carpets and rugs with the brushes retracted:

- Press either the  or  foot control.

Clean hard flooring which is not susceptible to scratching with the brushes protruding:


- Press either the  or  foot control.


Clean hard flooring with deep cracks or spacing between floorboards with the brushes protruding.

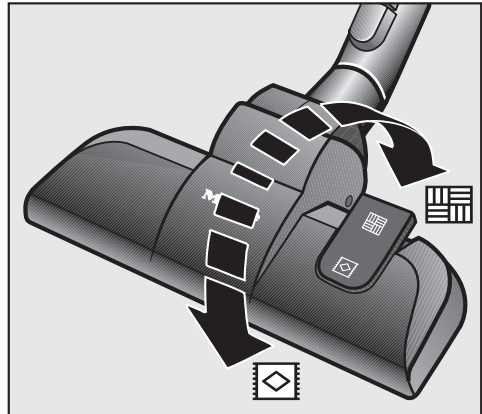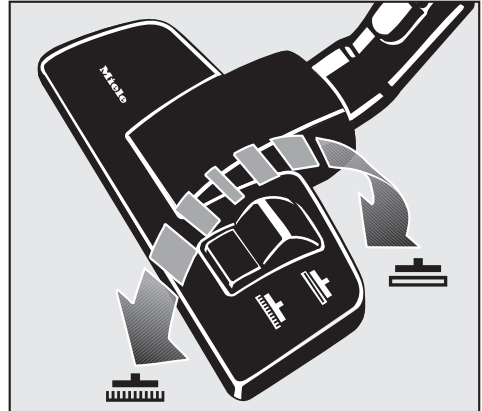

AirTeQ floorhead

This aerodynamic and powerful floorhead is specially designed to achieve good cleaning results while at the same time being very energy efficient.

 If you find that a great amount of effort is required to manoeuvre the AirTeQ floorhead, reduce the suction power to a suitable level (see "Adjusting the suction power").

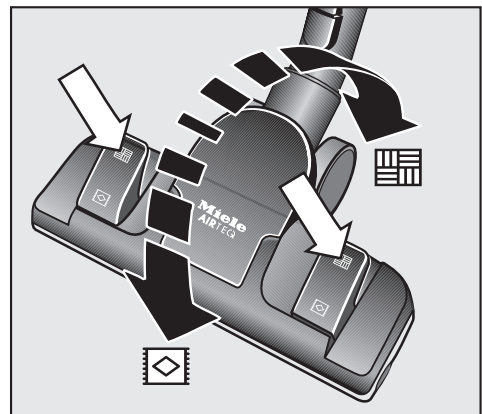

Using the accessories supplied

The following accessories are supplied:

① **Dusting brush**

For cleaning skirting boards, ornate, carved or delicate articles, etc.
The head of the dusting brush can be swivelled to attain the best cleaning position.

② **Upholstery nozzle**

For cleaning upholstery, mattresses, cushions, curtains, covers etc.



③ **Crevice nozzle**

For cleaning in folds, crevices and corners.

④ **VarioClip for the above accessories**

Symbols on the holder show where to attach the different accessories.


- Attach the VarioClip, if required, to the handle or the hose connector.

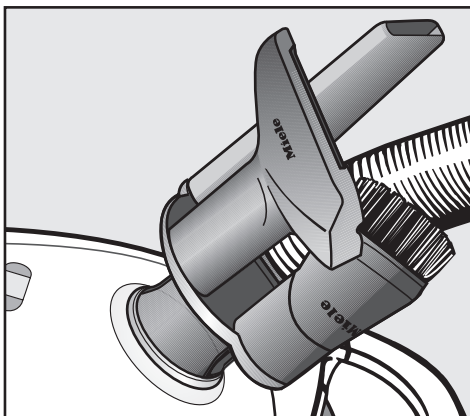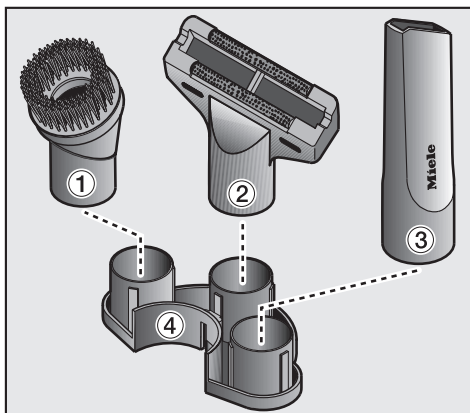

Floorhead

For general use and also for vacuuming stairs.


⚠ For safety reasons when vacuuming stairs, it is best to start at the bottom of the stairs and move upwards.

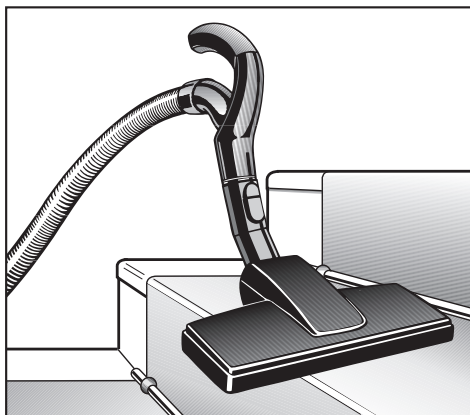


Mains connection cable

Unwinding the cable


- Pull out the connection cable to the required length (max. cable length approx. 6.5 m).

 If vacuuming for longer than 30 minutes, the connection cable must be pulled out to its fullest extent. Otherwise there is a danger of overheating.

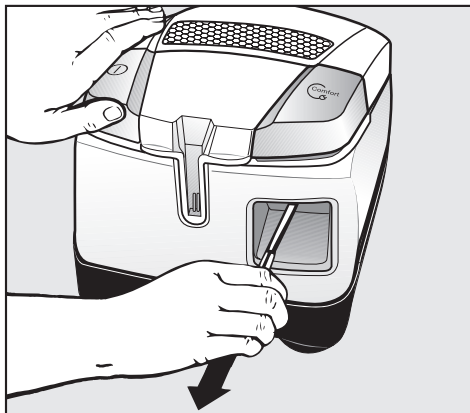

Rewinding the cable

- Switch off at the wall socket and remove the plug.
- Press the rewind foot switch. The cable will rewind automatically.

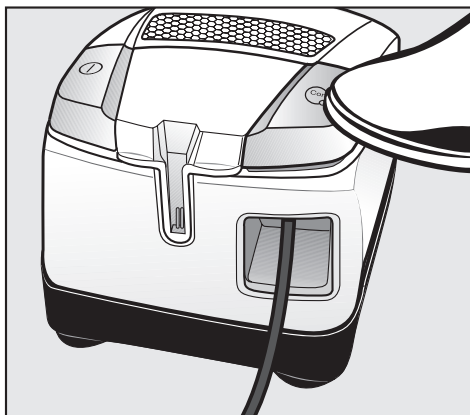

Use

Switching on and off

- Step on the On/Off foot control ①.
The Stand-by indicator  illuminates.




There are three ways of switching on your vacuum cleaner.
The Stand-by indicator will go out when the vacuum cleaner is switched on. An LED will indicate each time a button is pressed on the handle.

- Press the Stand-by button  on the handle.

When the vacuum cleaner is used for the first time, it will switch to the "Auto" power setting.

After this, the vacuum cleaner will switch on at the last selected power setting.

- Press the **+** button on the handle.
The vacuum cleaner switches on at the "max." power setting.
- Press the **-** button on the handle.
The vacuum cleaner switches on at the "min." power setting.

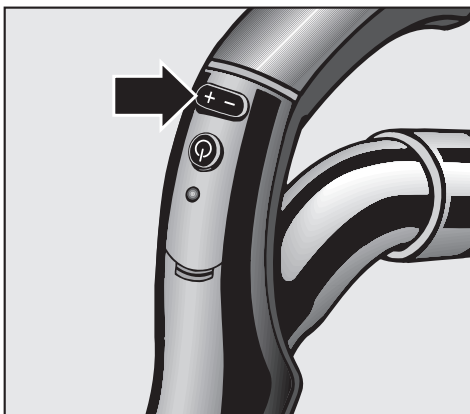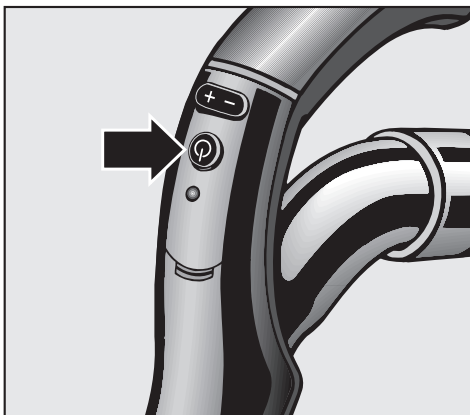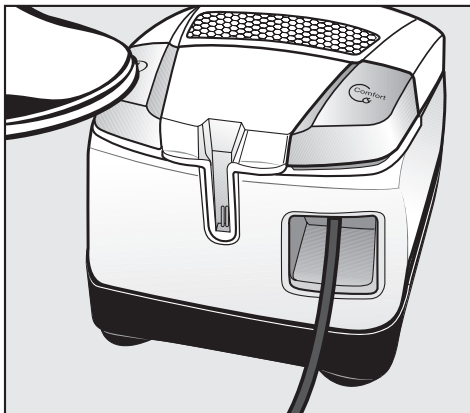

Selecting the suction power

You can regulate the suction to suit the type of flooring.

The higher the wattage, the more powerful the suction. Reducing the suction power reduces the amount of effort required to manoeuvre the floorhead.

min. = reduced suction power

Auto = automatic adjustment of the suction power according to the flooring


Do not vacuum any light materials or curtains with the "Auto" power setting. These may be drawn into the vacuum cleaner and become damaged.

max. = Maximum suction power

- Press the **+** or **-** button on the handle to select the required suction power.

The suction power selected lights up yellow on the vacuum cleaner.

If you find that a great amount of effort is required to manoeuvre the AirTeQ floorhead, reduce the suction power to a suitable level.

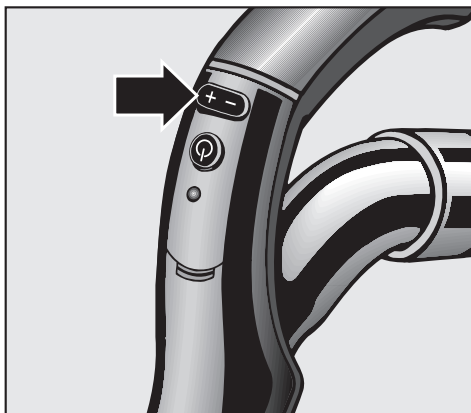


Use

Vacuuming

- When vacuuming, pull the vacuum cleaner behind you on its wheels. You can stand it upright for vacuuming stairs and curtains etc.


⚠ When vacuuming especially fine dust, e.g. sawdust, sand, flour, talcum powder etc., electrostatic charges build up naturally. Under certain conditions these charges will be released. To avoid the unpleasant effects of these discharges, a metal inlay has been incorporated into the underside of the handle. Please make sure that you keep your hand in constant contact with this metal strip during vacuuming.

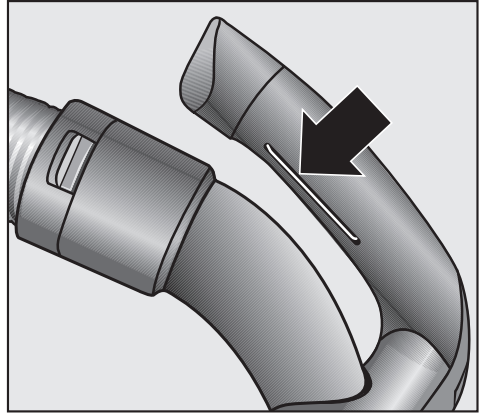


Interrupting operation


To pause the appliance during operation:

- Press the stand-by button  on the handle.

 The stand-by button is designed to pause the vacuum cleaner for short periods of time whilst vacuuming. Otherwise there is a danger of overheating.

At the end of the pause you can do one of the following:

- Press the stand-by button  again to switch the vacuum cleaner back on at the setting you were using before pausing it.
- Press the **+** button to switch the vacuum cleaner back on using the highest power setting.
- Press the **-** button to switch the vacuum cleaner back on using the lowest power setting.

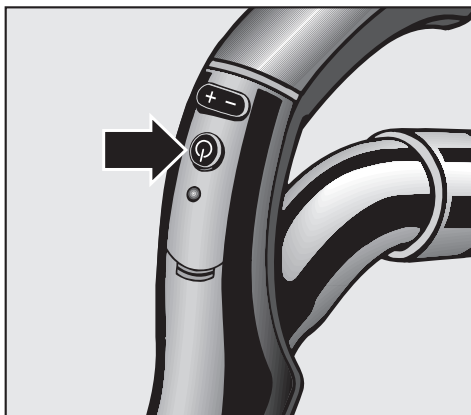


Setting down, transportation and storage

ParkSystem for pauses in vacuuming

A parking system has been designed for conveniently parking the vacuum cleaner during pauses.

- Slot the floorhead into the parking attachment at the back of the vacuum cleaner.

If the vacuum cleaner is parked on a sloped surface, e.g. on a ramp, retract all parts of the telescopic wand completely.

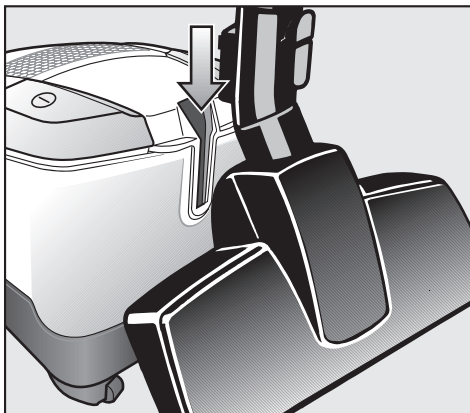

ParkSystem for storage


⚠ It is important to switch off the vacuum cleaner after each use. Switch off at the wall socket and remove the plug.


There is a parking attachment on either side of the vacuum cleaner.

It is also helpful to retract the telescopic wand fully.

- Slot the floorhead downwards into the parking attachment on the side of the vacuum cleaner.

This makes the vacuum cleaner easier to carry or store.

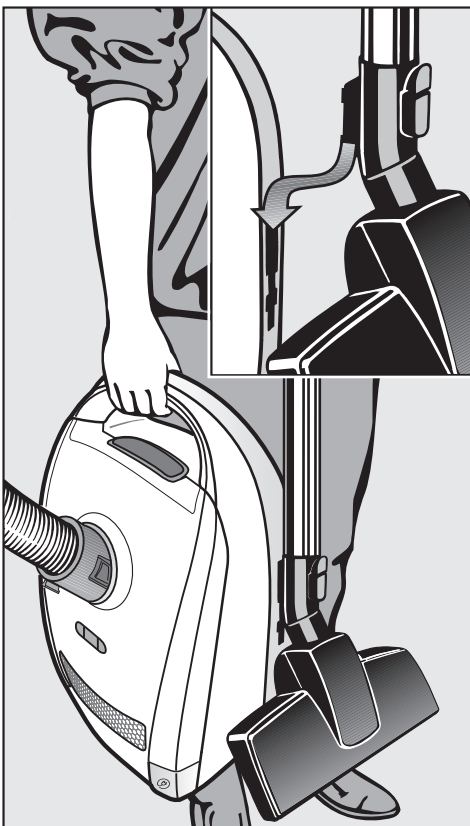


 Always disconnect the vacuum cleaner from the electrical supply for maintenance work and for cleaning. Switch off at the wall socket and remove the plug.

The Miele filter system consists of three filters.

- Dustbag
- Exhaust filter
- Dust compartment filter (for motor protection)

These will need to be replaced from time to time to ensure that your vacuum cleaner performs efficiently.

Only use genuine Miele approved dustbags and filters. This ensures that your vacuum cleaner functions correctly and cleans hygienically.

 The use of non-Miele approved dustbags, paper dustbags as well as dustbags with cardboard holders can cause serious damage to the vacuum cleaner and will invalidate your warranty.

Purchasing new dustbags and filters

Original Miele dustbags can be ordered via the internet at www.miele-shop.com, from Miele (see back cover for contact details) or from your Miele Vacuum Cleaner Specialist.



Ordering the correct dustbags and filters

You can recognise Original Miele dustbags type **F/J/M** and Original Miele filters by the "Original Miele" logo on the packaging or on the dustbags.



An Air Clean filter and a dust compartment filter are supplied with every packet of Miele dustbags. If you wish to purchase exhaust filters or dust compartment filters separately, please quote the model number of your appliance when ordering to ensure you get the correct items. You can also order all accessories via the Miele website www.miele-shop.com.

You can replace the exhaust filter fitted in the vacuum cleaner with one of the other Miele exhaust filters if you wish (see "Optional accessories").

Maintenance and care


When to change the dustbag

Change the dustbag when the colour marker in the dustbag change indicator fills the display, or sooner if it is no longer effective.

Miele dustbags are disposable. Dispose of full dustbags. Do not continue to use them once they are full as blocked pores reduce the efficiency of the vacuum cleaner.

Checking the dustbag change indicator

- Attach the standard floorhead to the suction tube. Do not use any of the other floorheads or attachments as they will cause the dustbag change indicator to give a false reading.
- Switch the vacuum cleaner on and select the highest power setting.
- Lift the floorhead off the floor a little. If the marker completely fills the dustbag change indicator, you should replace the dustbag with a new one.

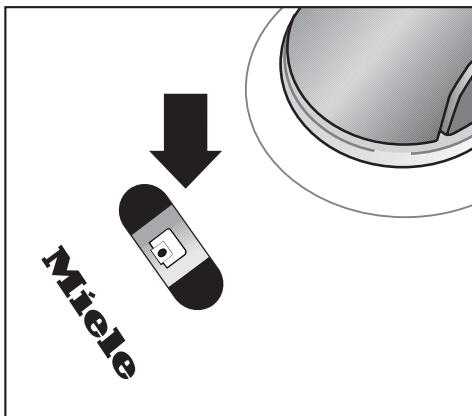

How the dustbag change indicator works

The dustbag change indicator is set for normal household dust. Normal household dust would contain a mixture of dust, hair, carpet fluff, threads, grit etc.


However, if the vacuum cleaner has been used to suck up fine dust, the pores of the dustbag will become blocked very quickly. This affects the air permeability of the bag, and the marker will indicate that the bag is "full" even when it is not. If this happens, you must still change the dustbag because suction power will be greatly reduced by blocked pores in the dustbag.

If, on the other hand, you have vacuumed up a large amount of hair and carpet fluff which typically contains a lot of air, the indicator may fail to react even though the bag is full. You should still change it!


Replacing the dustbag

- Press the release button for the dust compartment lid and raise the lid as far as it will go.


The dustbag has a closing flap which closes automatically when the dust compartment lid is raised to prevent any dust escaping.

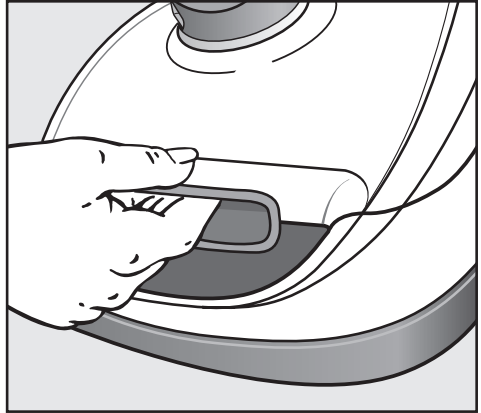

- Pull the dustbag out by the grip next to the self-closing flap on the collar.

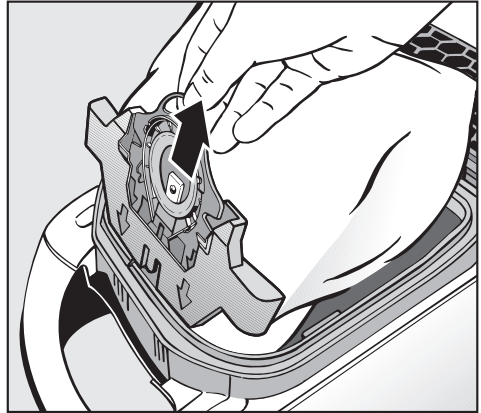

- Fit the new dustbag into the holder as far as it will go. Leave it folded up when you take it out of the box.
- It should be unfolded in the dust compartment.
- Close the dust compartment lid securely, making sure it clicks into position. Take care not to trap the dustbag when doing so.

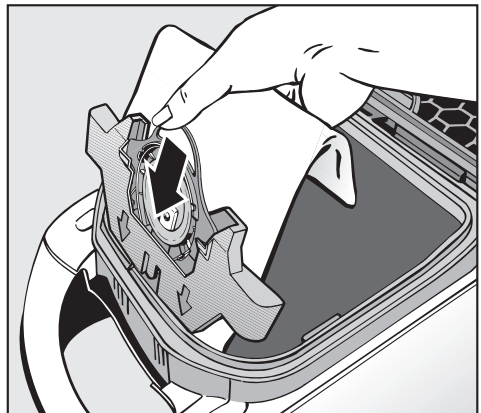

The lid will not close without a dustbag in place. Do not use force!

Maintenance and care

When to change the exhaust filter

Depending on the model, your vacuum cleaner will be fitted as standard with one of the following exhaust filters:


a Air Clean


Replace this filter every time you start a new packet of Miele dustbags.


An Air Clean exhaust filter and a dust compartment filter are supplied with every packet of Miele dustbags.

b Active Air Clean SF-AAC 50 (black)

c Active HEPA SF-AH 50 (blue)

Replace these filters when the exhaust filter indicator (reset  lights up. This indicator shows you when to change your Active Air Clean or HEPA filter. The indicator lights up after approximately 50 hours of operation, which is equivalent to about a year of average use. You can continue vacuuming when the light comes on. However, the suction power will be reduced, as will the effectiveness of the filter if it is not replaced in good time.


The filter change indicator light is irrelevant if an Air Clean filter (**a**) is being used, as long as it is replaced every time a new packet of Miele dustbags is started. The indicator light will go out when the reset button  is pressed.

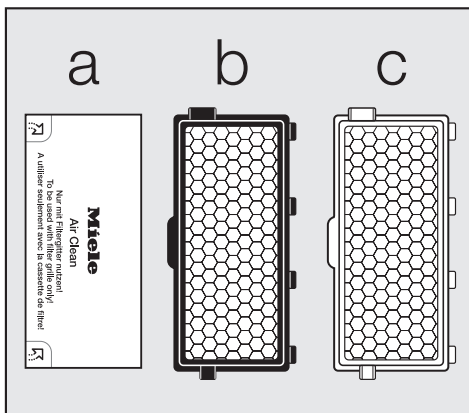

Correctly replacing the Air Clean filter

Do not use more than one exhaust filter at a time.


- Open the dust compartment lid.
- Release the filter grille and raise it upwards. Grasp the used Air Clean filter by the clean, unsoiled section (see arrow) and take it out.

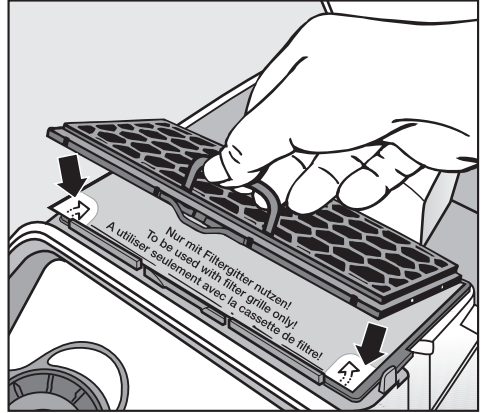

- Replace it with a new Air Clean filter.

If you wish to replace the Air Clean filter with an Active Air Clean filter or with an Active HEPA filter, see "Replacing one type of filter with another".

- Close the filter grille.
- Close the dust compartment lid firmly. It should click into place.

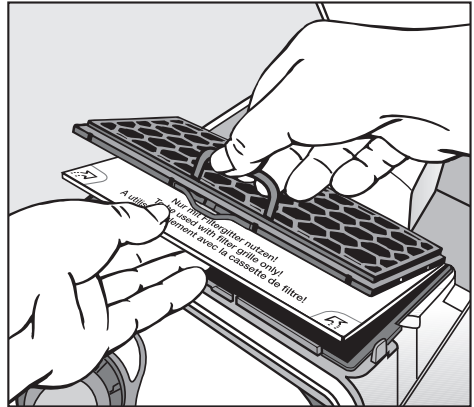


Maintenance and care

Replacing the Active Air Clean or Active HEPA filter

Do not use more than one exhaust filter at a time.


- Open the dust compartment lid.
- Remove the exhaust filter.

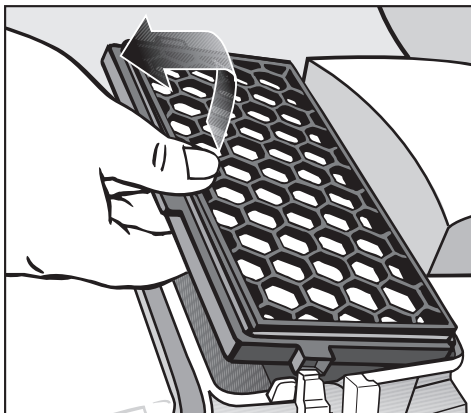


- Fit the new exhaust filter into position.

If you wish to replace the Active Air Clean or Active HEPA filter with an Air Clean filter, see "Replacing one type of exhaust filter with another".

- Close the dust compartment lid firmly. It should click into place.

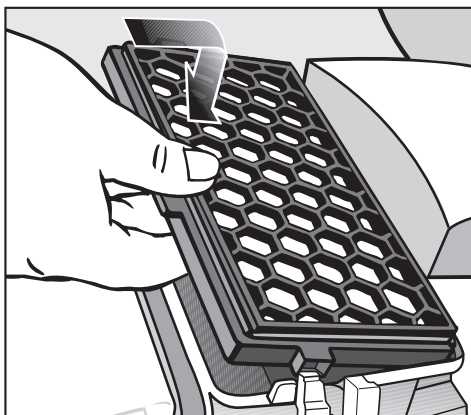

Exhaust filter change indicator (Reset button)

The exhaust filter change indicator (reset button ) must be reset each time the exhaust filter is changed. To do this, the vacuum cleaner must be connected to the electricity supply.

- Press the reset button .

The exhaust filter change indicator goes out and resets to zero.

The filter change indicator can only be reset by pressing the reset button after the light has come on. Pressing the button at any other time will have no effect.



Replacing one type of exhaust filter with another

Depending on the model, your vacuum cleaner will be fitted as standard with one of the following exhaust filters:



- a** Air Clean
- b** Active Air Clean SF-AAC 50 (black)
- c** Active HEPA SF-AH 50 (blue)

Please note

1. If you wish to replace the Air Clean filter **a** with an Active Air Clean filter **b** or an Active HEPA filter **c**, it is essential that you remove the filter grille before fitting the new type of filter.


2. If you wish to replace the Active Air Clean filter **b** or the Active HEPA filter **c** with an Air Clean filter **a**, then it is essential that you also fit a filter grille *.

* Filter grille - see "Optional accessories".

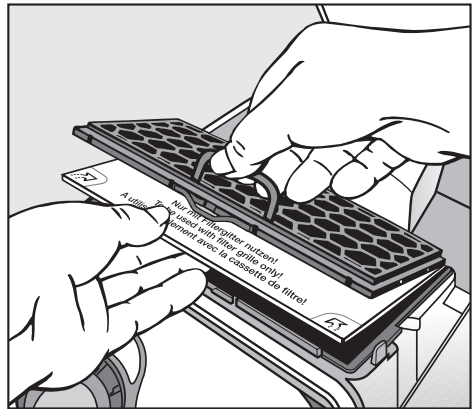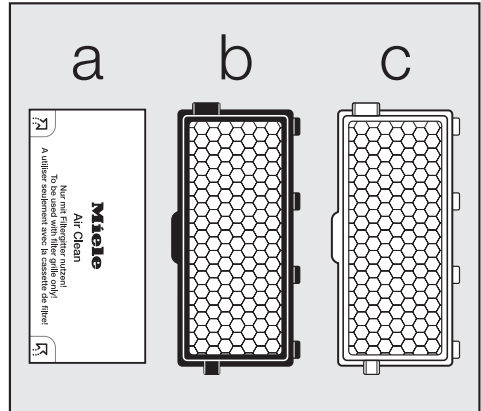

Do not use more than one exhaust filter at a time.

The exhaust filter indicator light (with reset button) is designed to come on when the Active Air Clean or Active HEPA filter needs to be changed. The filter change indicator light is irrelevant if an Air Clean filter is being used, as long as it is replaced every time a new packet of Miele dustbags is started. The indicator light will go out when the reset button is pressed.

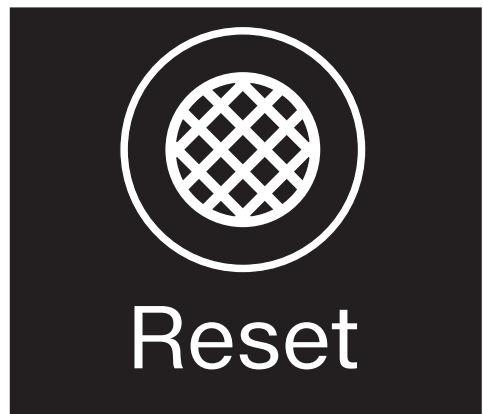


Maintenance and care

When to change the dust compartment filter (for motor protection)

Replace this filter every time you start a new packet of dustbags. A dust compartment filter is supplied with every packet of Miele dustbags.

Correctly changing the dust compartment filter

- Open the dust compartment lid.
- Pull the dustbag out by the grip next to the self-closing flap on the collar.
- Unclip the filter frame and remove the old filter. Hold by the clean, unsoiled section to remove it.
- Replace it with a new one.
- Close the filter frame.
- Fit the new dustbag into the holder as far as it will go.
- Close the dust compartment lid securely, making sure it clicks into position. Take care not to trap the dustbag when doing so.

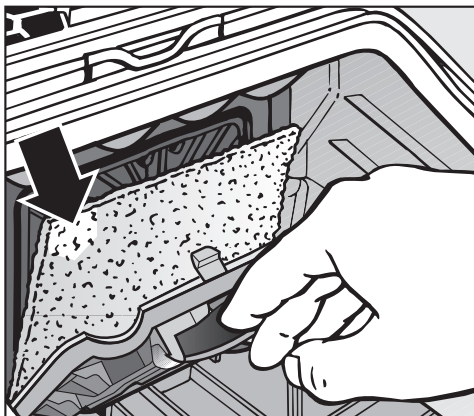

When to change the battery in the radio frequency operated handle

Approximately every 18 months.
One 3 V battery (CR 2032) is required.


The vacuum cleaner can still be used when the battery has run out or if there is no battery fitted.

- Switch the vacuum cleaner on using the On/Off foot control ①. The vacuum cleaner is ready to use (in stand-by mode).
- Press the reset button ② for the exhaust filter change indicator.

The vacuum cleaner can continue to be used, but only at maximum power.

How to change the battery in the radio frequency operated handle

- Open the cover to the battery compartment.
- Remove the battery and fit a new one, making sure the polarity is correct.
- Close the battery compartment.
- Dispose of the old battery responsibly.

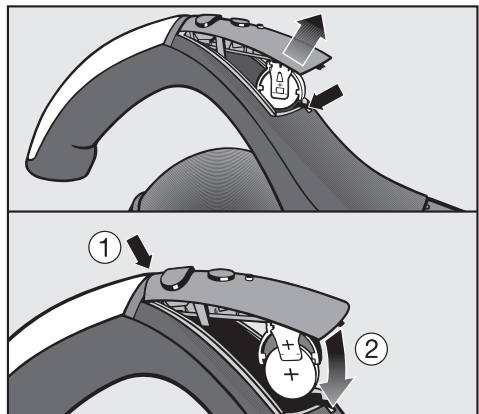

Maintenance and care


When to change the thread lifters

The thread lifters on the suction inlet to the floorhead and the upholstery nozzle can be replaced.

Check them from time to time and replace them if the pile has worn down.


Correctly replacing the thread lifters

- Use a suitable tool to remove them from the slots. There are two notches for this.
- Fit new thread lifters.

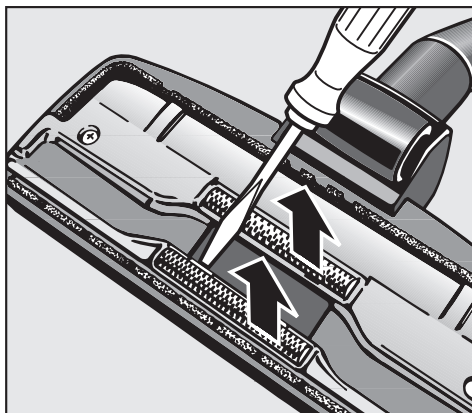

FiberTeQ and AirTeQ floorheads

- Use a suitable tool to remove the thread lifters from the slots, starting at the sides.
- Fit new thread lifters.

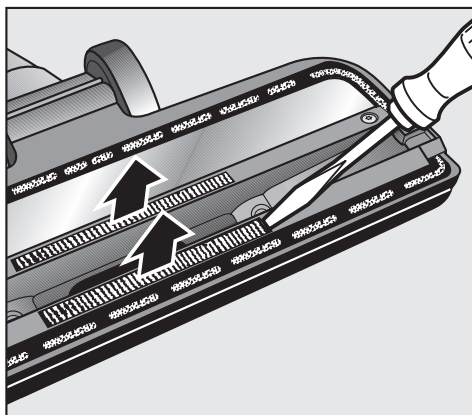



Cleaning the floorhead roller

(not possible on the FiberTeQ and AirTeQ floorheads)

- ① Release the bearing (with bayonet fitting) using a coin.
 - ② Press the bearing out, and remove.
 - ③ Remove the roller.
- Remove any threads and hair, replace the roller and refit the bearing.

Spare parts are available from your Miele Vacuum Cleaner Specialist, from Miele (see back cover for contact details) or via the internet at www.miele-shop.com.

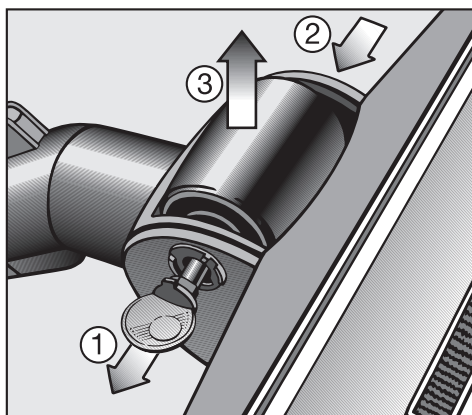


 Always disconnect the vacuum cleaner from the electrical supply for maintenance work and for cleaning. Switch off at the wall socket and remove the plug.

Vacuum cleaner with fabric covering

This vacuum cleaner can be cleaned with the dusting brush or wiped with a slightly damp cloth.


Vacuum cleaner and accessories

External plastic surfaces of the vacuum cleaner and of the accessories can be cleaned with a dry or a slightly damp cloth, or with a proprietary cleaner suitable for plastic.


 Do not use abrasive cleaners, glass cleaners, all-purpose cleaners or cleaning agents containing oil.


Dust compartment


The dust compartment can, if necessary, be cleaned using a **dry** duster, brush or, if available, a second vacuum cleaner to vacuum the dust out.

 Do not let the vacuum cleaner get wet. If moisture gets into the appliance, there is a risk of electric shock.

Problem solving guide

The vacuum cleaner switches off automatically. The overheating light  also comes on.

A temperature limiter switch switches the vacuum cleaner off automatically if it gets too hot. The overheating warning light  will then come on to indicate that it has overheated.

This can occur if, for instance, large articles block the suction tube or when the filter bag is full or contains particles of fine dust. A heavily soiled exhaust or dust compartment filter can also be the cause for overheating. Switch off the vacuum cleaner using the On/Off switch . Switch off at the wall socket and remove the plug.

After removing the cause, wait for approximately 20 - 30 minutes to allow the vacuum cleaner to cool down. It can then be switched on again.

In the event of a fault that you cannot easily remedy, please contact

- your Miele Vacuum Cleaner Specialist or

or

- Miele.

The telephone number and address for Miele is given on the back page.

Electrical connection

All work should be carried out by a suitably qualified and competent person in strict accordance with national and local safety regulations.

The voltage and rated load are given on the data plate located underneath the vacuum cleaner. Please ensure that these match the household mains supply. The fuse rating is quoted on the plug.

The appliance is supplied with a cable and moulded plug ready for connection to a 230V/50Hz a.c. single phase supply.

Test Marks.....Electrical safety
.....C-Tick Mark

Electrically suppressed
according to.....AS/NZS 1044

Optional accessories

It is important to observe the flooring manufacturer's cleaning and care instructions.

The following products and more can be ordered via the internet at www.miele-shop.com.



They can also be purchased from Miele or your local Miele Vacuum Cleaner Specialist.

Certain models are supplied as standard with one or more of the following accessories:

Floorheads / brushes

Classic Allergotec floorhead (SBDH 285-3)

The Classic Allergotec floorhead is designed specifically for the daily hygienic cleaning of all surfaces. The level of cleanliness of the floor is shown in a colour "traffic light" display when vacuuming.

TurboBrush (STB 205-3)

The TurboBrush is particularly suitable for vacuuming cut-pile carpeting.

Hard Floor Brush (SBB 235-3)

Special brush for cleaning hard floors (slate, stone and tiles).

SBB Parquet - 3

Special brush with soft bristles, designed to gently care for delicate hard surfaces.

Parquet Twister (SBB 300-3)

Specially designed with a double swivel joint for hard surfaces and small gaps.

Parquet Twister XL (SBB 400-3)

Specially designed with a double swivel joint for large hard surfaces and small gaps.

Other accessories

MicroSet (SMC 10)

This set is specially designed for cleaning small objects and difficult to reach areas (such as PC keyboards, stereo equipment, intricately carved furniture and ornaments, scale models etc).

CarCare Set (SCC 10)

The CarCare Set has been designed as an accessory for Miele cylinder vacuum cleaners for cleaning the interior of cars.

Cat&Dog Set (SCD 10)

This set is specially designed to be used in households with pets.

Handheld Turbo Mini Compact (STB 20)

Intended for vacuuming upholstery, mattresses, car seats and other areas inaccessible to the standard TurboBrush.

Universal brush (SUB 10)

For dusting books, shelves, etc.

Dusting brush (SSP 10)

For cleaning particularly sensitive surfaces such as skirting boards, ornate or carved articles, etc.

Radiator brush (SHB 10)

For cleaning radiators, narrow shelves and crevices.

Mattress nozzle (SMD 10)

For cleaning upholstery, mattresses, cushions, curtains, covers etc.

Long crevice nozzle, 30 cm (SFD 10)

For cleaning in folds, crevices or corners.

Flexible crevice nozzle, 56 cm (SFD 20)

For cleaning difficult to access areas.

Upholstery nozzle, 19 cm (SPD 10)

Extra wide nozzle for vacuuming upholstery, mattresses and cushions.

Flexible hose extension (SFS 10)

For extending the suction hose by approximately 1.5 m.

Hygiene cap with active charcoal

This prevents dust and odours from escaping when the suction hose is removed for transportation or storage.

Filters

Active Air Clean SF-AAC 50

Absorbs odours from the dustbag.

Active HEPA filter SF-AH 50

Excellent exhaust filter for the cleanest exhaust air. Particularly suitable for people with allergies.

Filter grille

Necessary if using an Air Clean filter instead of an Active Air Clean or Active HEPA filter.



Miele Australia Pty. Ltd.

ABN 96 005 635 398

Melbourne:

1 Gilbert Park Drive

Knoxfield, VIC 3180

Telephone: (03) 9764 7130

Fax: (03) 9764 7149

Sydney:

3 Skyline Place

Frenchs Forest, NSW 2086

Telephone: (02) 8977 4230

Fax: (02) 8977 4249

Brisbane:

39 Harvey Street North

Eagle Farm, QLD 4009

Telephone: 1800 798 578

Fax: 1800 799 578

Adelaide:

83-85 Sir Donald Bradman Drive

Hilton, SA 5033

Telephone: 1800 018 770

Fax: 1800 799 578

Perth:

205-207 Stirling Highway

Claremont, WA 6010

Telephone: 1800 094 872

Fax: 1800 799 578

www.miele.com.au

Miele New Zealand Limited

Unit L, 10-20 Sylvia Park Road

Mt. Wellington, 1060, Auckland

New Zealand

Telephone: 0800 264 353

Fax: 0800 463 453

www.miele.co.nz

Germany

Miele & Cie. KG

Carl-Miele-Straße 29

33332 Gütersloh