


GOLDAIR™

2400W Panel Heater

OPERATING INSTRUCTIONS

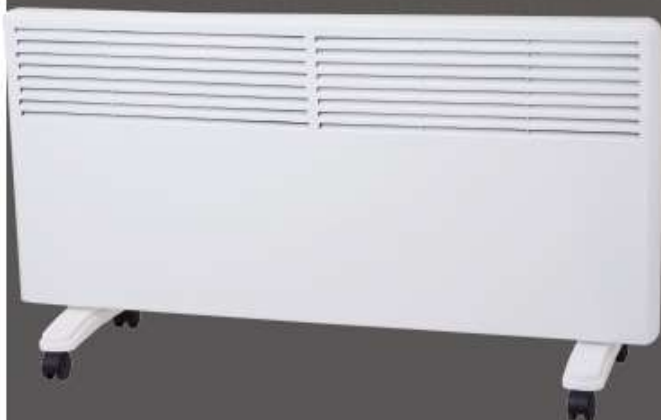

Model: GPH460

General Care and Safety Guide

Thank you for choosing a Goldair Panel Heater. This Goldair Heater has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance.
3. This appliance is intended for household use only and not for commercial or industrial use.
4. Indoor use only.
5. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
6. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
7. Always unplug appliance when not in use.
8. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team.
9. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team.
10. Do not connect the appliance to mains supply until completely assembled and adjusted.
11. Ensure hands are dry before handling the plug or main unit.
12. Do not locate the appliance directly below any power socket outlet.
13. Ensure heater is on a flat, stable, heat-resistant surface.
14. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
15. Carry out regular checks of the supply cord to ensure no damage is evident.
16. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
17. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
18. It is recommended that this heater is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
19. A correctly specified, undamaged extension cord may be used with this heater provided it is used in a safe manner.
20. Do not remove plug from power socket until the appliance has been switched off.
21. Do not remove plug from power socket by pulling cord; always grip plug.
22. Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
23. Don't place appliance on bedding or on thick & long carpet where the openings may get blocked.
24. Switch off and use handle provided when moving
25. Do not place appliance close to radiant heat source.
26. Never use the appliance to dry clothes.
27. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
28. Do not sit on the appliance.
29. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
30. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
31. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
32. Children should be supervised to ensure that they do not play with the appliance.
33. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
34. There are no user serviceable parts installed in the unit.
35. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
36. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
37. **WARNING** you must not cover this heater. Covering this heater presents fire risk and will activate the safety fuse; permanently disabling the unit.

TECHNICAL SPECIFICATION

Model No: GPH460
Supply: 220-240VAC 50Hz
Wattage: 2400W

Operating Your Panel Heater

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

WARNING: Keep all objects at least 1 metre from the front, sides and rear of the appliance.

WARNING: In order to avoid overheating, do not cover the heater.

WARNING: Never leave this heater unattended.

WARNING: Do not use this heater with a separate programmer, timer, remote-control system or any other device that turns the unit on automatically.

ASSEMBLY

1. Ensure the heater is unplugged and power switches are off.
2. Set heater upside down.
3. Align the screw hole on the Castor Wheel bracket with the screw hole on the base of the heater.
4. Attach Castor wheel bracket with the one way screws provided and ensure the bracket sits firmly in place (do not over tighten). Firmly press Castor Wheels into the slots provided on the Castor Wheel bracket.
5. Set heater upright and plug into a standard 240 volt AC electrical outlet.


The screw pack to attach the feet to your heater will be taped to either one of the feet for your heater.

CONTROL PANEL


Check that the heater is switched off before plugging into the mains supply.

Turn the Power switch "ON", which is on the right hand side of the heater just below the control panel.


 
Press the power button. A beep will sound indicating the heater is either in standby mode or in the mode prior to being turned off.

Press the  button to select the power setting; options are either full setting or half setting.

THERMOSTAT

Set the desired temperature setting by pressing the UP or DOWN  buttons in the normal operating mode. To find your desired temperature setting: set the thermostat to the maximum heat, when the room gets to a level of warmth that is comfortable to you; turn the thermostat down until it turns off. The heater will now cycle on and off to maintain the rooms heat level. Remember this setting for future use.

COUNTDOWN TIMER

Set the timing function by pressing the  button in the normal operating mode, When the "TIMER" sign on the screen starts flashing, use the UP or DOWN  buttons to set the desired shutdown time. From 1 to 24 hours.

Note: You cannot set a specific turn on or turn off time.



Operating Your Panel Heater

SAFETY DEVICE

This appliance has two protection devices:

The first device automatically disconnects & reconnects power to the appliance at a pre-set temperature.

The second device disconnects the appliance permanently in case of overheating, power spike or product damage, by means of a thermal fuse (It is non resettable).

CAUTION: The heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

CARE AND CLEANING

The heater requires regular cleaning to ensure trouble free operation:

Unplug the heater from the mains supply before cleaning.

Ensure that the heater has been allowed to cool down completely before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.

Never use solutions such as benzene, thinners or polishing agents.

Use a vacuum cleaner to remove dust and fluff from around the in and around grills and vents.

Ensure the heater is dry before plugging back into the mains supply.

Do not attempt to dismantle the heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase.

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand

Monday – Friday 8am-5pm

Phone +64 (0)9 917 4000

Phone 0800 232 633

info@cdb.co.nz

Goldair – Australia

Monday – Friday 8am-5pm

Phone +61 (0)3 9365 5100

Phone 1300 465 324

info@cdbgolair.com.au

Two Year Warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **two years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9365 5100
Phone 1300 GOLDAIR (1300 465 324)
www.goldair.com.au

Goldair Two Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name

Address

Place Of Purchase

Date Of Purchase

Name Of Product

Model Number

Attach a copy of the purchase receipt to this warranty card

GOLDAIR[®]

CDB ■ GOLDAIR

New Zealand
PO Box 100-707,
North Shore Mail Centre,
Auckland, 0745
www.goldair.co.nz

Australia
PO Box 574,
South Morang,
Victoria, 3752
www.goldair.com.au