

AIRFLO®

INSTRUCTION MANUAL



Bagless Vacuum

AFV3805


IMPORTANT SAFETY REMINDERS

(Read all instructions before using this appliance)

When using an electrical appliance, basic precaution should always be followed, including the following:

1. To reduce the risk of fire, electric shock, or injury, do not leave vacuum cleaner when plugged in. Unplug from outlet when not in use and before cleaning and maintenance.
2. To reduce the risk of electric shock, do not use outdoors or on wet surfaces
3. Do not use if the cord or plug is damaged. If vacuum cleaner is not working as it should or has been dropped, damaged, left outdoors, or dropped into water, call an authorized service center.
4. Do not pull or carry through its cord or use the cord as a handle. Do not pull the cord around sharp edges or corners or close a door on the cord. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
5. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
6. Do not handle plug or vacuum cleaner with wet hands.
7. Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce air flow.
8. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
9. Turn all controls off before unplugging.
10. Use extra care when cleaning on stairs.
11. Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present
12. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
13. Unplug before connecting the hose.
14. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
15. Do not use without dust bag and/or filter in place.
16. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

PARTS

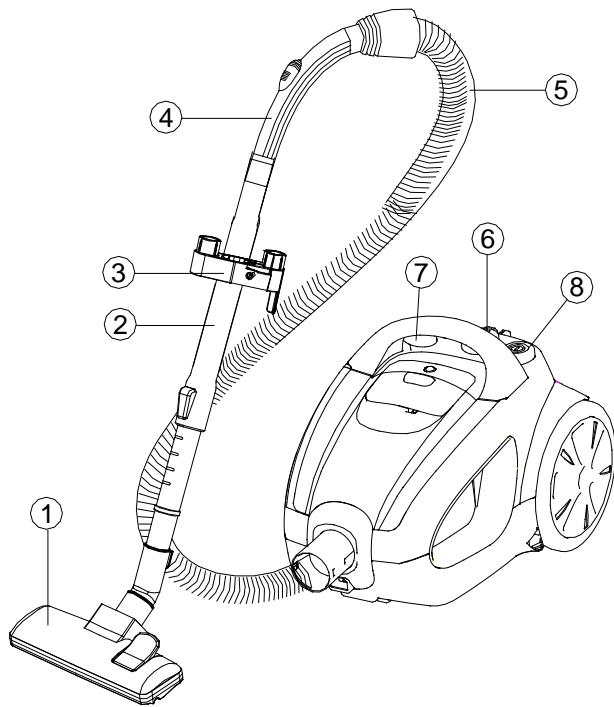


1. Floor nozzle
2. Telescopic rod
3. Storage clip
4. Air slide
5. Suction hose
6. Variable suction control
7. Automatic cord rewind
8. On/off switch


ADDITIONAL REMINDERS

Switch off the vacuum cleaner immediately if the air intake or the floor brush or the telescopic rod becomes blocked. Before restarting the vacuum cleaner, remove the substance / dirt causing the blockage.


1. Never use the vacuum cleaner in the immediate vicinity of fire, combustible or flammable items, cigarette ends or ashes.

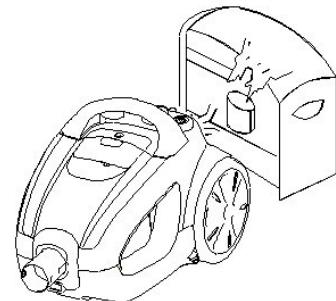


2. Only plug socket when your hands are dry.

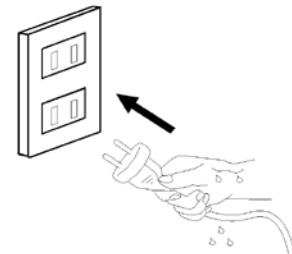

3. Please remove large or sharp objects from the floor before using the vacuum cleaner to avoid any possible damage to it.

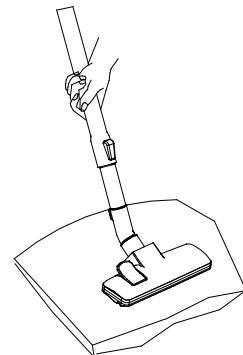

4. Do not pull by the mains cable when pulling out the plug.

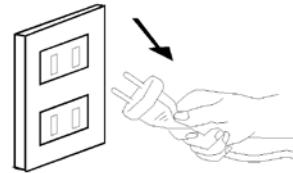

ASSEMBLY

1. Telescopic rod


- Assembly:

Insert the rod to the air intake opening.

Push the rod in until it locks into place


- Disassembly:

Take the rod off from the air intake after disconnecting from the mains socket.

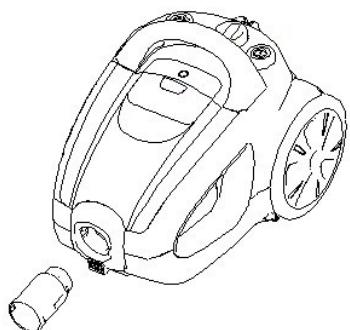


2. Assembling the telescopic rod and accessories

2.1: Insert the telescopic rod to the hand grip, as shown below.

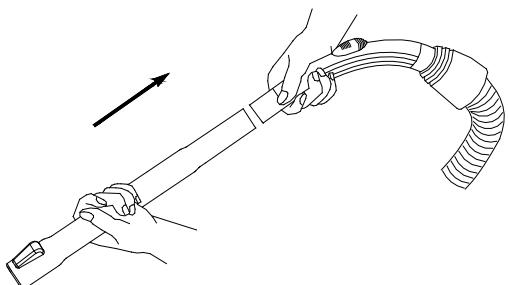


2.2:


- Slide the rod forward and extend the lower part to desired length. Let it snap into place.

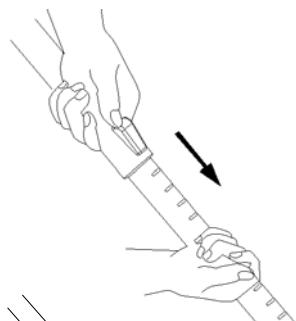


2.3: Affix the floor brush to the telescopic rod.

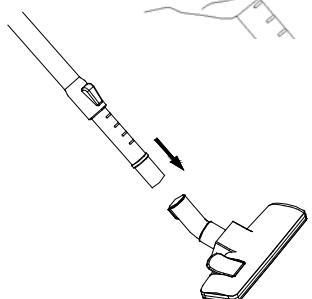

2.4: Suitable for everyday cleaning of carpet and wooden floors.

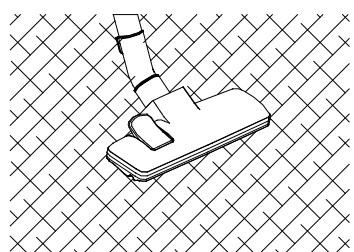

Cleaning carpet

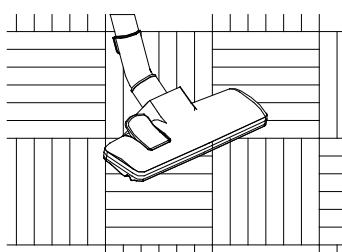


Cleaning wooden floor

Furniture brush




Upholstery nozzle

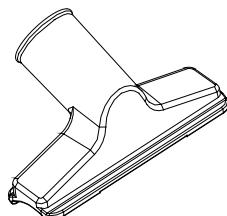

Floor nozzle settings :

A: Hard floors = brush bar extended

B: Carpets = brush bar retracted

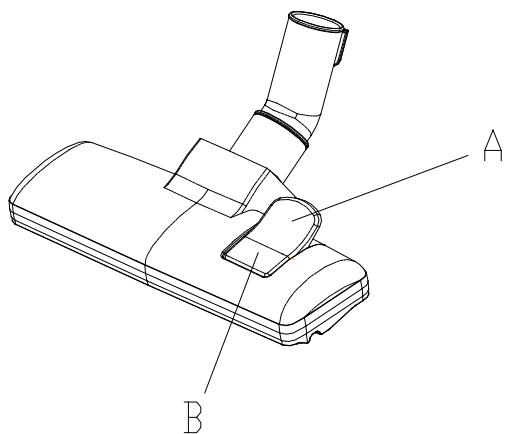


OPERATION


Vacuum cleaning

1. Before using the device, first roll out a sufficient length of power cable and plug it into the mains socket. The yellow mark on the power cable is the maximum length that must not be exceeded.

To switch on the device press the foot pedal button  on the casing with your hand.

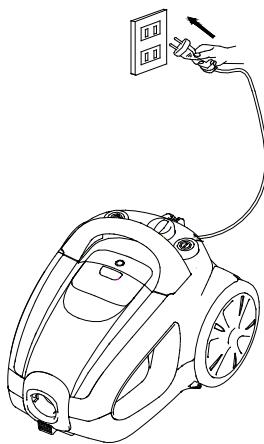

2: To rewind the power cable, press the button  with one hand and guide the cable with the other hand to ensure that it does not whip, causing damage.

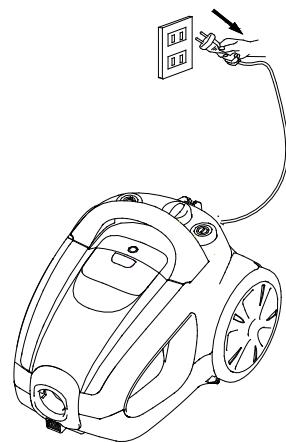

Regulating the suction power

You can set the suction power on the device as you require it using the suction regulator. We recommend using minimum suction power for delicate materials. Select medium suction power for mattresses, upholstered furniture and carpets. Select maximum suction power for tiled, wood and other robust floors.

CYCLONE CLEANING SYSTEM

The cyclone vacuum cleaner function means the vacuum cleaner does not need a dust bag. The sucked up dirt is forced into the dust container by force of the air jet. The air is cleaned by a washable permanent filter in the dust container, motor protection filter and an exhaust air filter (HEPA filter).




Caution!


Never vacuum clean without a filter or with a damaged filter. The dust that is sucked up would force its way into the device and damage the motor.

Emptying the dust container

(You can easily see with the transparent dust container when it must be emptied.)

1. Switch off the vacuum cleaner and disconnect the plug from the mains. To do this, always pull on the plug and not on the cable.
2. You can pull the dust container -- together with the cleaning system -- out of its anchoring with the aid of the carrier handle on the dust container. Just lift out the dust container and carry it to the waste bin.
3. A push button is located on the dust container so you can open and empty it automatically (bottom-down technology). To do this, hold the dust container over your dust bin and press the button.

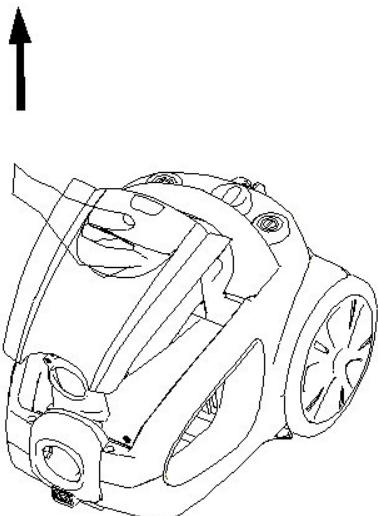

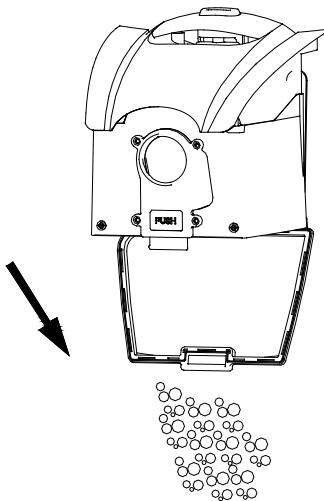

4. After emptying it, clean the air filter again if necessary (see also "Cleaning the air filter" below). After this, rinse out the dust container and wipe it dry.
5. Push the air filter cleaning system back into position in the cyclone vacuum cleaner until it snaps into place. Your cyclone vacuum cleaner is now ready to use again.
6. If suction is not functioning correctly, open the dust cup and check if there is a blockage. Get rid of the blockage and clean up the dust cup.

Cleaning the sponge filter

The sponge filter and the sponge cover should be cleaned regularly. Cleaning is best done when emptying the dust container. To do this, follow the instructions in the "Emptying dust container" section above.

1. Switch off the vacuum cleaner and disconnect the plug from the mains. To do this, pull on the plug and not the cable.
2. You can pull the dust container -- together with the cleaning system -- out of its anchoring with the aid of the carrier handle on the dust container. Take hold of the carrier handle on the dust container and pull it upwards.
3. Turn to open the sponge cover and then take out the sponge filter.
4. Rinse the sponge filter under running water and allow it to dry.
5. Place the sponge filter back in the sponge cover (or replace with a new one) and fit it into the dust container until it snaps into place. Your cyclone vacuum cleaner is now ready for use again.

Cleaning the exhaust air filter (HEPA filter)

1. Switch off the vacuum cleaner and disconnect the plug from the mains.
2. Open the exhaust air grill (this is at the rear of the cyclone vacuum cleaner).
3. The exhaust air filter is visible when the grill has been opened.
4. Rinse the filter under cold running water and allow to dry.
5. Put the exhaust air filter back into place (or replace with a new one) and place in the grill.
6. Close the exhaust air filter grill.

