

portable electric juice cup



Instructions for use

1. This product is a battery-driven DC motor. The charger is suitable for all kinds of smart phone chargers. Please charge the product with the product data line provided by our company before using it. The charging time is 5 hours.
2. When the product is working, it is strictly forbidden to unscrew the top cover and put hands or other hard objects into the cup body to prevent accidents.
3. When cleaning this product, please first determine whether the switching power supply is turned off, then clean the cup cover, cup body and base part. Do not put the base in water to clean, in order to prevent damage to electronic components when entering the base.
4. Start-up idle time of this product is 10 seconds, the longest juicing time is 40 seconds, idle 10 seconds live work 40 seconds automatically stop, green light flashes. Reset the switch before re-working and then turn it on. Do not press fruit juice continuously and excessively, so as not to cause too much load of electronic components and heat, which will affect the life of the product.
5. In the normal use process, the cause and effect meat is too big to cause the motor to stop suddenly. At this time, the motor is locked. The line protection program is turned on and the power is automatically cut off. At the same time, the LED flashes red. After the switch is disconnected, the LED will stop flickering and the touch switch will run normally again.
6. All parts of this product can not be disinfected by hot water and microwave oven with temperature exceeding 50 degrees, so as to avoid thermal deformation and damage.
7. Do not put any parts of this product into dishwasher and other cleaning equipment.
8. Do not use steel wool, abrasive cleaner, live corrosive liquid to clean or beans products.
9. This product is a special fresh juicer, not suitable for meat grinding, grinding other nuts or beans products.
10. This product should be stored in places not easily accessible to children. Do not let people (including children) who are physically or mentally handicapped or lack relevant experience and knowledge use or play with this product.
11. This product is only suitable for personal or household use. If uncontrollable faults occur in the use process and need to be repaired, please contact the manufacturer's customer service. If the electronic parts are damaged by self-disassembly, the company will not be responsible for maintenance.

Tips:

1. Before juicing, please add purified water and clean the inside of the cup with a cup brush. Remember to cut the pulp into small pieces of 1.5*1.5cm.
2. Install the pulp, invert the product first, push the switch to make the blade rotate first, and then straighten the product to squeeze juice.
3. When squeezing juice, when the pulp is too large, it will stop turning and can be restarted. In the process of using, it can shake the cup body for a while, and the effect of squeezing juice is better.
4. After pressing a glass of juice with another flavor, clean the inside of the glass with a cup brush directly. Don't disassemble the machine base to rinse directly.
5. This product should be stored in a place that is not accessible to children. Do not allow people (including children) with physical disability, sensory or mental handicap to use or play with this product.