


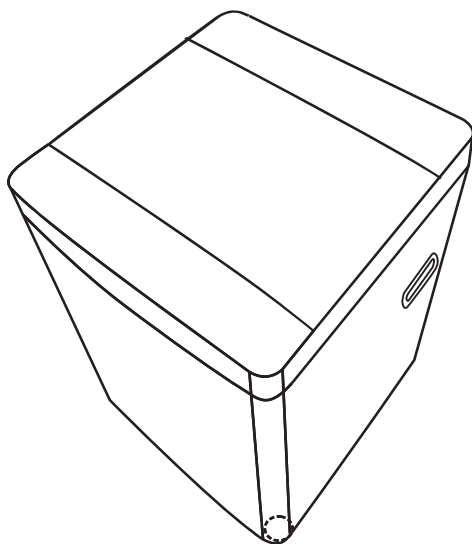

- Before using your washing machine, please read this manual carefully and keep it for future reference.
- The drawings in this manual are for instruction only, they may vary from the model you buy

Automatic Electric Washing Machine **OWNER'S MANUAL**



This manual is for

F708TLW
F709TLW

Inside you will find many helpful hints on how to use and maintain your washing machine properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your washing machine. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of Troubleshooting Tips first, you may not need to call for service.

Contents

Specifications and parameters	2
Safety precautions	3
Use precautions	5
Parts identification	6
Packing list	7
Remove the package	7
Install the bottom plate	7
Adjust the position	8
Install the drain hose	8
Install the inlet hose	9
The operation panel	10
Preparation before washing	12
The operation steps	13
Cleaning of The lint bag and filter	14
Cleaning the pump filter	14
Trouble shooting tips	14

Specifications and parameters

Parameter table

Type/Mode	F708TLW	F709TLW
Rated power supply	230V~/50Hz	230V~/50Hz
Application water pressure	(0.03~1.0)MPa	(0.03~1.0)MPa
Rated washing capacity	8.0kg	9.0kg
Rated spinning capacity	8.0kg	9.0kg
Rated washing power	500W	500W
Rated spinning power	490W	510W
Net weight	35.7kg	40.8/kg
Dimensions(mm)	556(W)X566(D)X922(H)	580(W)X590(D)X970(H)

Safety precautions

WARNING

To reduce the risk of fire, electric shock, or injury to persons, read entire Owner's manual and follow the Important Safety Instructions and basic precautions, including the following before operating this washer.

- If the power cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid the hazard.
- The new hose-sets supplied with the washer are to be used and that old hose-sets should not be reused.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The washing machine must not be placed on carpet as it may block the ventilation opening on the base.
- Children of less than 3 years should be kept away unless continuously supervised.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or launderettes.
- Take care that power voltage and frequency shall be identical to those of washing machine.
- To ensure your safety, power cord plug must be inserted into an earthed socket. Check carefully and make sure that your socket is proper and earthed reliably.
- Do not use any socket with rated current less than that of washing machine.
- Do not operate your washer when parts are missed or broken.
- Never pull out power plug with wet hands.

Safety Precaution

- Unplug your washer before cleaning or making any repair.
- Please check whether the water inside the drum has been drained before opening the door. Please do not open the door if there is any water visible.
- Glass door may be very hot during the operation. Keep kids and pets far away from the washer during the operation.
- Make sure that the water and electrical device are connected by a qualified technician in accordance with the manufacturer's instruction and local safety regulations.
- Before operating this machine, all packages and transit bolts must be removed. Otherwise, the washing machine may be seriously damaged while washing the clothes.
- Flammable and explosive or toxic solvents are forbidden. Gasoline and alcohol etc. shall not be used as detergents. Please only select the detergents suitable for machine washing.
- Be careful of scalding while the washer is draining hot washing water.
- Never unplug your washer by pulling on the supply cord. Always grasp the plug firmly and pull straight out from the outlet.
- Packing materials may be dangerous to the kids. Please dispose of all packing materials (plastic bags, foams etc) safely away from the kids.
- Do not climb up and sit on top cover of the machine.
- Pets and kids may climb into the machine. Check the machine before every operation.
- Do not lean against the door of the washer.

Important Hints

- The household washing machine isn't intended to be built-in.
- This washing machine is for indoor using only.
- Make sure that all pockets are empty. Sharp and rigid items such as coins, brooches, nails, screws or stones etc. May cause serious damage to the washer.
- Please remember to disconnect water and power supply immediately after the clothes are washed.
- The washing machine shall not be installed in bath rooms or very wet areas, as well as in the rooms with explosive or caustic gases.
- Before washing clothes for the first time, the washing machine shall be operated with a full cycle without clothes inside.
- Repair or replacement of any part of the washer are to only be carried out by the manufacturer or authorised TCL service centre.
- It is not recommended to wash mats and bras and bras inset with steel wire. It is recommended bras with steel wire are placed in a laundry bag .
- Never refill water by hand during washing.
- After the program is completed, please wait for two minutes to open the door.
- When handing the machine, the accumulated water shall be drained out of the machine first. Handle the machine carefully. Never hold each protruded part on the machine while lifting. The machine door can not be used as the handle during transportation.
- Washing machines with single inlet valve only can be connected to the cold water supply. Washing machines with double inlet valves can be connected to the hot water and cold water supply.

Safety precautions

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:



FORBIDDEN

Contents marked with this symbol are actions forbidden. Performing of those actions may result in damage of the machine or injure the personal safety of the user.

- ⊗ 1. Please do not damage power flexible cord and power plug to avoid electric shock, short circuit and catching fire.
- ⊗ 2. Please do not pull out or insert the plug with wet hands to avoid electric shock.
- ⊗ 3. Please do not disassemble and re-assemble the machine without authorization.
- ⊗ 4. Please do not wash padded jacket, raincoat, fishing coat and similar clothes in the washer.
- ⊗ 5. Please do not let children climb the machine or peer into the rotating spin barrel to avoid accidents.
- ⊗ 6. Please do not install the machine in damp and raining environment to avoid electric shocking, catching fire, faults and distortion accidents.
- ⊗ 7. It is strictly prohibited to place and sit children or lay weights on the washer.
- ⊗ 8. Do not turn the appliance off by unplugging the power plug while the washer is in operation. Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.



NOTICE

Contents marked with this symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or injure the personal safety of the user.

- ☺ 1. Please use correct power source . Turn off the water faucets and unplug the washer if the machine is to be left for an extended period of time, such as during vacations.
- ☺ 2. Please put the clothes evenly into the washing machine, clothes placing uneven will produce noise or vibration. Can not be hot, heavy objects (such as hot kettle, iron) is put in the washing machine.
- ☺ 3. It is prohibited to wash the clothes touching with kerosene, gasoline, alcohol and other flammable materials.
- ☺ 4. The water temperature shall not exceed 55 °C when washing with warm water.
- ☺ 5. The machine must away from direct sunlight or heat source just like a heater.



GROUNDING

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.

Use precautions

⚠ CAUTION

- ☹ 1. Your washing machine is for house use. Your washing machine can only wash for machine washable fabrics. Use the washer only for its intended purpose as described in this owner's Manual. Before use, the washer must be properly installed as described in this manual.
- ☹ 2. To prevent personal injury or strain, wear protective gloves whenever lifting or carrying the unit.
- ☹ 3. If a drain error occurs during an operation, check if there is a draining problem. If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.
- ☹ 4. To minimize the possibility of electric shock, unplug this appliance from the power supply before attempting any maintenance or cleaning.
- ☹ 5. If the water supply hose comes loose from the faucet and floods the appliance, unplug the power plug. Failing to do so may result in electric shock or fire.
- ☹ 6. Store and install the washer where it will not be exposed to temperatures below freezing or exposed to outdoor weather conditions. Failure to follow this warning can cause serious leak damage.

⚠ WARNING


- ☹ 1. Do not leave metal objects (safety pins, hair pins, etc.) or bleach in the tub for long periods of time. This may cause the tub to rust. If rust appears on the surface of the tub, apply a neutral cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.
- ☹ 2. Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- ☹ 3. Do not place items exposed to cooking oil in your washer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- ☹ 4. Please do not place on the washer burning candles, mosquito-repellent incense, cigarette and other flammable things, as well as electric stove, air heating fan and other heating sources, they may damage the surface.
- ☹ 5. Please do not insert your hand and take out clothes inside the spin barrel before it is fully stopped.
- ☹ 6. Do not use normal hand-washing soap in the washer. If it hardens and accumulates inside the washer, it may cause problems with the product, discoloration, rust, or bad odors.
- ☹ 7. Do not wash large laundry items such as bedding in the washing net. Failing to do so may result in injury due to abnormal vibrations. Place smaller items, such as lace socks and lingerie in the washing net.
- ☹ 8. Do not place any non-laundry objects, such as shoes, food waste, or animals into the washer. This can cause abnormal vibrations that can damage the washer, and, in the case of pets, cause severe injury or death.

⚠ DANGER

1. Keep laundry products out of children's reach. To prevent injury to persons, observe all warnings on product labels. Failure to comply with these warnings could result in serious injury to persons or death. If a child places a bag over their head, the child may suffocate. Destroy the carton, plastic bag, and other packing materials after the washer is unpacked. Children might use them for play. Cartons covered with rugs, bedspreads, or plastic sheets can become airtight chambers. Failure to comply with these warnings could result in serious injury to persons or death.
2. If the appliance is flooded, cut the power immediately and disconnect the water supply, and contact your nearest service center. If the appliance emits a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest service center. Failing to do so may result in electric shock or fire. Do not stand in water while disconnecting appliance.
3. Do not attempt to repair, disassemble, or modify the appliance yourself. Do not use any fuse (such as copper, steel wire, etc.) other than the standard fuse. If you need to repair or reinstall the appliance, contact your nearest service center. Failing to do so may result in electric shock, fire, problems with the product, injury and may void warranty.

Parts identification



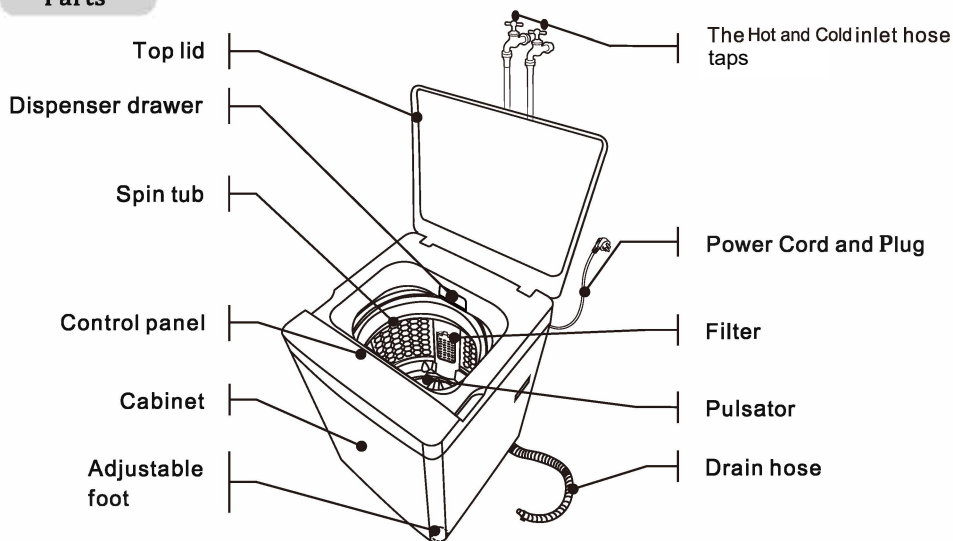



Parts



⚠ CAUTION


Please put washing powder into the dispenser drawer directly.

Packing list

Name	Owner's Manual	Self Tapping Screw	Water inlet hose	Bottom cover	Plastic Zip tie	Up drain hose component
Diagram						
Quantity	1	2	2	1	1	1

Remove the package

- Lift the carton box directly off the washing machine as shown.
- Take out the machine from the foam cushion.

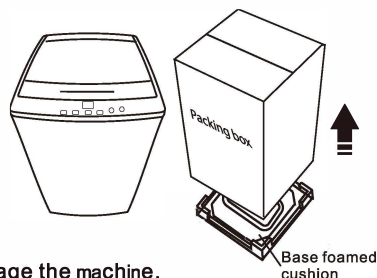

⚠ WARNING


- Do not operate the washing machine on the foam cushion.
- Do not open the box from the top. It is very easy to damage the machine, and makes it difficult to remove the machine.
- Packaging is flammable Do not put the package on fire place, so as to avoid injury to people and damage to property.
- Packaging material can be dangerous for children. There is a risk of suffocation! Keep all packaging away from children. Dispose of all packaging safely.

Install the bottom plate

- The one purpose of the bottom plate is to protect the personal safety of the user or the safety of the machine
- The other purpose of the bottom plate is to block noise and give a quiet performance from the washing machine during operation.

Steps:

1. Lay the washer on its back.
2. Insert the plate in the bottom of the machine as shown in the figure.
3. Use a screwdriver to tighten the screw securing the panel to bottom of the washer.
4. Once the screw is tight, and the panel is secure return the washer to its standing position.

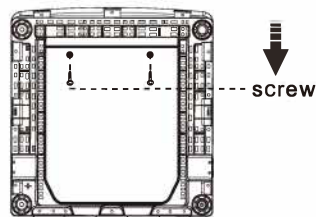


⚠ CAUTION

- Using the washing machine without leveling it may result in malfunction caused by the production of excess vibration and noise.
- Use the leveling feet only for leveling the washing machine. If you raise the leveling feet unnecessarily, it may cause abnormal vibration of the washing machine.

Adjust the position


The largest allowable slope of the base of the machine is 2° .

Slanting or rough ground will result in unstable running or stoppage of the machine. Please adjust it by the following method:

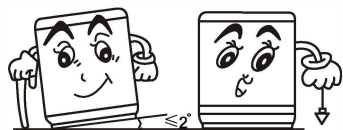

Adjust your washer by turning the front of the right leveling feet clockwise or counterclockwise as necessary.

Turn the front of right leveling feet counterclockwise to raise the washer, and clockwise to lower the washer.

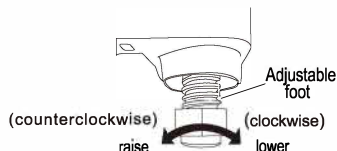

Install the drain hose

- First install the drain hose hook on the part of outer drain hose component.
- Put the drain hose clamp on the outer drain hose, Insert the outer drain hose into the joint for it, and then clutch tightly with drain hose hoop.
- Completely slide the drain hose Insert the drain end into the drain completely.
- Fix it with the hoop. (As shown in the figure)

⚠ CAUTION

Your washing machine using the common drain system, please place the drain hose as the Figure 1.

- Drain height should be less than 10cm, otherwise it will cause poor drainage. Meanwhile prohibited stampede or squeeze drain hose.
- If the drain hose need to be lengthen , please purchase another drain hose, and it shall not be less than the inner diameter of 30mm, the length should not less than 1.5m.

If you use the Upper drain system, please place the drain hose as the Figure 2. (For option)

- Ensure the drain hose is mounted at a suitable height. (Between 800~1200mm above the floor)
- Do not push it too far down the drain pipe or siphoning will occur.

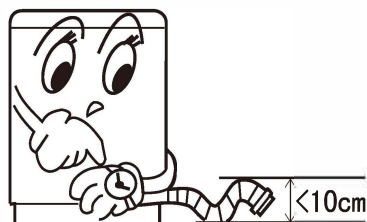
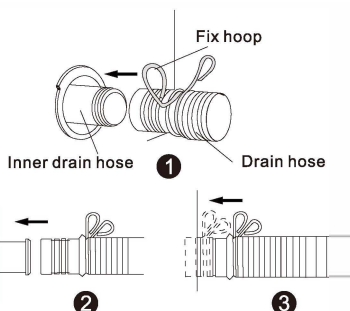


Figure 1

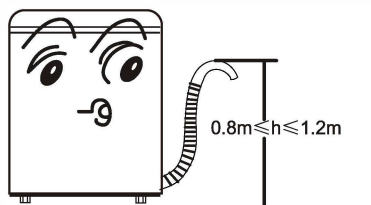


Figure 2

Install the inlet hose

Washing machine has two different kinds of the water inlet style, one is the cold water inlet valve and the other is the cold and hot water inlet valves. For your appliance , if you connect to cold inlet only you can only use the cold water inlet valve.

The cold water inlet valve

If you choose the screw type hose,you can install it as the following steps.

- 1 Check the tap mouth.
Let the tap mate
with the skirtlike nut of
water inlet hose.



 
- 2 Pull the skirtlike nut of one
end of the water inlet hose
upwards, and then screw
into the tap tightly.




- 3 Grasp the water inlet
hose by hand and pull it
downwards to see
whether it is secured.



- 4 Screw the nut on the other
end of the water inlet hose
into the water inlet of the
washing machine to the
most.



- 1.Connect the water inlet hose.
- 2.Insert the power plug into the electrical socket.
- 3.Ensure the drain hose is mounted at the correct height.
- 4.Select a suitable location for the washer on a hard, even surface away from direct sunlight or heat sources, e.g. radiators, cooking appliances, etc.

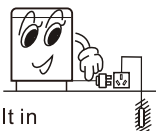

- 5.Any floor unevenness may result in unstable working or abnormal noise.
Please ensure the machine is level.

Notice

⚠ CAUTION


After installation water inlet hose, do not start the washing machine in haste. Open the tap to create certain water pressure in the hose to check whether there is any leakage in the connector on both ends. If the pressure is too high, please shut the tap a little to avoid water leakage.

The cold and hot water inlet valves.(option)

If you choose the washing machine which have cold and hot water inlet valves, you can install it as the following steps.


1

Inspect the threaded fitting on each hose and make sure there is a rubber seal in place in both end.

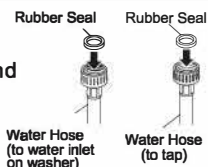


2

Connect the water supply hoses to the hot and cold water faucets tightly by hand and then tighten another 2/3 turn with pliers.

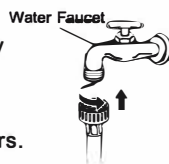


3

 Always run a few liters of water through hose to flush dirt, scale and other debris out of the water lines. Doing so will help prevent future problems with clogged filter screens, and will also allow you to verify which hose is hot and which is cold.



4

Attach the hot water line to the hot water inlet on the back of the washer. Attach the cold water line to the cold water inlet on the back of the washer. Tighten the fittings securely. Turn on both faucets all the way and check for leaks at both ends of the hoses.

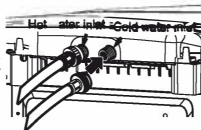

⚠ WARNING

- Do not overtighten. Damage to the coupling can result.
- Do not overtighten the hoses. Overtightening can damage the valves resulting in leaking and property damage.

The operation panel

Water Level/Detergent Amount		Delay Hour		Program		
Soak	7/8 --		01 Mixed	05 Curtain		
Wash	5/6 --		02 Standard	06 Baby		
Rinse	3/4 --		03 Delicate	07 Drum Clean		
Spin	1/2 --		04 Quick	08 Drum Drying		
		Residual Minute				

Process	Water Level	Delay	Program	Play/Pause	Power
A Dehydration	Temp.				
F	E	D	C	B	A

A、The "ON/OFF" button

- Push the "ON/OFF" button to switch on the power.
- To turn off the power, press the "ON/OFF" button.
- If the "start /pause" button is not pushed within 10 minutes, the washing machine will automatically switch off the power.

B、The "Start/Pause" button

After the power is switched on ,press the "start/pause" button to start the machine.

- During operation, press the "start/pause" button to pause the machine.
- Press the "start/pause" button again to restart the machine.

C、The "Program" button

- The default setting is standard procedure.
- According clothing material, quantity and dirty laundry degree, you can choose the right program. For details, see the special features.

D、The "Delay" button

- The display shows the time remaining (in minutes) before the cycle will finish.
- Push the "Delay" button and the display will show the remaining time for the cycle to finish (in hours). The indicator flashes to indicate that the delay function is operating.
- Delay start (2-24hr) option.
- Delay time is the delay till the wash finishes.

E、The "Water Level" button / "Temp."

- When you turn on the power, the default setting is standard procedure. Press the "Start / Pause" button. The machine will perform fuzzy function, the machine will automatically detect the amount of laundry, the water level is set automatically because of as the different degree of wet and dry cloth to determine the actual water level. When the choice is not the standard procedure, there is no fuzzy function, washing machine will display the default level.
- When the machine is powered on , press the [water level] key to select the water level, indicator shows from "1" to "8", then the fuzzy function is canceled, you can select the appropriate level based on the amount of laundry. 1/2 water capacity indicator (flashes a file, lit for 2 files) and so on.
- When you turn on the power, the default setting is mixed cold and hot water. It can directly enter into the water temperature control program by pressing the "Temp." button for 3 seconds. You can push the "Temp." button to select different temperature of water. the default setting is mixed cold and hot water, indicator shows "CH", "C" or "H" to represent mixed cold and hot water, cold water or hot water.

F、The "Process/A Dehydration" button

- The button's function is turn the right wash process for the clothes, the machine has several states for washing ,such as soak, wash, rinse, spin, soak-wash, wash-rinse,rinse-spin,etc.User can choose the proper process for washing clothes.
- After pressing the "ON/OFF" button, it can directly enter into the singer-spin program by pressing the "A dehydration" button for 3 seconds.

G、The "3S" function

After the washing machine starts up, the machine is running, and if necessary, you can simultaneously press the [Delay] + [Program] key three seconds or more to start the "3s" function, beep issue "Didi, Didi" twice, under the child lock, any key is invalid, when any button is touched at this time,the machine will issue an invalid beep.

Lift: Press the [Delay] + [Program] key about three seconds to cancel child lock, beep issue "Didi, Didi" twice, lifting the child lock, key functional recovery. When the program ends, or failure alarm error child lock is automatically released.

Wash Programs

Program	Properties and Uses	Program	Properties and Uses
Mixed	<ul style="list-style-type: none"> Washing Mixed fabrics 	Curtain	<ul style="list-style-type: none"> This program can apply for washing heavy fabrics such as curtain, blankets.
Standard	<ul style="list-style-type: none"> Washing cotton and linen fabric. 	Baby	<ul style="list-style-type: none"> Independent wash procedures, suitable for baby's clothes.
Delicate	<ul style="list-style-type: none"> Delicate items that are machine washable. 	Drum Clean	<ul style="list-style-type: none"> Select this to clean the drum. The powerful spinning force removes impurities and bad odors from inside the drum
Quick	<ul style="list-style-type: none"> Small load of lightly soiled laundry . 	Drum Drying	<ul style="list-style-type: none"> Drying the inner and outer tub to avoid the growth of mildew.

Energy and water labelling test programme in accordance with AS/NZS 2040:

- Standard, Water level 8 is recommended for a normally soiled cotton load.
- The detergent dosage: 19g/kg and anti-foam aid is 2g/kg.
- Detergent dissolvent method: Dissolve the detergent first and pour the dissolved detergent into the machine when the main wash starts.

Preparation before washing

<p>Check if the laundry has any special washing instructions.</p> 	<p>Clear the pockets. Take out loose items such as coins, sand, hairpins etc.</p> 
<p>Tie any long strips, fasten buttons and close zippers.</p> 	<p>The weight of the laundry shall not exceed the rated capacity. Loosen the laundry before placing it evenly in the tub.</p> 
<p>When the machine is running buttons may cause noise. To reduce the noise turn clothes inside out or place them in laundry bags.</p> 	<div style="background-color: black; color: white; text-align: center; padding: 5px; font-weight: bold;">NOTICE</div> <ol style="list-style-type: none"> Check if the laundry is suitable for machine washing. Divide the laundry into color fast and non-colour fast items. Place items that do not absorb water easily into the water by hand. For heavily soiled items, please first remove loose dirt, then apply detergent directly to the stain before washing. For those items that may get lint or are furry or fluffy, please turn them inside out before washing. Do not put laundry polluted by chemicals into the washing machine.

The operation steps

 
①

Connect the water resource and open the faucet.




②

Connect the power.



③

Place the upper drain hose as the figure.

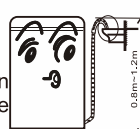

or: Place the drain hose as the figure.



④

Open the lid, put in clothes and suitable amount of washing power. Close the lid.

⑤

Press the "ON/OFF" button.

⑦

Press the "start/pause" button.

Water Level/Detergent Amount

Soak 7/8 • • • • •
Wash 5/6 • • • • •
Rinse 3/4 • • • • •
Spin 1/2 • • • • •

Delay Hour

Residual Minute

01 Mixed 05 Curtain
02 Standard 06 Baby
03 Delicate 07 Drum Clean
04 Quick 08 Drum Drying

Process
A Detergent

Water Level
Temp.

Delay

Program

▶||

⏻

— 35 —

⑥

Depending on your needs, select necessary procedures personalize.

When the programme has finished.

- When the machine stops, the buzzer will buzz continuously for 6 times and the power will be automatically cut off.
- Turn off the water tap.
- Pull out the power plug for safety.


⚠ WARNING

- Keep the lid closed when machine is running, otherwise, it will automatically stop working during spin process and send out abnormal warning.
- The washer will not work if the water does not reach the set level.
- The selection of rinse water level: the level is equal to wash water level. When the rinse program starts, the indicator light which stands for rinse level flickers. User can select the rinse water level according to needs. The rinse water level is always higher than the washing water level. It shows the wash level if not press this button. And only show rinse level when rinse.
- After pressing down [ON/OFF], if the [Start / Pause] button is not pressed, the power will be automatically cut off after 10 minutes.
- The thickness, size and type of clothes will influence the actual capacity. Be careful to only load a reasonable amount of laundry.
- It is suggested not to use high sudsing detergent. Choose a low suds or high efficiency detergent.

Cleaning of the lint bag and filter

- Unplug the washer before cleaning to avoid the risk of electric shock. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the washer. They will damage the finish.

The special circulation water flow is designed for this washer, thus the flock powder and flock residues will be automatically collected into the filtering bag. After application, the user shall regularly clean the filtering bag to remove the flock powder and flock residues. Detail operation methods are following.

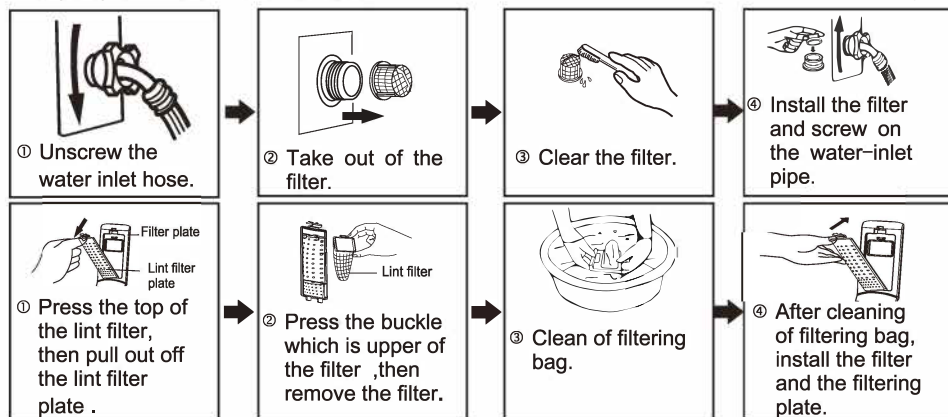

Cleaning the pump filter

Only for the upper drain system, detail operation methods are following. Clean up every two months.



Trouble shooting tips

Common occurrences

Problem	Cause
● The spinning is intermittent when it starts.	● Redistribute the load evenly. Close the top lid.
● The wash procedure pauses.	● The cloth sensor is detecting, it will add water after about 55 seconds.
● Select spin program, but it does not work.	● The program is setting the drain time, a period of time is needed before the spin program starts.
● There maybe have some water in the drain hose when the first use.	● It is the water remaining after the performance inspection by the factory.

✱ If the machine does not work normally, or alarms, please check as the following list. If the problem persists, please contact local service office or the sales service department of our company. Do not attempt to dismantle and repair appliance yourself, it will void the warranty.

Problem	Inspection Items	Problem	Inspection Items
Washer will not turn on.	Reset circuit breaker or replace fuse. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician.	Suddenly stop working.	Is the power or water supply cut off suddenly? If you press the "start/pause" button?
At the first time you use, the machine may have a small amount of water.	Normally, the water was the factory inspection remained.	No spin	When washing machine settings drainage time, it is starting spin after go through a period of time .
No washing	If the power is off or the fuse is burned out. If the power supply voltage is too low. If the water reaches to the required water level.(The machine will not work before reaching the required water level)	Noise	The machine is tilted or shaking? If the coins, zippers and other objects dropped in? Is the noise normal when the motor working ?
Can not operate the buttons.	Did you use the "Child Lock" function ? If you want to choose other function after power on, please press "start/pause" button firstly.	No drain or drain too slowly	Whether the drain is bent, blocking, freezing? Is the highest point of drain above ground 10cm?
No water flows in, or flows slowly.	If the tap turn on, or the water supply cut off? If the screen of the inlet valve is blocked by dirt. whether the tap or the Water-filling pipe has been frozen . If you have choose the "Delay" function? If the "start/pause" button has not pressed?	Control pane become hot.	Electronic Components thermal effect is a normal phenomenon.
Load is too wet at the end of the cycle.	The spin effect will change due to different types of clothing .	Washing effects are not good.	Select a proper procedure . Add the proper detergent quantity according to the instructions in detergent package.
		Wash cycle time is longer than usual.	This is normal. The washer adjusts cycle time automatically to provide optimal results for the selected cycle. The time remaining shown in the display is only an estimate. Actual time may vary.

Display Fault code:

Solutions

E1



No water flows in.



If the tap turn on, or the water supply cut off ?
If it still has such problem , please contact local service office.

E2



The machine does not drain.



Is the water drain hose placed too high? Is the end of water drain hose blocked?

E3



The lid is not closed.



Close the lid.

E4



The water level sensor has failed.



please contact local service office.

E8



The machine is not balance.



If clothing piled up at one side of the barrel or If the machine is placed unsteadily.

CL



The child-lock alarm.



Remove the child-lock function.



TCL Electronics Australia Pty Ltd.

ABN 83 111 032 896

Telephone: 1300 738 149

sales.au@tcl.com

www.tcl.com/au