### the Slice 'n' Carve™ Cordless

Instruction Book - LEK200



**Breville**®



- 2 Breville Recommends Safety First
- 7 Components
- 8 Functions
- 12 Slicing Hints
- 13 Care & Cleaning
- 14 Troubleshooting
- 15 Battery Disposal

### BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

### IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Do not immerse the knife body or USB cord in water or any other liquid.
- Do not remove knife blades from the knife body whilst blades are in operation.
- Do not place your hands near the blades when the knife is in operation.
- Switch off the power outlet and remove the USB plug before removing the blades and/ or cleaning.
- Press the LOCK button after use to ensure no unintentional operation.
- Make sure the motor and blades have completely stopped before disassembling.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Do not leave the appliance unattended when in use. Young children should be supervised to ensure that they do not play with the appliance. Keep out of reach of children.
- Do not let the USB cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
- This appliance is for household use only.

- Do not use this appliance for anything other than its intended use. Do not use outdoors.
- Regularly inspect the USB cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Breville service centre for examination, replacement and repair.
- Disconnect the USB cord before assembling or before cleaning and when the knife is not in use.
- · Never carry the knife by the USB cord.
- Never yank the USB connector to disconnect the USB cord from the USB port; instead, grasp the USB connector as close to the connection as possible and pull to disconnect.
- Do not twist or pull the USB cord around sharp edges or corners.
- Ensure that the USB port is free of any debris before inserting USB cord.
- The battery is non-replaceable. Please refer to the battery disposal instructions on page 15.

### IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.


- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

# PLEASE READ THE FOLLOWING WHEN CHARGING THE KNIFE WITH USB POWER ADAPTOR

- Use only an electrical safety compliant, DC 5V 1A (or a minimum of 5W) or 9V 2A (Fast Charging), USB power adaptor (not included).
- It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- Fully unwind the USB cord before attaching to the knife for charging.
- Connect the knife only with the USB cord provided.
- To protect against electric shock, do not immerse the USB cord or knife in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- It is recommended to regularly inspect the knife and USB cord. To avoid a hazard, do not use the knife or USB cord if they become damaged in any way. If the knife is faulty, return the knife and the USB cord provided to the nearest authorized Breville service centre for examination and or repair.
- During electrical storms, while charging, the knife should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the knife and its electronic components.

## FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

# Components

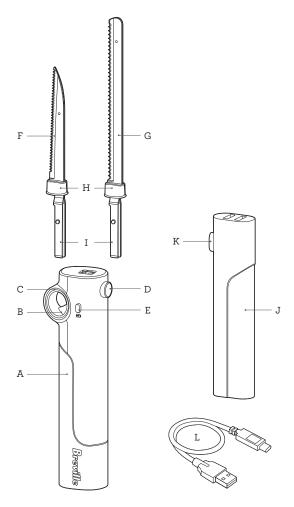

- A. Motor body/handle with 11.1V 1500mAh battery
- B. ON/OFF Trigger
- C. Battery life indicator light
- D. Blades release button (from motor body)
- E. Safety lock button
- F. Stainless steel serrated short blade set

- G. Stainless steel serrated long blade set
- H. Blades safety handling guards
- I. Blades throngs for attaching to motor body
- J. Blades storage case
- K. Blades release button (from storage case)
- L. USB cord for charging



The Breville Slice 'n' Carve™ cordless electric knife comes with an inbuilt 11.1V 1500mAh battery and is designed for convenient, cordless usage. Once fully charged, the electric knife can operate for up to 25 minutes before charging is required, making it ideal for camping, picnics or carving at the table.



### NOTE

For safety, the electric knife can operate continuously for up to 1 minute, then will stop automatically. Press the trigger again to continue operation.

#### BEFORE FIRST USE

- Before using your electric knife for the first time, remove all packaging material and promotional labels.
- Check for any missing or damaged parts as per the components list.
- Clean all parts according to the Care, Cleaning & Storage section of this book.
- 4. To check the current battery life, use the provided USB cord to connect to a power source. The trigger will illuminate a colour that indicates the current % of battery life. Refer to the table titled Charging Colour Table found in this booklet for more details.



### NOTE

This electric knife comes with a charging cable only. A power adaptor is not included.



### NOTE

It is recommended to fully charge the battery before first use. To maximise battery longevity, avoid completely discharging the battery.

## CHARGING THE BATTERY

The electric knife is fully portable once charged, and may take up to 2 hours to recharge once the battery is fully drained if connected to an optimal charging source. The electric knife can be charged using the USB cord provided and a compatible electronic device or DC 5V 1A (or a minimum of 5W) USB power adaptor (not included).

In order to minimise charge time, a DC9V 2A charger can be used to recharge in approximately 2 hours.

1. Ensuring that no blade set is attached, connect the provided USB cord to the unit with a power adaptor and plug into a 220-240V power outlet. Alternatively, if equipped, plug the charging cord into a USB charging outlet directly. The indicator

light on the trigger will light up based on the current battery life. Refer to the Charging Colour Table for more details. The electric knife is now being charged.

- · From fully charged to discharged, the knife operating time is 25 minutes, depending on the load. The charge time will be approximately 2 hours with a DC9V 2A charger.
- The indicator light on the trigger will change colours to indicate the % of battery charge.
- Once the indicator light illuminates white, the electric knife is fully charged and ready to use.
- If operating the electric knife while connected to the charger, the unit will continue to charge, and the indicator light will change colour according to the % of charge. Refer to the In Operation Colour Table found in this book.

#### Charging Colour Table

0114191119 001041 14510	
Colour	% Battery charged
Red (slow flashing)	< 30%
White (slow flashing)	> 30%
White	100%

#### In operation Colour Table

Colour	% left on battery
White	> 30%
Red	< 30%
Red (flashing)	< 5%

#### **BLADES ASSEMBLY**

The Breville Slice 'n' Carve™ Cordless electric knife comes with 2 stainless steel blade set options. Each set is made up of two interlocked blades to create a cutting action. The smaller serrated blade set is perfect for smaller food tasks such as tomatoes and sushi. while the larger blade set suits larger tasks such as bread loaves and roasts.



### CAUTION


The blades of your rechargeable electric knife are sharp! Handle with extreme care. We recommend holding the blade set by the safety guards at all times when handling the blades. Never attempt to fit or remove the blades whilst the knife is in operation Ensure the knife is switched off before removing and changing the blades.

1. To insert, select the matching size of blade set appropriate to the task. The two blades for that set must be interlocked before inserting into the electric knife body. To interlock the blades, hold the shaft ends below the safety guards and slip the rivet found on one blade onto the tip of the other blade.



Always use both blades in the blade set when operating the electric knife.

 Hold the assembled blades by the safety guards and insert blades into the individual blade slots (See Fig. 1). A click will sound when locked into position.

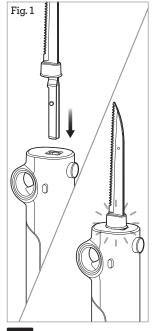

### 0

### NOTE

Ensure both blades in the blade set click into position before use.




### NOTE

This knife was tested by slicing through the length of a hard sausage. The sausage is approximately 55 mm in diameter and cut into slices approximately 5 mm thick. The sausage is stored for at least 4 hours at a temperature of 23°C ± 2°C before slicing.

### **BLADES DISASSEMBLY**

Ensure the electric knife is not turned on before disassembling the blade set from the unit. The light ring should not illuminate.

- Hold the blades by the safety guard, aimed away from the body and press the BLADE RELEASE button on the body to eject and lift the blade set out.
- 2. To return the blade set to the blades storage case, press and hold the RELEASE button on the storage case and holding the knife set by the safety guard, place the blade into the slots and push in (See Fig. 2).

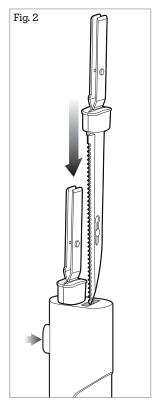

### USING YOUR BREVILLE PORTABLE ELECTRIC KNIFE

- Hold the electric knife
  with the blade set
  positioned away from
  your body. Press the safety
  lock button to unlock; the
  light ring on the trigger
  will illuminate based on
  the current battery life.
  The electric knife is ready
  to use.
  - If no action is taken for 5 seconds, the electric knife will turn off and no longer be activated by the trigger alone.
     Press the safety lock button again to resume.



### NOTE

Always use both blades when operating the electric knife.



### NOTE

Always ensure blades are fully locked into position before operating.

2. Press and hold the trigger to start the electric knife. The light ring will continue to illuminate red or white, depending on the % of battery life remaining. Refer to the In Operation Colour Table for more details.



### **CAUTION**

Avoid contact with moving parts. Keep hands, hair, clothing and other utensils away from moving blades during operation to prevent personal injury and/or damage to the knife.

- Release the trigger to stop operation. After using the knife, press the safety lock button to place the knife back into the safe mode immediately. This will stop the knife from being activated inadvertently.
  - After 5 seconds without action, the light ring will no longer illuminate, and the electric knife will turn off.



### CAUTION

Do not allow children to operate the appliance.

When using the electric knife, take care not to allow moisture or liquid to enter the motor body.

- Breville does not recommend operating the electric knife while charging.
- The electric knife can be operated continuously for up to 1 minute, then will stop automatically. The indicator light will continue to illuminate. Press the trigger to continue operation.
- The electric knife can operate for up to 25 minutes before charging is required.



- Use to slice bread, meat, vegetables and to cut cakes.
- Always place food to be sliced on a stable wooden or plastic cutting board. Do not slice food on crockery, or on metal, or bench tops as scratching may occur.
- Gently guide blades through food. A sawing action is not necessary.
   Do not force blades through food.
- To maintain sharpness of blades, do not cut through frozen foods, bones, fruit pips and stones or any other hard substances.
- For best results when carving meat and poultry, allow cooked meat to stand for 10–15 minutes before slicing. This allows the juices to set and makes carving easier and neater.
- Before carving meat or chicken, remove any skewers.
- A carving fork is recommended for steadying meat and assists in carving even slices.
- Do not attempt to sharpen blades.



Before cleaning, ensure that the electric knife is not connected to a power source, and the light ring is not illuminated.

Ensure the blade set has been removed from the electric knife when not in use.

- Gently clean the blade sets in warm soapy water.
- Use a dry cloth to clean the body of the electric knife.
- Do not immerse the unit in water.



### WARNING

- Knife blades are sharp.
   Always handle with care.
- Keep the appliance out of reach of children.

### **STORAGE**

- Always store the blade sets in the blades storage case provided.
- Do not store the blades attached to the knife body of the electric knife.
- Store the electric knife in a cool, dry place.




POSSIBLE PROBLEM	POSSIBLE REASON	EASY SOLUTION
If light is not illuminating	Battery is out of charge.	<ul> <li>Charge the battery using USB cable.</li> </ul>
If blade set falls out	The eject button has been pressed.  Blades were not locked	Ensure the eject button is not inadvertently pressed.      Ensure blades are
	in correctly	pushed and clicked into place.
	<ul> <li>The blade set is not fully inserted.</li> </ul>	<ul> <li>Ensure blade inlet is clear of blockage and insert the blades until the blades engage with the unit.</li> </ul>
If the knife stalls during operation	<ul> <li>Too much pressure/ force applied.</li> <li>The knife has been in operation for 1 minute continuously.</li> <li>Overheat protection activated.</li> </ul>	<ul> <li>Reduce the force into the object being cut.</li> <li>Re-start the knife by pressing the trigger to begin slicing.</li> <li>Cease using the knife allowing it to cool before resuming operation.</li> </ul>
Blade set not ejecting from storage case or the motor body	Blockage in blades storage case or motor body.	Ensure the blades storage case or attachment point is free of any blockage and the eject button is pressed firmly to remove blades.
Blade set not cutting through the food	Wrong knife set, the food is too hard, blades not properly fitted.	Select appropriate blade for food being cut and adjust downward force and ensure blades are correctly fitted and locked in place. If food is too hard, do not use knife to cut.
Knife operating on its own.	Blockage in the trigger area and safety lock button has been activated.	Ensure trigger area is free of any blockage and nothing is pressing on the lock button.
The knife is charging slowly	<ul> <li>The USB adaptor is not suitable for fast charging.</li> </ul>	Plug the USB charging cord into a suitable charger.

### **BATTERY DISPOSAL**

At the end of life for the knife, the battery must be removed before disposal. Disconnect the appliance from power supply before disassembling. Use a screwdriver to remove the rear cover of the unit and remove the 2 Phillips head screws. Slide the rear housing of the knife off and remove the 1 Phillips head screw in the side of the unit. Split the halves apart and disconnect the 3 battery connections from the PCB and dispose of the battery safely. Check with your local council for battery collection options.

#### DO NOT DISPOSE IN YOUR HOME RUBBISH BINS.

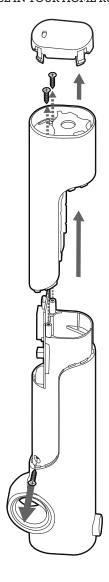

### Breville Customer Service Centre

**Australian Customers** 

**Phone:** 1300 139 798

Web: www.breville.com

**New Zealand Customers** 

**Phone:** 0800 273 845

Web: www.breville.com

## **Breville**

Breville, the Breville Logo and Slice 'n' Carve are trademarks of Breville Pty Ltd ("Breville") and Breville's products are distributed in Australia and New Zealand under license.

Copyright Breville Pty. Ltd. 2023. All other brand names may be trademarks of their respective owners.

Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.

LEK200 ANZ - A23