



GoBlend

Personal Blender

Instruction Booklet

PB1000A

PB1000T

PB1000P

PB1000B

Please read these instructions carefully
and retain for future reference.



Contents

| | |
|-------------------------------------|----------|
| Sunbeam's Safety Precautions | 1 |
| Features of your GoBlend | 2 |
| Using your GoBlend | 3 |
| Blending Tips | 4 |
| Care and Cleaning | 5 |
| Recipes | 6 |

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM GOBLEND.

- Ensure fingers are kept well away from the blades when in use.
- Do not blend warm/hot ingredients. Always cool ingredients to room temperature before processing.
- Always operate on a flat surface.
- Take care when removing the bottle from the base, emptying the bottle or during fitting and removal of blade system, as blades are extremely sharp.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Do not operate for more than 30 seconds at a time, with a heavy load.

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your GoBlend Personal Blender

Removable Spill-proof lid

The extra wide drinking spout is perfect for enjoying your drink. The carry handle makes carrying easy, or can be tied onto your sports bag.

600ml Bottle

Blend directly into the 600ml BPA free dishwasher safe drinking bottle.

Sharpened blade assembly

Pulverize ice and frozen fruit with the stainless steel blade assembly.

Motor base

 
The base houses a 300 watt motor.

One touch blending action

Quick and convenient one touch blending action by pressing the bottle down into the base.

Feet

Keep the blender secure on the bench top.

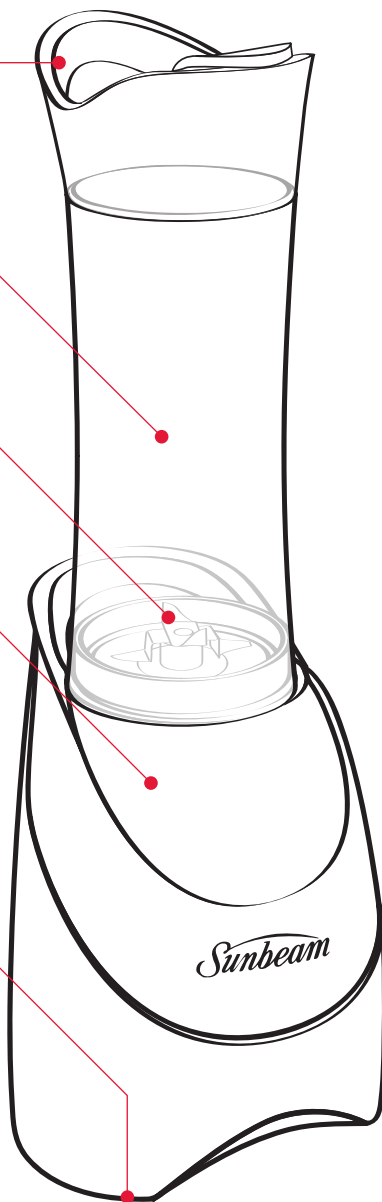

Using your GoBlend

1. Place your recipe ingredients inside the bottle.

Note: Do not exceed the maximum indicated level - 600ml.

2. Tightly screw the blade system onto the bottle, with the blades pointing down into the bottle. See figure 1.

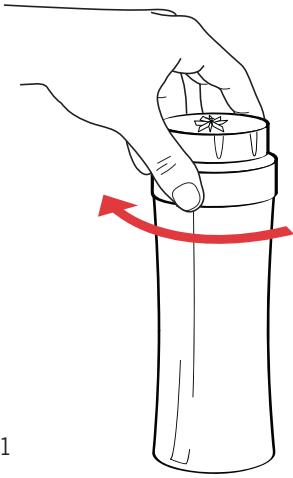 


Figure 1

3. Once the blades are secured tightly, turn the bottle over so the blades are now on the base.

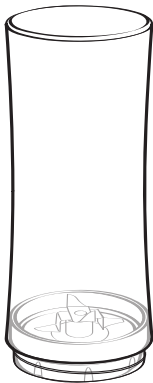 


Figure 2

4. Place the bottle into the motor base by aligning the graphic arrows. Blending will start with one simple touch when you press down onto the bottle. To lock the bottle in the base for hands-free operation, simply turn the sport bottle clockwise in the base. Blending will stop once you either stop pressing the bottle into the base or once you unlock the bottle from the base. See figure 3.

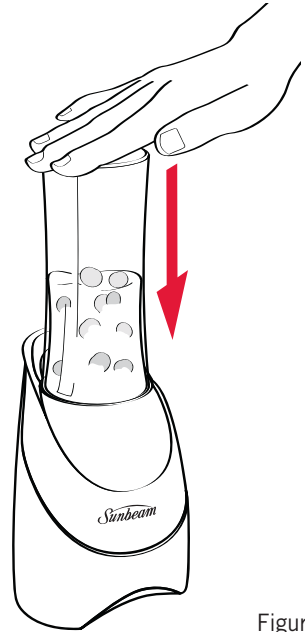 


Figure 3

5. Once blending is complete, remove the bottle from the appliance base by turning in an anti-clockwise direction. Turn the bottle over and unscrew the blade system. Attach the spill free drinking lid.

Blending Tips

1. For optimal performance, place desired ingredients in the bottle in the following order: liquids, fresh ingredients, frozen fruit, yoghurt and ice cream.
2. Cut all firm fruits & vegetables into pieces not larger than 1.8cm x 2.5cm.
3. Do not overload the bottle. If the motor stalls, turn the blender off immediately, unplug the unit and let it cool for at least 15 mins. Then, remove a portion of the food and continue.
4. This blender will not mash potatoes, whip egg whites, mix dough or grind raw meats.

TIP: After you've consumed your blended beverage, wash out the bottle and reuse it throughout the day for water or other cold liquids.

Note: For optimal performance, place desired ingredients in the bottle in the following order: Liquids, fresh ingredients, frozen fruit, yogurt and ice cream.



Figure 4

Care and Cleaning

Quick cleaning method

Half fill the blender with warm water and a small amount of detergent. Press & hold bottle down for one touch blending. Then remove the bottle and rinse it under running water

Caution: Take care when cleaning the blades, as they are extremely sharp.

Bottle and drinking lids can be placed in the dishwasher for easy cleaning.

To clean the motor base

Use a damp, soft sponge with mild detergent and wipe over the motor base.

Note: Never immerse the motor base in water.

Note: Do not place the motor base in a dishwasher.

Storing your GoBlend

After cleaning, reassemble blade assembly to open end of the bottle and then place in the blender base. Snap the drinking lid on the other end of the bottle.

Recipes

Watermelon Refresher

- 1 ½ cups fresh watermelon, cubed
- ½ cup fresh strawberries, de-stemmed
- ½ cup raspberries, frozen
- 1 small handful fresh mint leaves
- 1. Freeze the watermelon cubes for 2-3 hours. You want them to be frosty but not completely frozen.
- 2. Add all the ingredients to your GoBlend and process until well blended.

Morning Dew

- 2 Fresh Kiwis, peeled and diced
- 1 cup Honeydew Melon, chopped
- ¼ cup cucumber, peeled and chopped
- Small handful of baby spinach leaves
- ½ cup Yogurt (Plain or Vanilla)
- 1 cup Milk
- 6 Ice Cubes
- 1. Place all ingredients into your GoBlend. Blend until smooth puree.

Blast of Blue

- 1 cup blackberries
- 1 cup blueberries
- 1 cup kiwi, peeled and chopped
- 1 teaspoon honey
- ½ cup ice cubes
- 1. Place all ingredients into your GoBlend. Blend until smooth puree.

Morning Mango Mover

- 2 cups diced mango, fresh or frozen
- ½ cup chopped fresh or frozen peaches
- ½ cup orange juice
- 1 cup ice cubes
- 1. Place all ingredients into your GoBlend. Blend until smooth puree.

Mango Blueberry Bliss Smoothie

- 1 mango, peeled and cubed
- ½ cup of blueberries
- 1 banana, frozen or fresh
- 1 teaspoon of maple syrup
- 1 cup coconut water
- 1. Place all ingredients into your GoBlend. Blend until smooth puree.

Berry Boost Smoothie

- ½ cup blueberries
- ½ cup blackberries
- ½ cup cherries, fresh, tinned or frozen
- 1 banana, peeled
- ¾ cup almond milk
- 1 tablespoon flax oil
- 1 teaspoon honey
- dash of cinnamon
- 1. Place all ingredients into your GoBlend. Blend until smooth puree.

Recipes (continued)

Strawberry Forever Smoothie

- 1 cup strawberries
- 1 frozen banana, sliced
- 1 ½ cups coconut milk
- 1 teaspoon honey

1. Place all ingredients into your GoBlend.
Blend until smooth puree.

Peachy Keen Smoothie

- 1 cup peaches, pitted, peeled, and sliced (or canned)
- ½ cup strawberries or raspberries
- ½ cup strawberry low-fat yoghurt
- ½ cup milk

1. Place all ingredients into your GoBlend.
Blend until smooth puree.

Frozen Berry Frappe

- 125g frozen berries
- 1 scoop frozen yoghurt
- 250ml milk

1. Blend all ingredients in your GoBlend.
Blend for 30 secs or until smooth.

Banana Bounce

- 2 scoops Vanilla protein powder
- 2 tablespoons rolled oats
- 2 bananas
- 1 cup unsweetened almond milk
- ½ cup cold water
- 1 teaspoon honey
- ¼ teaspoon cinnamon
- 4 ice cubes

1. Place all ingredients into your GoBlend.
Blend until smooth puree.

Energy Lime Splice

- 2 scoops vanilla protein powder
- 1 cup unsweetened almond milk
- 1 frozen banana
- 1 tablespoon lime juice
- Zest of one lime
- ½ teaspoon maple syrup

1 cup ice cubes
1 tablespoon non-fat plain Greek yogurt
1. Place all ingredients into your GoBlend.
Blend until smooth puree.

Notes

12 Month Warranty

This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Alternatively, you can send a written claim to Sunbeam to:

Australia

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

New Zealand

Level 6, Building 5, Central Park,
660-670 Great South Road,
Greenlane, Auckland

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and send a copy of your original receipt to Sunbeam.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested.

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
 - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;
 - servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
 - use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
 - exposure of the product to abnormally corrosive conditions; or
- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

In Australia

Visit www.sunbeam.com.au

Or call 1300 881 861

In New Zealand

Visit www.sunbeam.co.nz

Or call 0800 786 232



is a registered trademark.

Made in China.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2014.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street

Botany NSW 2019 Australia

Level 6, Building 5, Central Park

660-670 Great South Road

Greenlane, Auckland

New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.