



Before using your washing machine, please read this manual carefully and keep it for future reference.

# **Washing Machine**

## **OWNER'S MANUAL**

### **MODEL:OWM75W**

#### **Read This Manual**

Inside you will find many helpful hints on how to use and maintain your washing machine properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your washing machine. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of Troubleshooting Tips first, you may not need to call for service.

## Contents

|   |    |
|---|----|
| Safety Precautions .....                                  | 3  |
| Overview of Washing Machine .....                         | 7  |
| Install Washing Machine .....                             | 8  |
| Operate Washing Machine .....                             | 11 |
| Checklist and Preparation before Washing Clothes .....    | 11 |
| View of Control Panel .....                               | 16 |
| Select the procedure .....                                | 18 |
| Table of Washing Procedures .....                         | 22 |
| Maintenance .....   | 25 |
| Cleaning and Maintenance of Washing Machine Cabinet ..... | 25 |
| Troubleshooting .....                                     | 27 |
| Error Codes.....  | 28 |
| Appendix .....  | 29 |
| Care Label.....   | 29 |
| Product Specifications .....                              | 30 |

## Safety Precautions

### ■ Safety Precautions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Electrical connection must be made as per local wiring rules and regulations. Do not disconnect the appliance with wet hands or bare feet, and do not disconnect the power cord with extreme force.
- Remove appliance from power supply before cleaning or performing maintenance.
- The new hose set with this appliance must be used. Do not reuse old hose sets.
- This appliance is for indoor use only.
- In certain circumstances electrical appliances may be a safety hazard. Check the conformity of voltage and power settings, which are specified on the information plate attached to the appliance and/or packaging, with the usage conditions available.
- Do not place heavy objects in or on these appliances, or use for storage, or let children play or swing from the door. Do not use the appliance until fully installed.
- The electrical connection must be accessible after installation.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance is not to be used if industrial chemicals have been used for cleaning.

## Safety Precautions


- CAUTION - If this appliance is supplied from a cord extension set or an electrical portable device, the cord extension set or electrical portable device must be positioned so that it is not subjected to splashing or ingress of moisture.
- After a washing cycle, wait 2 minutes before opening the door. If water is still visible, do not open the door.
- Undergarments that contain metal reinforcements should not be placed in the appliance. Damage to the appliance can result if metal reinforcements come loose during the washing cycle.
- Do not cover the air inlet or exhaust openings.
- If appliances has ventilation openings in base, ensure carpet does not obstruct the openings.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the appliance door is restricted.
- The maximum mass of dry load for washing is 7.5kg.
- Do not overturn the appliance either during operation or during maintenance.
- This appliance is for indoor use only.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and Breakfast type environments
- Packaging materials can be dangerous to small children - dispose of wisely.
- Do not install in wet rooms (like bathrooms) or areas with caustic or explosive gases.

## Safety Precautions

- All travelling bolts must be removed before operation, otherwise the appliance will be damaged.
- Run the appliance washing cycle once without clothes before use.
- Do not wash or dry carpets or floor rugs in this appliance.
- Take care of hot water that is released when draining.
- Never refill water by hand during a washing cycle.
- Do not close the door with excessive force.
- This appliance has only one inlet for water (cold).
- Please remember to disconnect water and power supplies when the appliance will not be used for long periods of time.
- Do not climb the appliance or sit on the top cover.
- This appliance should not be installed in a humid place.
- Do not build this appliance in.
- Before opening the door after a washing or drying cycle, check that the drum has stopped spinning. Do not add or remove clothes while the drum is spinning.
- The transport bolts should only be reinstalled into this appliance by an authorised person.
- Do not allow the water drained out of the appliance to accumulate.
- When moving the appliance, never hold extruding parts of the appliance (especially the door).
- CAUTION – Do not connect to the hot water supply.
- Flammable and explosive or toxic solvents should NOT be used in this appliance. Petroleum products and alcohol for example, should not be used as detergents. Only use detergents suitable for front loading washing machines.


## Overview of Washing Machine

### ■ Components

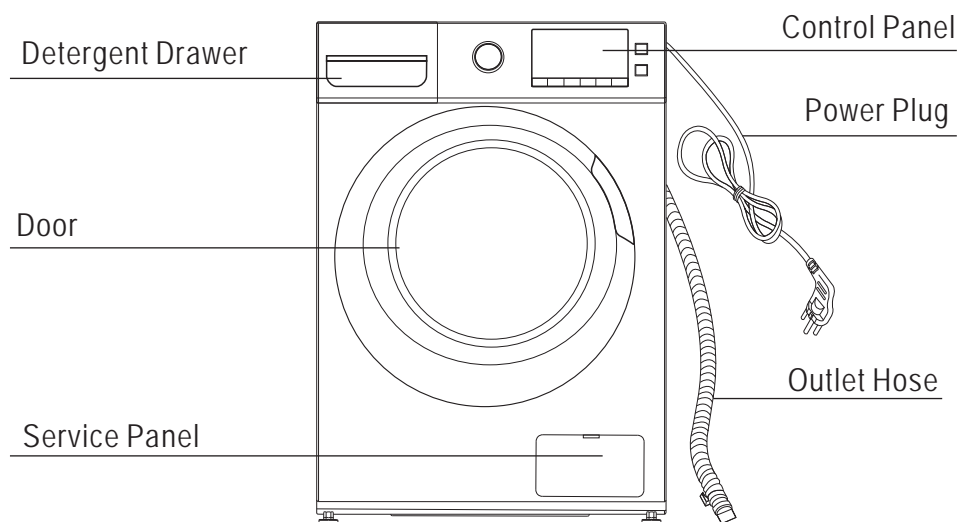


## Overview of Washing Machine

### Detergent Box

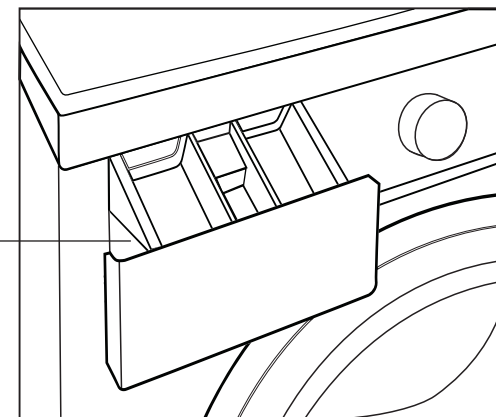

### ■ Accessories

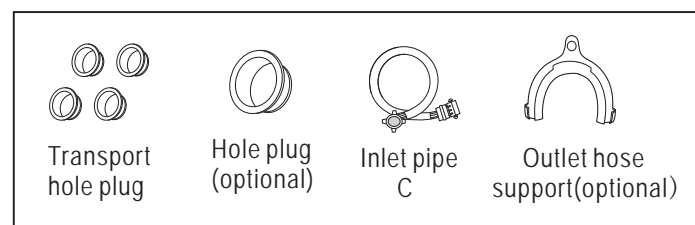



## Install Washing Machine

### ■ Unpacking the washing machine

Unpack your washing machine and check if there is any damage during the transportation. Also make sure that all the items in the attached bag are received.

If there is any damage to the washing machine during the transportation, or any item is missing, please contact the local dealer immediately.


### ■ Dispose the packing materials

The packing materials of this machine may be dangerous to kids. Please dispose them properly and avoid easy touch by kids. Please dispose the related packing materials according to the relevant local regulations. Please do not throw the packing materials away together with the other daily living rubbishes.

### ■ Remove transport bolts

Before using this washing machine, transport bolts must be removed from the backside of this machine. Please take the following steps to remove the bolts:

1. Loosen all bolts with spanner and then remove them.
2. Stop the holes with transport hole plugs.
3. Keep the transport bolts properly for future use.

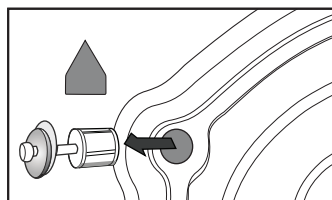

### ■ Select the location

Before installing the washing machine, the location characterized as follows shall be selected:


- Rigid, dry, and level surface (if not level, please make it level with reference to the following figure "Adjust Leg")
- Avoid direct sunlight
- Sufficient ventilation
- Room temperature is above 0°C
- Keep far away from the heat resources such as coal or gas.

Make sure that the washing machine will not stand on power cord.

Do not install the washing machine on the carpet floor.

### ■ Adjust Leg

1. When positioning the washing machine, please first check if the legs are closely attached to the cabinet. If not, please turn them to their original positions with hand or spanner and tighten the nuts with spanner.
2. After positioning the washing machine, press four corners on top cover of washing machine in sequence. If the washing machine is not stable when being pressed, this leg shall be adjusted.

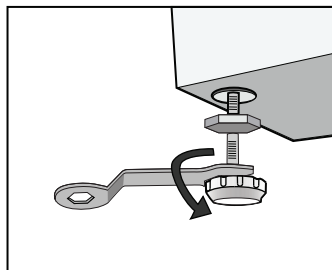


## Install Washing Machine

3. Ensure the positioning status of washing machine. Loosen the lock nut with spanner and turn the leg with hand until it closely contacts with the floor. Press the leg with one hand and fasten the nut closely to the cabinet with the other hand.
4. After being locked properly, press four corners again to make sure that they have been adjusted properly. If it is still unstable, it has to repeat Steps 2 and 3.
5. Put a solid cylinder (e.g. pop cans) oppositely on the top cover of the washing machine from the left, right, front and back directions. If the cylinder keeps stable, the washing machine is positioned level. If it rolls, the washing machine is positioned unlevel. The rolling direction is the direction of lower ground surface. Then, the two legs in this direction shall be raised at the same time until the washing machine is level. Steps 1-3 are repeated to make the bottom legs closely against the ground and the nuts shall be locked tightly.

### ■ Connect inlet pipe


Connect the inlet pipe as indicated in the figure.

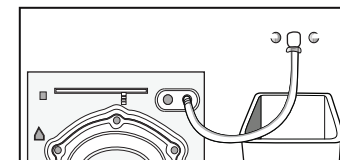

### ■ Install inlet pipe


1. Connect the elbow to tap and fasten it clockwise.
2. Connect the other end of inlet pipe to the inlet valve at the backside of washing machine and fasten the pipe tightly clockwise.

Notes: after connection, if there is any leakage with hose, then repeat the steps to connect inlet pipe. The most common type of tap shall be used to supply water. If tap is square or too big, then standard tap shall be changed.

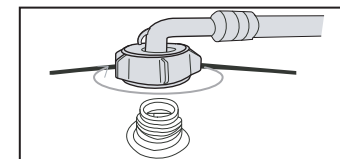


### ■ Place outlet hose

Put it beside the water trough.

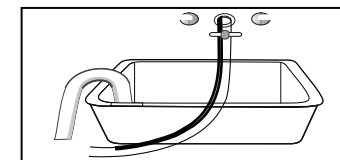



### ■ Hole plug

This Hole plug is used to jam the hole on the back cabinet.

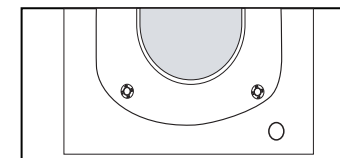

## Install Washing Machine

2. Connect it to the branch drain pipe of the trough.

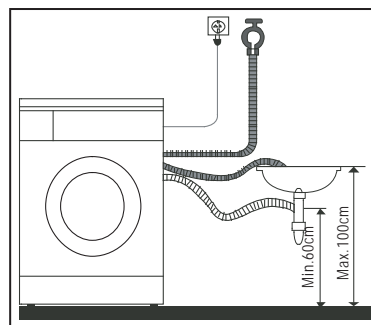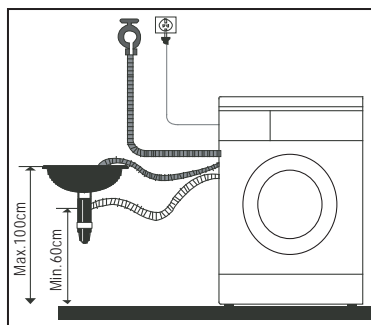


- It can drain the water up and down, outlet hose shall not be installed at a height beyond 100cm and its end shall not be immersed in water.


Position outlet hose properly so that the floor will not be damaged by water leakage.

Notes:

If the machine has outlet hose support, please install it like the following pictures.

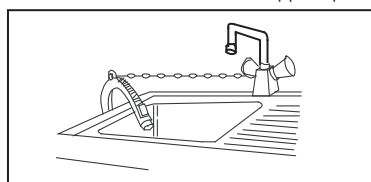

- When installing outlet hose, fix it properly with a rope.
- Position outlet hose properly so that the floor will not be damaged by water leakage.

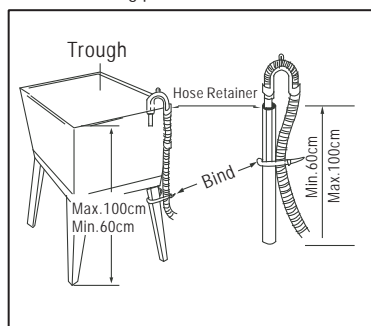

- If outlet hose is too long, do not force it into washing machine as it will cause abnormal noises.

### ■ Electrical Connection

- As the maximum current through the unit is 10A when you are using its heating function, please make sure the power supply system (current, power voltage and wire) at your home can meet the normal loading requirements of the electrical appliances.
- Please connect the power to a socket which is correctly installed and properly earthed.
- Make sure the power voltage at your place is same to that in the machine's rating label.
- Power plug must match the socket and cabinet must be properly and effectively earthed.
- Do not use multi-purpose plug or socket as extension cord.
- Do not connect and pull out plug with wet hand.
- When connecting and pulling out the plug, hold the plug tightly and then pull it out. Do not pull power cord forcibly.
- If power cord is damaged or has any sign of being broken, special power cord must be selected or purchased from its manufacturer or service center for replacement.

## Install Washing Machine

### ⚠ WARNING

1. **This machine must be earthed properly.** If there is any short circuit, earthing can reduce the danger of electrical shock.  
This machine is equipped with power cord, which includes plug, earthing wire at earthing terminal.
2. Washing machine shall be operated in a circuit separate from other electrical appliances. Otherwise, power protector may be tripped or fuse may be burned out.

## Operate Washing Machine

### ■ Checklist and Preparation before Washing Clothes

Please read this operation method carefully to avoid the troubles of washing machine and damages of clothes.


#### Check if the first-washed clothes will be decolourised

After a white towel touched with liquid detergent is used to wash the invisible corners of the clothes, check if the white towel is stained with clothes' original color.

As for the scarves and those clothes that easily get decolourised among imported clothes, please wash them separately before washing.

As for the stains on sleeves, collars and pockets, use the liquid detergent and wash it with brush gently. Finally put them into the washing machine to achieve more ideal washing effects.

As for temperature-sensitive clothes, they shall be washed as required in the labels. Otherwise, it may cause colour change or distortion.

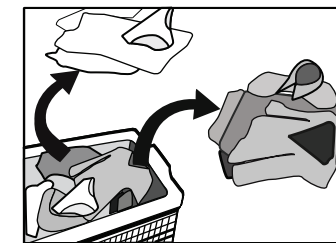

#### Keep in Mind:

Never put the clothes to be washed in washing machine for a long period of time. Otherwise it may get moldy and cause spots. Therefore, please wash the clothes in time. The clothes also may get colour changed or distorted if they are not washed according to the stated washing temperature.

#### Clothes that can not be washed by washing machine

The clothes that may get distorted if being immersed in water:

Ties, waistcoats, western-style clothes, outer garments etc. may have obvious shrinkage if being immersed in water; the decolourised clothes such as blended spinning clothes of artificial fiber etc.

## Operate Washing Machine

Wrinkle-style clothes, embossed clothes, resin clothes etc. may get distorted when being immersed in water. Among cotton and wool materials, the clothes that get easily distorted are wrinkle-style silk, fur products and fur decorations;

Clothes with decoration, long dress and traditional clothes etc are the products to get decolourised easily.

Please do not wash the clothes without material labels and washing requirements.

Never wash the clothes stained with the chemicals such as gasoline, petroleum, benzene, paint thinner and alcohol.

### Please pay attention with regard to detergents

"Low bubble" detergent or washing powder or washing powder special for drum washing machine shall be selected according to fiber types (cotton, synthetic fiber, soft products and wool products), colors, washing temperatures, dirty degrees and types. Otherwise, excessive bubbles may be generated and overflowed out of the drawer so that accidents may take place.

Bleach belongs to alkali type and can damage clothes, so it is suggested to use as little as possible.

Powder detergents can easily leave the residues in the clothes so as to generate the bad smell, so they shall be sufficiently rinsed.

Detergent can not easily get dissolved completely if there is too much detergent or water temperature is rather low. It can remain in clothes, pipes and washing machines to pollute the clothes.


Washing shall follow the weight of clothes, dirty degrees, local water hardness as well as the recommendations from the detergent manufacturers. Please consult the water company if you are not clear of water hardness.

### Notes:

Keep detergents and additives in safe and dry places out of touch by kids.

### Please take out the items out of the pockets.

Please check the pockets of the clothes to be washed, empty the rigid items such as decorations and coins, otherwise washing machine may be damaged or have abnormal operation.

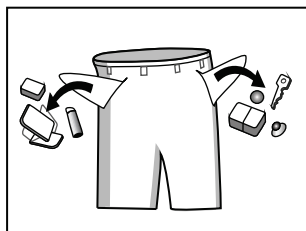

### For the clothes to be washed, they are classified according to the following characteristics:

The symbol types of care labels: the clothes to be washed are classified into cotton, blended fiber, synthetic fiber, silk, wool and artificial fiber.

## Operate Washing Machine

Color: white and colourful colors shall be identified. All new colour ful articles shall be washed in a separate way.

Size: the articles of different sizes are washed together to increase the washing effects.


Sensitivity: soft articles shall be washed separately. As for new pure wool textiles, curtains and silks, the soft washing procedure shall be selected. Check the labels in all washing articles.

The clothes shall be sorted before being put into washing machine. As for the curtains with hooks, the hooks shall be removed before being washed.

The decorations on the clothes may damage the washing machine. As for the clothes with buttons or embroideries, they shall be turned over before being washed.

### Clean up fasteners:

Zips shall be zipped close and buttons or hooks shall be fixed. The loose band or ribbon shall be bound together.

 It is suggested to put bras into the pillowslip with zip or buttons sealed to prevent the steel wire from popping out of bras into the drum and damaging the machine.

Especially delicate textiles such as laced curtains, small articles (tight socks, handkerchiefs, ties etc.) shall be put into string bag for washing.

When washing a single big and heavy dress such as Turkish towels, jeans, wadded jackets etc., it may easily cause great eccentricity and give alarm due to great unbalance. Therefore it is suggested to add one or two more clothes to be washed together so that draining can be done smoothly.

### Clean away dusts, stains and pet hairs from the clothes.

The clothes may be damaged and disturb washing effects during the friction between dusts, stains and clothes.



### To protect baby skin

Baby articles (baby clothes and towels) including napkins shall be washed separately.

If they are washed together with the adults' clothes, they may be infected. Rinsing times shall be increased to ensure the thorough rinsing and cleaning without the detergent residues.

It is suggested that the parts that are easily stained such as white sockets, collars and sleeves etc. shall be hand washed before being put into washing machine to achieve more ideal washing effects.

Please use powder or liquid detergents. The residues of the soap could remain in the gaps of the clothes if soap is used.

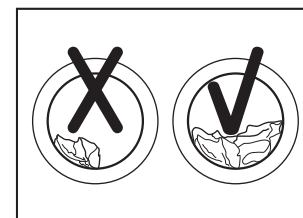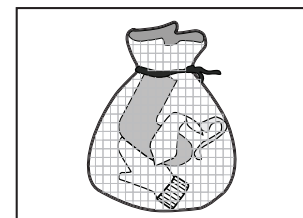

# Operate Washing Machine

Confirm the washing capacity:  
Do not put excessive washings; otherwise it may affect the washing effects. Please confirm the maximum affordable washing quantity according to the following table.

| Fiber Type | Maximum Loading Capacity |        |
|------------|--------------------------|--------|
|            | 7.5kg                    | 10.0kg |
| Cotton     | 7.5kg                    | 10.0kg |
| Synthetics | 3.75kg                   | 5.0kg  |
| Wool       | 2.0kg                    | 2.0kg  |
| Delicate   | 2.5kg                    | 2.5kg  |


**The clothes which easily get fuzzed shall be turned over for washing**  
The clothes which easily get fuzzed shall be washed separately; otherwise the other articles can be stained with dust and thrum etc. Preferably, black clothes and cotton clothes shall be washed separately because they can easily get stained with the thrums of other colors when being washed together.  
Please check before washing.

**Washing machine shall not wash water-proof materials (ski suits, outside napkin pads, curtains).**  
As for the fiber products that water can not get soaked easily into such as water-proof cushions, and clothes, it is better not to wash. Otherwise there will be water bursting out or abnormal vibration to cause danger while rinsing and draining so that the clothes also may be damaged. (Such as outside napkin pads, raincoats, umbrella, ski suits, car covers, sleeping sacks etc.)

**Cautions during Draining**  
Draining of normal clothes:  
Moistures of washings are drained through drain hole.  
Draining of water-proof clothes and fiber products:  
In the normal washing and draining status, moistures of water-proof clothes and fiber products can not be drained while washing water is gathered in one direction so that the eccentricity of washing machine is too great and vibration or moving is caused.

# Operate Washing Machine


## ■ Quick start

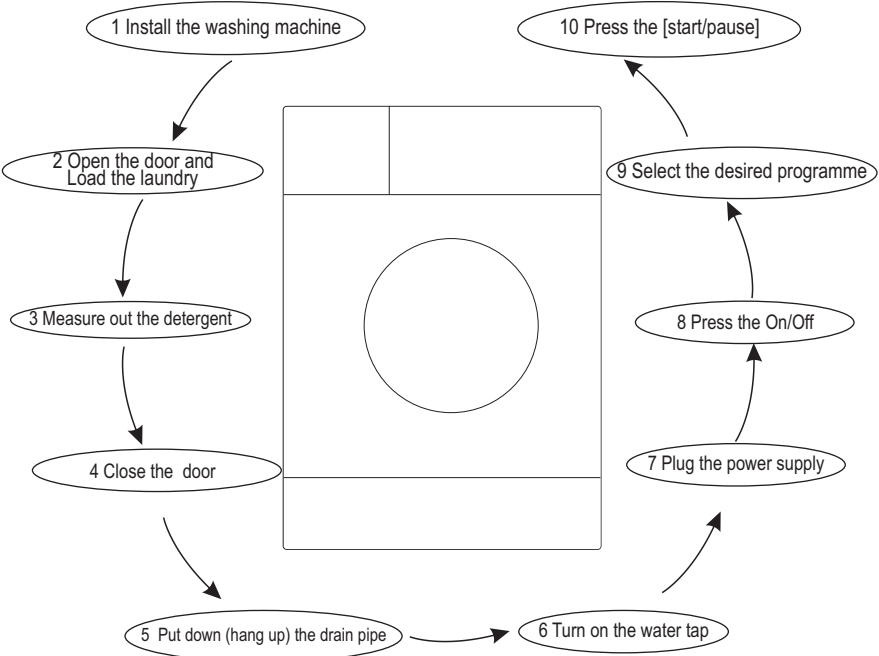

After washing notes:  
1. After washing, the washing machine will make the sound;  
2. Close the water tap;  
3. Press the power and pull out the power plug.

Operate Washing Machine

■ View of Control Panel

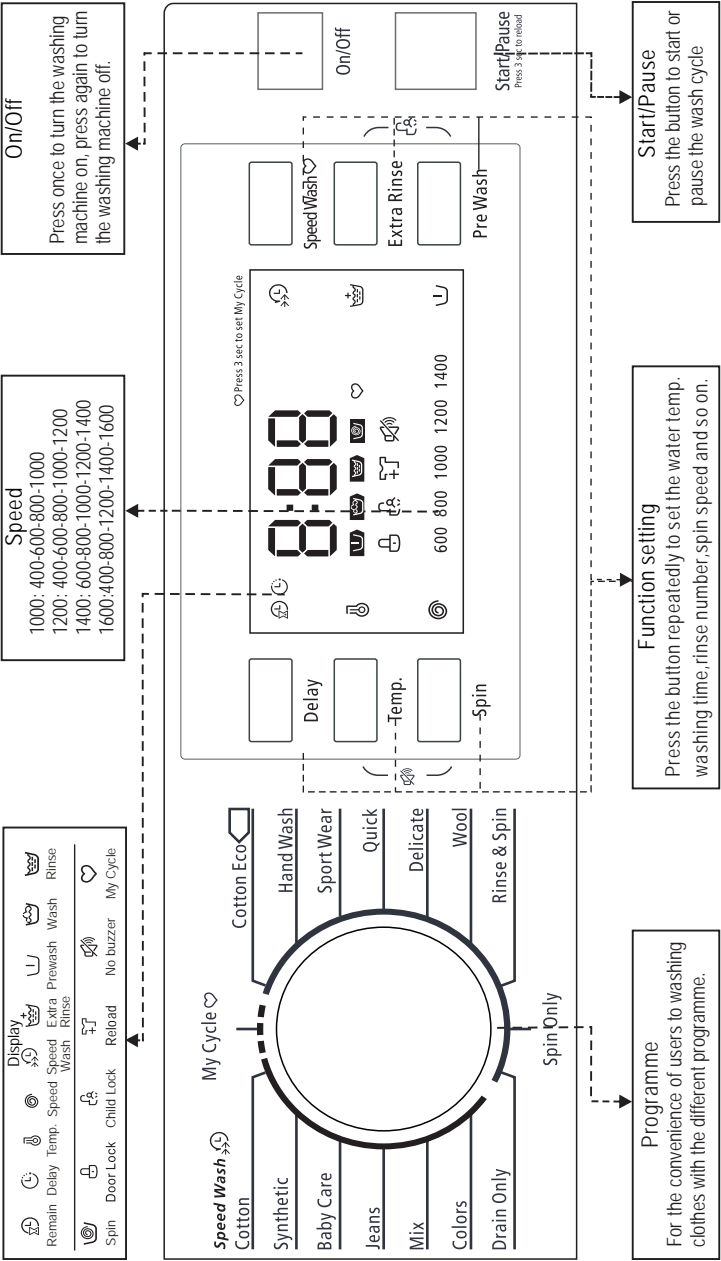

Operate Washing Machine

- 1.The Control panel line chart is for reference only, Please refer to real product as standard.
- 2.The Control panel could be changed without written notice. Please visit the website of Washing Machine or call up the service line for consultation.
- 3.When the lights of Speed (600,800,1000,1200,1400) are off means the speed is 0.

# Operate Washing Machine

## ■ Washing Clothes at first time

Before washing clothes at first time, the washing machine shall be operated in one round of the whole procedures without clothes in as follows:


- 1.Connect power source and water.
- 2.Put a little detergent into the box and close it.
- 3.Press the button "On/Off".
- 4.Press the button "Start/Pause".

The drawer is separated as follows:

I: Pre-detergent or washing powder.

II: Main detergent

☼ : Washing additive,such as fabric softener.

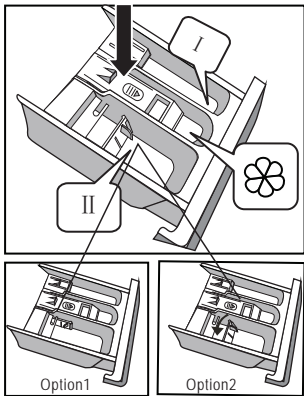

## ■ Put detergent into washing machine.

- 1.Pull out the drawer.
- 2.Fill pre-detergent into Case I (when necessary).
- 3.Fill detergent into Case II.
- option1: detergent (powder) . option2(liquid)
- 4.Fill softener into Case ☼(when necessary).

Notes:

- As for the agglomerated or ropy detergent or additive, before they are poured into the detergent box, it is suggested to use some water for dilution to prevent the inlet of detergent box from being blocked and overflowing while filling water.
- Please choose suitable type of detergent for the various washing temperature to get the best washing effect with less water and energy consumption.

## ■ Start up washing machine

Connect the power. Check if water pipes are connected properly. Open the tap completely. Put in the clothes to be washed and fill in the detergent. Then press the button "On/Off",Select the proper procedures and functions and press the button "Start/Pause".

## ■ Select the procedure

The proper washing procedures shall be selected according to the types, quantities, and dirtiness of the clothes to be washed in combination with the following washing temperature table.

|                             |   |
|-----------------------------|---|
| 90 ℃                        | Seriously dirty , pure white cotton or flax (for example: coffee table cloths, canteen table cloths, towels, bed sheets)  |
| 60 ℃                        | Moderately dirty colourful flax, cotton and synthetic articles with certain decolouris ing degree (for example: shirts, night pajamas; Slightly dirty, pure white flax. |
| 40 ℃,30 ℃, 20 ℃, Cold water | Normally dirty a rticles (for example: synthetic and wool)  |

# Operate Washing Machine

First, turn the rotary switch to select the corresponding procedures according to the types of textiles.

Second, select the proper temperature according to the dirtiness. Generally, the higher the temperature is, the more the power is consumed.

Last, select the proper revolution speed. The higher the revolution speed is, the drier the textiles are spun, but higher the noises will also be increased.

The surfaces of delicate textiles will have wrinkles and the working life of washing machine will be shortened.

PLEASE NOTE: to protect the clothes, the lower revolution speed shall be selected for delicate textiles. The main washing procedures depend on the types of the clothes to be washed as follows:

### - Cotton

You can select this procedure to wash the daily washable clothes. The washing period is quite long with quite strong washing intension. It is recommended to wash the daily cotton articles, for example: bed sheets, quilt covers, pillowcases, gowns, underwear etc.

### - Cotton ECO

To increase the washing effects, main additional washing time is increased.

It is recommended to wash the clothes for babies or worn by the persons with allergic skin.

### - Synthetic

You can select this procedure to wash the quite delicate clothes. The procedure is shorter compared with that for cottons and the washing intension is quite gentle. It is recommended to wash synthetic articles, for example: shirts, coats, blending. As for curtains and laced textiles, the procedure "Synthetic " shall be selected. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.

### - Delicate

You can select this procedure to wash your delicate clothes. Its washing intension is gentler and revolution speed is less compared with the procedure "Synthetic". It is recommended for the articles to be washed softly.

### - Wool

You can select this procedure to wash the wool textiles labeled with "Machine Wash". Please select the proper washing temperature according to the label on the articles to be washed. Furthermore, the proper detergent shall be selected for wool textiles.

### - Baby Care

You can select this procedure to wash your baby's clothes , it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.

### - Colours

You can choose the program washing brightly coloured clothing, it can protect the bright colours better.

### - Quick

This procedure is suitable for washing few and not very dirty clothes quickly.

### - Spin Only

Separate spin only procedure. Soap water or rinse water shall be drained out before spinning.

## Operate Washing Machine

### - Rinse&Spin

Separate Rinse&Spin Procedure.

### - Drain Only

Separate Drain only Procedure.

### - Mix

You can select this procedure wash the tough clothes, that need much more time and strength. It is used for clothes used daily and made from cotton, such as sheets, pillowcases bathrobes and underwear.

### - Sport Wear

You can select this procedure to wash the activewear.

### - Jeans

This program is specially designed for washing jeans.

### - Hand Wash

As for few light dirty clothes, the default temperature of washing is cold.

### - My Cycle

Press Spin 3sec. for my cycle to memory the procedure. The default my cycle is cotton.

**The main function can be selected as follows:**

### - Prewash

The Prewash function can get an extra wash before main wash.

### - Speed Wash

The function can decrease the washing time.

### - Extra Rinse

The laundry will undergo extra rinse once after you select it.

### - Delay

Delay function can be set with this button, the delaying time is 0-24 H.

Set the Delay function:

1. Select a programme;
2. Press the Delay button to choose the time;
3. Press Start/Pause to commence the delay operation.

Cancel the Delay function: Press the Delay button until the display will be 0H. It should be pressed before starting the program. If the program already started, should press the On/Off button.

Notes: If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, press the Start/Pause button the left time is continues.

### - Reload

This operation can be executed during the washing procedure. When the drum of the washing machine is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully. To press 《Start/Pause》 for 3 sec. to reload, and start the clothes adding in the midway function .

Please follow the steps as bellow:

1. Wait until the drum stops rotation.

## Operate Washing Machine

2. The door lock is unlocked.

3. Close the door when the clothes needs are loaded and repress the 《Start/Pause》 button.

Notes: Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.

### - Child Lock

To avoid that the washing procedure cannot operate normally due to the mis operation by kids during the washing procedure, you can select this function, In this case, the other buttons except On/Off button can not work, at this state ,the machine power off when press the key on/off. The machine remembers the program child lock and the program during powered off when press the key on/off again.

Press Rinse and Pre Wash together 2.5 seconds during the running procedure, the buzzer will beep ,Start/Pause button as well as the rotary switch are locked. Press the two buttons for 2.5 seconds together and buzzer will beep to release to locking. But cut off the power supply , the kid's protection is also release to locking. The kid's protection will not be cancelled after all procedures are completed.

### - Bubble Removal Function

Bubble Check Function: Redundant bubbles will occur when there is excessive detergent, which will affect wash and rinse effects. The procedure will check automatically and one bubble removal procedure will be added automatically to remove bubbles when excessive bubbles are checked.



Operate Washing Machine

■ Table of Washing Procedures

| Procedure<br>Description | Load(kg) | Detergent Box |         |                  | Delay | Speed wash | Extra rinse | Prewash | Default Temp.<br>(°C) | Default Time<br>(Min) | Default Speed<br>(RPM) |
|--------------------------|----------|---------------|---------|------------------|-------|------------|-------------|---------|-----------------------|-----------------------|------------------------|
|                          |          | Case I        | Case II | Softener<br>Case |       |            |             |         |                       |                       |                        |
| Cotton                   | 7.5      | ○             | ●       | ○                | ○     | ○          | ○           | ○       | 40                    | 7:5kg                 | 1400                   |
| Synthetic                | 3.75     | ○             | ●       | ○                | ○     | ○          | ○           | ○       | 40                    | 2:40                  | 800                    |
| Baby Care                | 7.5      | ○             | ●       | ○                | ○     | ○          | ○           | ○       | 30                    | 1:40                  | 800                    |
| Jeans                    | 7.5      | ○             | ●       | ○                | ○     | ○          | ○           | ○       | 60                    | 1:20                  | 800                    |
| Mix                      | 7.5      | ○             | ●       | ○                | ○     | ○          | ○           | ○       | 40                    | 1:45                  | 800                    |
| Colours                  | 3.75     | ×             | ●       | ○                | ○     | ○          | ○           | ×       | Cold                  | 1:13                  | 800                    |
| Drain Only               | —        | ×             | ×       | ×                | ○     | ×          | ×           | ×       | —                     | 1:10                  | 1200                   |
| Spin Only                | 7.5      | ×             | ×       | ×                | ○     | ×          | ×           | ×       | —                     | 0:01                  | —                      |
| Rinse&Spin               | 7.5      | ×             | ×       | ○                | ○     | ×          | ○           | ×       | —                     | 0:12                  | 1200                   |
| Wool                     | 2.0      | ×             | ●       | ○                | ○     | ×          | ○           | ×       | 40                    | 0:20                  | 1200                   |
| Delicate                 | 2.5      | ×             | ●       | ○                | ○     | ×          | ○           | ×       | 30                    | 1:07                  | 800                    |
| Quick                    | 2.0      | ×             | ●       | ○                | ○     | ×          | ×           | ×       | Cold                  | 0:50                  | 800                    |
| Sport Wear               | 3.75     | ○             | ●       | ○                | ○     | ×          | ○           | ○       | 40                    | 0:15                  | 800                    |
| Hand Wash                | 2.0      | ○             | ●       | ○                | ○     | ×          | ○           | ○       | Cold                  | 0:45                  | 1200                   |
| Cotton ECO               | 7.5      | ×             | ●       | ○                | ○     | ×          | ×           | ×       | 60                    | 1:00                  | 800                    |
|                          |          |               |         |                  |       |            |             |         |                       | 4:57                  | 1400                   |

Operate Washing Machine

Energy test program: Cotton ECO , Speed : the highest speed; Other as the default.  
Half load for 7.5Kg /10.0Kg , machine:3.75Kg.  
“Cotton Eco ” are the “standard Cotton 60℃ ” programme and the standard washing programs to which the information in the label and the fiche relates, and they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry, that the actual water temperature may differ from the declared cycle temperature.

- Means must
- Means optional
- ×

Notes: The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.



## Operate Washing Machine

Before your maintenance starts, please do pull out the power plug or disconnect power and close the tap.

### WARNING

- Do not use solvents in or on this appliance. Solvents can damage the appliance and produce toxic or flammable gas
- Never use water to sprinkle and wash the washing machine.
- It is forbidden that the detergents containing PCMX are used to clean the washing machine.

### ■ Cleaning and Maintenance of Washing Machine Cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use the wet cloth to wipe it off immediately. No sharp items are allowed to strike the cabinet.

Notes: formic acid and its diluted solvents or equivalent are forbidden.

### ■ Clean Internal Drum

The rusts left inside the drum by the metal articles shall be removed immediately with chlorine-free detergents.

Never use steel wool.

### ■ Dispose a Frozen Washing Machine

When the temperature drops below zero and your washing machine gets frozen, you may:

1. Disconnect the power supply for the washing machine.
2. Wash the tap with warm water to loosen inlet pipe.
3. Take down inlet pipe and immerse it in warm water.
4. Pour warm water into washing drum and wait for 10 minutes.
5. Reconnect inlet pipe to the tap and check whether inlet and outlet are working normally.

Notes: when the washing machine is reused, make sure the ambient temperature is above 0°C

### ■ Anti-freeze

If your washing machine is located in the room where it can get frozen easily, please drain the remaining water inside drain pipe and inlet pipe thoroughly.


#### Remove the remaining water in inlet pipe:

1. Close the tap.
2. Screw off the inlet pipe from tap and put its end into the container.
3. Start up any procedure except single Wash or Drain procedure. Water will be drained out of inlet pipe if any for about 40 seconds.
4. Reconnect the inlet pipe to tap.

#### Remove the remaining water in drain pump

### WARNING

To avoid burning, it shall be done after the hot water inside the machine cools down.

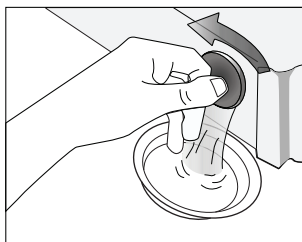


## Maintenance

### ■ Clean detergent box and grooves

Clean detergent drawer and grooves

1. Press down the arrow location on softener cover inside the drawer.
2. Lift the clip up and take out softener cover and wash all grooves with water.
3. Restore the softener cover and push the drawer into position.

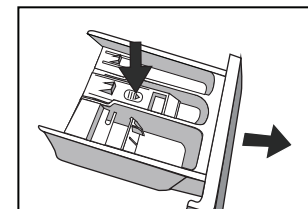

### ■ Clean inlet filter




Inlet filter shall must be cleaned if there is not any or insufficient water in when the tap is opened.

Clean the tap filter:



1. Close the tap.
2. Select any procedure except "Wash" or "Drain" procedure.
3. Press the button "Start/Pause" and keep the procedure running for about 40 seconds.
4. Remove the inlet pipe from the tap.
5. Use water to wash the filter.
6. Reconnect the inlet pipe.

Washing the filter in washing machine:

1. Screw off the inlet pipe from the backside of the machine.
2. Pull out the filter with long nose pliers and reinstall it back after being washed.
3. Reconnect the inlet pipe.
4. Open the tap and make sure there is no water leakage.
5. Close the tap.

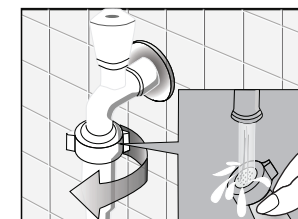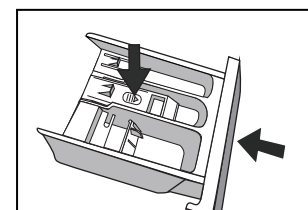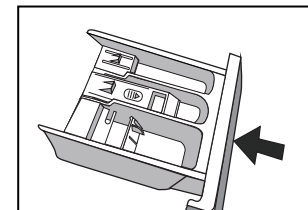

Notes: Generally, the tap filter is washed first and then the filter in washing machine will be washed. If only the filter in washing machine is washed, then the steps 1~3 in cleaning the tap filter shall be repeated.

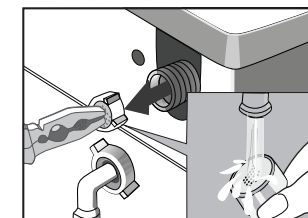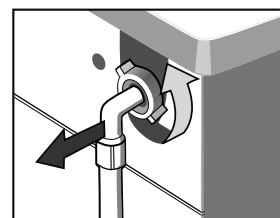

## Maintenance

### WARNING

Pull out the power plug to avoid electrical shock before washing.

After using the washing machine, pull out the power cord and close the door tightly to avoid trapping or injuring children.

#### ■ Remove foreign matter

##### Drain Pump Filter:

Drain pump filter can filter the thread and small foreign matter from the washing.

Clean the filter periodically to ensure the normal operation of washing machine.

### WARNING

According to the soil level within the cycles and the frequency of the cycles, you have to inspect and clean the filter regularly.

The pump should be inspected if the machine does not empty and/or spin;




The machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump.

To clean, follow this procedure:

1. After the power is disconnected, use hand to open the filter cover.

2. Turn the filter down as shown with the figure and take out sundries matters.

3. Reinstall each part back after sundries matters are removed.

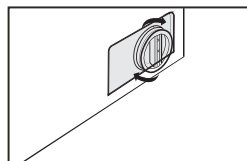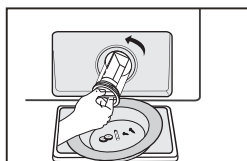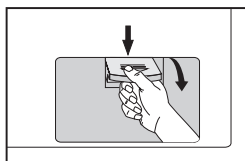

#### Warning!

When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so.

## Troubleshooting

| Troubles   | Reason  | Solution   |
|--|---|--|
| Washing machine cannot start up                    |   | Check if the door is closed tightly.<br>Check if power plug is inserted well.<br>Check if water supply tap is opened.<br>Check if button "Start/Pause" is pressed.<br>Check if button "On/Off" is pressed.                           |
| Door cannot be opened                              | Machine's safety protection design is working.  | Disconnect the power.  |
| Heating fault                                      | NTC is damaged and heating pipe is aging.   | Can normally wash the clothes.<br>Only cannot wash with heating.<br>Shall contact the service center promptly.   |
| Water leakage                                      | The connection between inlet pipe or outlet hose and tap or washing machine is not tight.<br>Drain pipe in the room is blocked. | Check and fasten water pipes.<br>Clean up outlet hose and ask a specialized person to repair it when necessary.  |
| Water is overflowed from the bottom of the machine | The inlet pipe is not connected firmly.<br>Outlet hose has water leakage.   | Fix the inlet pipe.<br>Replace the drain hose.   |
| Indicator or display does not light.               | Power is disconnected.<br>PC board has problems.<br>Harness has connection problem.   | Check if the power is shut down and power plug is connected correctly.<br>If not, please call up service line.   |
| Detergent residues in the box                      | Washing powder is dampened and agglomerated.  | Clean and wipe the box.<br>Use liquid detergents or the detergents special for drum.   |
| Washing effects are not good                       | The clothes are too dirty.<br>Insufficient detergent quantity.  | Select a proper procedure.<br>Add the proper detergent quantity according to the instructions in detergent package.  |
| Abnormal noise<br>Great vibration                  |   | Check if the fixing (bolts) has been removed.<br>If cabinet is installed on the solid and level floor.<br>Check if there are any barrettes or metal articles inside.<br>Check if the legs in the washing machine are adjusted level. |


 










 



















## Error Codes
 
| Display LED  | Description                           | Reason   | Solution  |
|--|---------------------------------------|--|---|
| E30  | Door lock problem                     | Door is not closed properly.   | Restart after the door is closed.   |
|  |                                       | Please call up service line if there are still troubles.   |   |
| E10  | Water injecting problem while washing | Tap is not opened or water flows too slowly.<br>Inlet valve filter is blocked.<br>Inlet pipe is twisted.<br>If water is not supplied | Open the tap or wait till the water supply becomes normal.<br>Check inlet valve filter.<br>Straighten the water pipe<br>Check the other taps in the room. |
|  |                                       | Please call up service line if there are still troubles.   |   |
| E21  | Drain problem while washing           | Outlet hose is blocked or twisted<br>Drain pump is blocked   | Wash and straighten outlet hose.<br>Wash drain pump filter  |
|  |                                       | Please call up service line if there are still troubles.   |   |
| Please call up the service line if there is any other problem. |                                       |  |   |

## Appendix
 
### Care Label

The label and sign on the fabric can help you to choose the best way to launder your clothes.

|  |   |  |  |  |   |
|--|---|--|--|--|---|
| Normal wash<br>     | <br>Warm wash<br>(max 40°C)      | Hand wash<br>         | Bleach<br>  | Chlorine bleach may be used<br> | Tumble dry. Medium (max 150°C)<br>   |
| Gentle wash<br>     |   | Do not wash<br>       | Do not bleach<br>                                 | Chlorine bleach not be used<br> | Tumble dry. Low heat (max 110°C)<br> |
| Iron<br>            | Cool iron(max 110 °C)<br>        | Dry clean<br>         | Dry clean normal cycle with any solvent<br>       | Tumble dry normal<br>           | Drip dry<br>                         |
| Do not iron<br>     | Warm iron,medium (max 150°C)<br> | Do not dry clean<br>  | Dry clean normal cycle petroleum solvent only<br> | Dry flat<br>                    | Hang to dry /Line dry<br>            |
| Iron with cloth<br> | Dry after wash<br>               | Warmly dry clean<br>  | Line Dry<br>                                      | No Wring<br>                    | No machine wash<br>                  |
| Steam Iron<br>      | Line Dry in shade<br>            | Do not tumble dry<br> |  |  |   |

### Electrical Warning

To avoid fire,electrical shock and other accidents,please remember the following reminding:

- Only the voltage indicated in power label can be used. If you are not clear of the voltage at home, please contact the local power bureau.
- When you are using the heating function, the maximum current through the washing machine will reach 10A. Therefore, please make sure the power supply units (current, voltage and cable) can meet the normal load requirements for the machine.
- Protect the power cord properly. Power cord shall be fixed well so that it will not trip the people or other things and be damaged. Special attention shall be paid to the socket. It shall be plugged into the sockets easily and attention shall be paid to the plug location.
- Do not make the wall-mounted socket overloaded or cable extended. Overloading of the wiring may cause fire or electrical shock. Do not pull out power plug with wet hand.
- To ensure your safety, power plug shall be inserted into an earthed three-pole socket. Carefully check and ensure that your socket is properly and reliably earthed.

## Product Specifications

| Parameter               |                |
|-------------------------|----------------|
| Washing Capacity        | 7.5kg          |
| Dimension(W* D* H)      | 595* 565* 850  |
| Net Weight              | 68kg           |
| Rated Power             | 2000W          |
| Power Supply            | 220-240V~,50Hz |
| MAX.Current             | 10A            |
| Standard Water Pressure | 0.05MPa~1MPa   |



### AUSTRALIAN & NEW ZEALAND PRODUCT WARRANTY STATEMENT OF STANDARD WARRANTY CONDITIONS

#### AUSTRALIAN CUSTOMERS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

#### NEW ZEALAND CUSTOMERS

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

#### OUR WARRANTY

This product is also covered by the manufacturer's warranty set out in this document (Our Warranty).

Our Warranty is for a period of twenty four (24) months from the date of purchase and for refrigeration appliances will have an additional thirty six (36) months after the first twenty four (24) months on the Sealed System (PARTS only) Compressor & condenser etc. The labour cost to replace these parts is the responsibility of the customer.

This is in addition to (and does not exclude, restrict or modify) any rights or remedies to which you may already be entitled to under the Australian consumer law or the New Zealand Consumer Guarantee act 1993 relating to this product.

Our warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship. The product will be repaired or replaced at the option of Omega, and all costs of installation, removal, cartage, freight travelling and insurance are to be paid by the customer.

Our warranty is subject to the following conditions:

1. That the purchaser contact Omega prior to any product repair.
2. That the purchaser carefully follows all instructions provided with the product and complies with all relevant electrical & plumbing regulations in their State when installing the product.
3. That the purchaser carefully follows the instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the DOMESTIC use for which it has been designed. If the appliance is used in commercial applications or for rental purposes, Our Warranty is limited to a warranty of Twelve (12) months covering all parts with Three (3) months on any labour cost of service or repair.

#### SERVICE AREA

The provision of service under Our Warranty is limited by the boundary / territory area of the nearest service centre. Travelling cost incurred for service outside this area is not covered by Our Warranty and service will incur commercial cost to be paid by the customer regulated by the number of kilometres travelled beyond the service area. These costs will be disclosed to you for acceptance by you prior to your claim being processed.

Microwave ovens must be returned to your nearest Authorised Service Centre for repair as they are a carry in serviceable appliance.

#### WHAT IS COVERED: By Our Warranty

During the warranty period, Omega or its authorised Service Centre will, at no extra charge, if your appliance is readily accessible without the need of special equipment and subject to the terms and conditions of this warranty, repair or replace any parts which it considers defective.

#### WHAT IS NOT COVERED: By Our Warranty

1. Products installed damaged or incomplete or not in compliance with the relevant electrical & plumbing regulations in their State.
2. Normal wear and tear e.g. cleaning, light globes, filters etc.
3. Failure resulting from power surges and electrical storms.
4. Insect or vermin infestation.
5. Unauthorised repairs or use of non- genuine Omega parts.
6. Any failure caused by the product not being used in accordance with the instruction and the installation manual provided with the product.
7. Misuse or abuse, including failure to properly maintain or service.
8. The clearing of blockages in pumps and hoses.
9. Damage which occurs during delivery or installation.
10. Claims to product surface coating due to liquid or solid spill-overs, accidental damage or damage caused from cleaning products not recommended by Omega.

#### HOW TO CLAIM OUR WARRANTY

You will need to contact Omega in Australia or New Zealand by using the contact details below.

##### IN AUSTRALIA

Omega is a division of Shiro Australia Pty Ltd  
ABN 28 002 386 129  
Locked Bag 5002, Kingsgrove, NSW, 2208  
Phone: 1300 795 572 Fax: 1800 686 413  
Email: [customer@shiro.com.au](mailto:customer@shiro.com.au)  
Web: [www.omegaappliances.com.au](http://www.omegaappliances.com.au)

Note: Please complete the following details when you have unpacked the product:

##### IN NEW ZEALAND

Omega is a division of Monaco Corporation  
(Member of Shiro Australia Pty Ltd)  
PO Box 4399, Shortland St, Auckland, 1140  
Phone: 09 415 6000 Fax: 09 415 7060  
Email: [service@shiro.com.au](mailto:service@shiro.com.au)

Model No.....

Serial No.....

Date of Purchase.....

Retailer.....

