

XDimplex

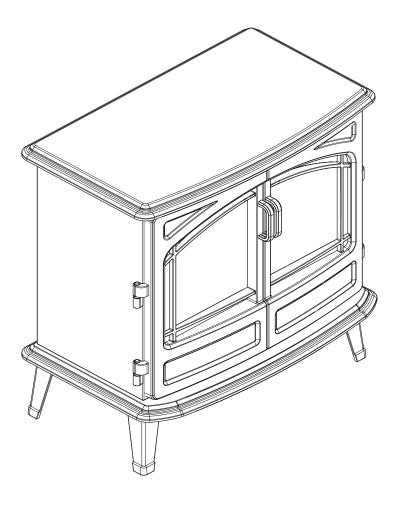

LKD20-AU

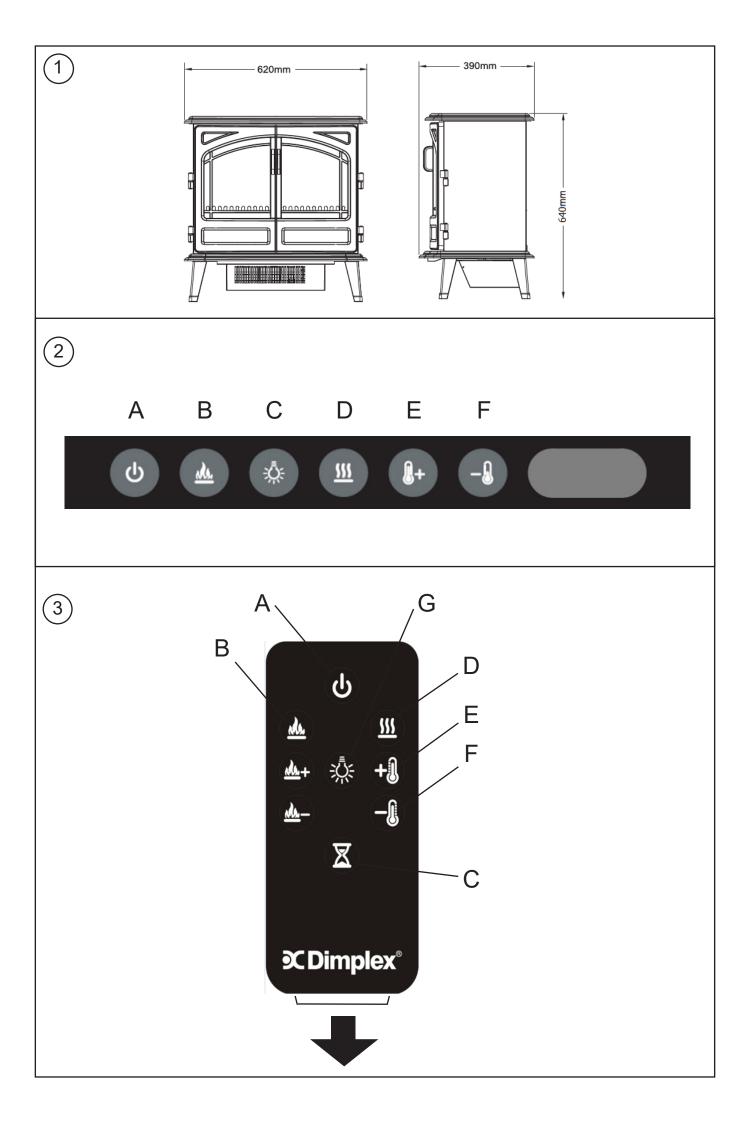



Important Safety Advice

When using electrical appliances, basic precautions should be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

If the appliance is damaged, check immediately with the supplier before installation and operation.

Do not use this appliance in the immediate surroundings of a bath, shower or swimming pool.

Do not use outdoors.

This appliance must not be located immediately above or below a fixed socket outlet or connection box.

WARNING: The appliance carries

the Warning Symbol indicating that it must not be covered or has a Do not cover label. Do not cover or obstruct in any way the heat outlet grille located underneath the appliance Overheating will result if the appliance is accidentally covered. Do not place material or garments on the appliance, or obstruct the air circulation around the appliance, for instance by curtains or furniture, as this could cause overheating and a fire risk.

In the event of a fault unplug the heater. Unplug the appliance when not required for long periods. The supply cord must be placed on the right hand side of the heater away from the heat outlet underneath the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by Children without supervision.

Children should be kept away unless continuously supervised. Children shall not turn on/off the appliance. Children shall not plug in, regulate and clean the appliance or perform user maintenance.

The appliance must be positioned so that the plug is accessible.

Although this appliance complies with safety standards, we do not recommend its use on deep pile carpets or on long hair type of rugs. If the supply cord is damaged it must be replaced by the manufacturer or service agent or similarly qualified person in order to avoid a hazard.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility. **CAUTION** - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

General

Unpack the heater carefully and retain the packaging for possible future use, in the event of moving or returning the fire to your supplier.

These models are designed to be free standing and are normally positioned against a wall.

The fire incorporates a flame effect, which can be used with or without heating, so that the comforting effect may be enjoyed at any time of the year. Using the flame effect on its own only requires little electricity.

Please note: Used in an environment where background noise is very low, it may be possible to hear a sound which is related to the operation of the flame effect. This is normal and should not be a cause for concern.

Operating Instructions - See Fig. 2&3

Ė	Icon		Funtion	Description				
A	ෆ	-	Power / Standby	Press Once to turn the product 'ON'. Press a second time to put the product into 'STANDBY' (When returning from 'STANDBY' mode the product will return to previous settings unless the product has been unplugged, in which case it will reset to factory settings)				
В	<u>alla</u>	alla.		'FLAME EFFECT' button this turns the flame effect ON or OFF independently of the products other features.				
		<u> </u>	Flame This Button will increase the brightness of the flame effect. There are 5 bri Up shown as F1, F2, F3, F4, F5. This button will ONLY increase the brightness le					
		<u> </u>	Flame Down	This Button will decrease the brightness of the flame effect. There are 5 brightness settings shown as F1, F2, F3, F4, F5. This button will ONLY decrease the brightness level.				
		-	Flame Cycling	This setting is set by pressing the Flame Up button once more after F5. this will cause the brightness of the flame effect to cycle from F2 to F5 in a continuous Loop.				
		-	Off	This will turn the flame effect off. If the heater is ON, the display will activate and remain active to read the set temperature and show if the product is on LOW HEAT/ HIGH HEAT/ COOL BLOW.				
С	X	\boxtimes	Sleep Timer	Press multiple times to change the 'SLEEP TIMER' in 0.5 hr increments from 0.5 hr to 8.0 hr before turning off. The remaining time on the 'SLEEP TIMER' displa ys. (This icon is Green in Colour)				
		SSS		'HEAT' button cycles the unit sequentially through the 4 settings: LOW HEAT, HIGH HEAT, COOL BLOW and OFF. The heat setting will be indicated by an icon in the display see Fig. 1.				
				When the flame effect is 'ON' the display will turn off after 5 seconds, however if the heater is being used independently of the flame effect. The low heat or high heat icon will appear continuously in the display.				
		<u> </u>	Low Heat	This setting will run the heater at 'LOW HEAT' this setting will be indicated by the 'LOW HEAT' icon. To Adjust the temperature setting the Temp Down or Temp Up buttons described below must be used. (This icon is Orange in Colour)				
D		<u> </u>	High Heat	This icon in the display indicates 'HIGH HEAT' this setting will be indicated by the 'HIGH HEAT' icon. To Adjust the temperature setting the Temp Down or Temp Up buttons described below must be used. (This icon is Red in Colour)				
		35	Cool Blow	This icon in the floating display indicates 'COOL BLOW' this setting will be indicated by the 'COOL BLOW' icon and the letters 'CB' appearing in the display. (This icon is Blue in Colour)				
		-	Off	This switches the heater and blower 'OFF', no icon will be displayed in the display. Note the blower will run for 5-10 seconds after being turned off, this is to ensure the product cools down safely.				
E	I+	-	Temp Up	Press multiple times to increase the heater temperature in 1°C increments. The highest temperature that can be set 30°C.				
				When High Heat is selected, the letters 'HH' appear in the display, this means the heat will remain ON continusously and is not controlled by the thermostat.				
F	1 -	-	Temp Down	Press multiple times to lower the heater temperature in 1^{0}C increments. The lowest temperature that can be set is 18^{0}C .				
G	÷Ņ:	-		'Top light' button this turns the top light ON or OFF independently of the products other features.				

User Modes:

Mode Name /Discription	Action (Actions cannot be input by remote control)		
Change Celsius (° C) to Fahrenheit (° F)	Press both Temp down (🖟) and Temp up (+å) on the unit and hold until beep is heard and display flashes. (To revert back to Celsius repeat this action)		
Disable/Enable Heat Options on product and remote control	Hold both Heat Cycle (1912) and Temp Up (+1), on the product, for 5 seconds, when the heater has been disabled the display will read "" and beep 1 time. To enble heat repeat this action.		
Disable/Enable Heat Options on product only	Hold both Flame Cycle (\triangleq) and Heat Cycle ($\$$), on the product, for 5 seconds, when the heater has been disabled the product will beep. This will disable heat control functions on the product only. To enble heat repeat this action.Note: the remote control will still be able to operate heat functions.		

Electrical connection

WARNING - THIS APPLIANCE MUST BE EARTHED.

This heater must be used on an AC \sim supply only and the voltage marked on the heater must correspond to the supply voltage. Before switching on, please read the safety warnings and operating instructions.

Remote control - see Fig. 3

The maximum range of use is ~ 5metres.

Warning: It takes time for the receiver to respond to the transmitter. Do not press the buttons more than once within two seconds for correct operation.

Battery information - see Fig. 3

- 1. To activate the remote control remove the battery isolation strip, which is used to ensure your remote control reaches you fully charged.
- 2. To replace the remote control battery, turn over the remote control, and follow the diagram embossed on the remote control $\,$
- 3. Only use CR2025 size of batteries.

Discard leaking batteries

Dispose of batteries in the proper manner according to provincial and local regulations.

Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, if all the batteries are not replaced at the same time, if disposed of in a fire, or if an attempt is made to charge a battery not intended to be recharged.

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

- 1. Swallowing may lead to serious injury in as little as 2 hours or death, due to the chemical burns and potential perforation of the oesophagus.
- 2. If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Inforation Centre on 13 11 26 (in Australia) or 0800 764 766 (in New Zealand) for fast, expert advice.
- 3. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if the compartment is not secure.
- 4. Dispose of used button batteries immediately and safely. flat batteries can still be dangerous.



Maintenance

WARNING: ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE ATTEMPTING ANY MAINTENANCE.

Light Emitting Diode

This fire is fitted with LED (Light Emitting Diode) lamps. These LED lamps are maintenance-free and should not require replacing during the life of the product.

Thermal Safety Cut-out

The built-in overheat cut-out switches off the appliance automatically in the event of a fault. If this occurs switch off the appliance or disconnect the mains plug from the socket. After a short cooling down phase, the appliance is ready for use again. If the fault should occur again, see your local dealer.

Cleaning

WARNING – ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING THE HEATER.

For general cleaning use a soft clean duster – never use abrasive cleaners. The glass viewing screen should be cleaned carefully with a soft cloth. DO NOT use proprietary glass cleaners.

To remove any accumulation of dust or fluff the soft brush attachment of a vacuum cleaner should occasionally be used to clean the outlet grille of the fan heater.

Recycling

At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.



After Sales Service

Should you require after sales service or should you need to purchase any spares, please contact the retailer from whom the appliance was purchased or contact the service number relevant to your country on the warranty card.

Please do not return a faulty product to us in the first instance as this may result in loss or damage and delay in providing you with a satisfactory service. Please retain your receipt as proof of purchase.

Glen Dimplex Australia 8 Lakeview Drive, Scoresby, VIC 3179, Australia

www.dimplex.com.au sales@glendimplex.com.au

Ph: 1300 556 816



Glen Dimplex New Zealand Pty Ltd. 38 Harris Road, East Tamaki, Auckland 2013 New Zealand

www.dimplex.co.nz sales@glendimplex.co.nz

Ph: 0800 666 2824

© Glen Dimplex Heating & Ventilation.

All rights reserved. Material contained in this publication may not be reproduced in whole or part, without prior permission in writing of Glen Dimplex Heating & Ventilation.