



NESPRESSO®

ESSENZA AUTOMATIC




D100


Instruction Manual



Please read this Instruction Manual and the safety instructions before operating the appliance!

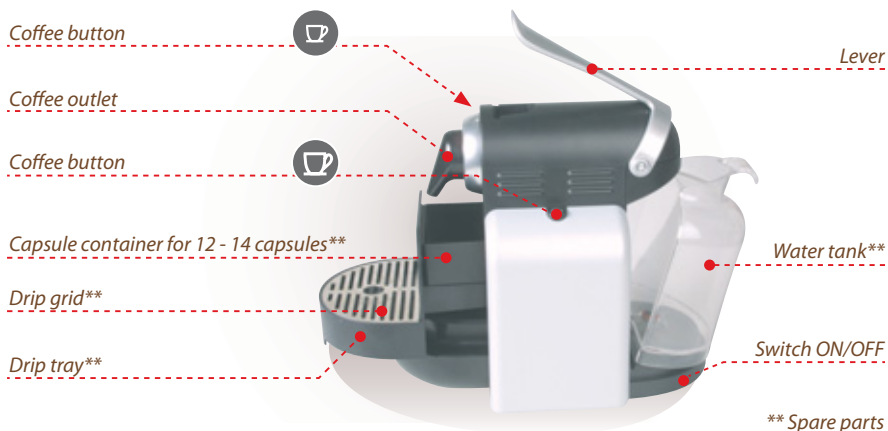

1 First use or after a longer period of non-use

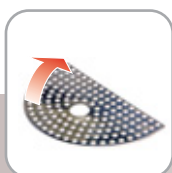

Remove plastic film



Fill water tank



Place a container



Plug into mains +
switch ON



Heating up



Ready



Rinse: let water run through 6x

No water see: **8b**

2 Daily: before the 1st coffee



fresh water



Switch ON



Heating up



Ready

3



Espresso



Lungo

Preparation



Preheat cup:



1 cup of water



Insert capsule



Flow speed depends on coffee variety



Eject capsule (drops into capsule container)

Programming the fill up level



 
Insert capsule



Press and hold button for at least 3 seconds, release at desired level



Resetting the programmed large and small coffee flows to factory settings



Switch OFF



Press and hold big cup button



Switch ON

4

Daily: After the last coffee



Switch off



Empty capsule container + drip tray



Rinse and empty water tank

5

Clean: When necessary



abrasive



solvent container



 
dishwasher




Damped cloth, cleaning agent mild

6

Empty system: After long period of non-use, for frost protection and after repair



Switch off and remove water tank

 

Press small cup button & switch on simultaneously



 
Buttons blink alternatively



1. Open
2. push and hold for 3 secs.



Close



Switch off
(machine blocks for 10 min and is ready to be transported)



7 Descaling

Carefully read safety instructions on decalcifier package.
Decalcifier is aggressive to surface of casing.
Vinegar: Danger of damage

Water hardness Descal after


fH	dH	
36	20	300
18	10	600
0	0	1200



Preparation



Remove capsule

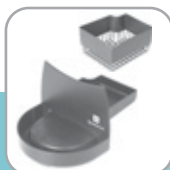

Empty capsule container + drip tray



Rinse machine, see 1



If leakage see:

8d



Fill with Nespresso descaler and 0.5 l water



Place a recipient



1. Lift lever, 2. insert filter, 3. close lever

Descaling

Avoid using vinegar as it can damage your machine.

Press both buttons simultaneously for 3 seconds

Start



Let descaling solution run through twice

Stop



Refill water tank once more with descaling solution and repeat step

Rinse



Remove filter



Empty, rinse and fill water tank with fresh water



Rinse machine, see 1



Exit: press both buttons simultaneously for 3 secs



8 Troubleshooting

a



No light indicator



Check mains: plug, voltage, fuse. In case of problems call *Nespresso Club*

b

No coffee,
no water

● Water tank empty → fill water tank

● Venting



1. Open + 2. hold



Close

● Descale, if necessary → point 7

c

Coffee not hot enough



Preheat cup, descale if necessary

d

Lever cannot be closed completely



Empty capsule container / check that no capsule is blocked inside the capsule container

e



Irregular interval blinking



Send machine to repair or call *Nespresso Club*



Specifications



..... 220 - 240 V, 50 Hz, max. 1260 W

P

..... max. 19 bar

kg

..... ~ 3 kg

l

..... 1 l



..... 5 °C ... 45 °C



..... 16.6 cm 25.5 cm 29.1 cm



Optional Accessory



Nespresso descaling kit



Safety precautions

Keep this instruction manual

This appliance may become a safety hazard if these instructions and safety precautions are ignored.

SOS

- Emergency:
Immediately remove plug from power socket.



- This machine is made for private households (not commercial use) and indoor use only.
- Remove plug from socket if not in use for longer time, vacation etc.



- Verify that the voltage quoted on the rating plate is the same as your voltage.
- Connect the appliance only to power sockets with protective earth. The use of incorrect connection voids warranty.



- Do not place the appliance on a hot surface (e.g. heating plate) and never use it close to an open flame.



- Do not use the machine if it is not operating perfectly or if it evidences of damage. In such cases inform *Nespresso Club*.



- Always close lever, never lift during operation.
- Do not put fingers into capsule compartment and capsule shaft, danger of injury.
- Do not use appliance without drip tray and drip grid.
- Keep appliance/cable out of reach of children.



- Do not place power cord by hot parts or sharp edges, etc.
- Never touch cable with wet hands. - Do not unplug by pulling the cord.
- In case of damage, do not use the appliance. In order to avoid danger have repairs and replacement of power cord only by *Nespresso Club*.



- Do not open appliance and do not put anything into openings. All operations other than normal use, cleaning and care must be performed by *Nespresso Club*.



- Children may never use the appliance without close adult supervision.



- Before cleaning/care unplug the appliance and let it cool down.
- Never clean wet or immerse plug, cord or appliance in any fluid.



- Descaling:
7c) Do not lift lever during descaling process.
7d) Rinse the water tank and clean the machine to avoid any residual descaling agent.



- Packaging is made of recyclable materials



- Environment protection first!
Your appliance contains valuable materials which can be recovered or recycled. Leave it at a collection point.