

# SHARP

 
## Refrigerator - Freezer Operation manual

MODEL

SJ-XP470HB



“Plasmacluster” and “Device of a cluster of grapes” are trademarks of Sharp Corporation.

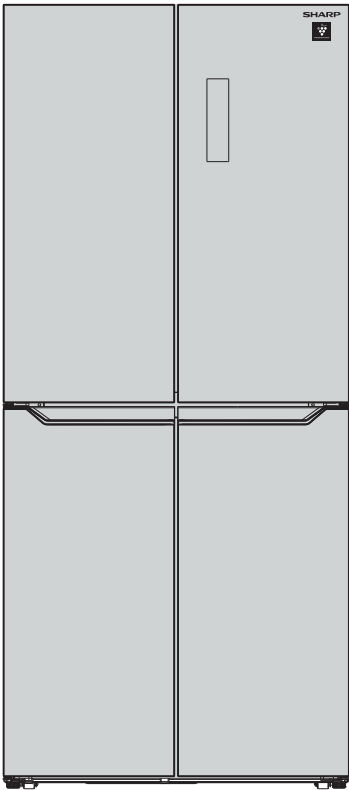

### Contents

- Safety information ..... 2
- Installation..... 4
- Description ..... 5
- Operation ..... 6
- Care and cleaning..... 9
- Storing food .....10
- Before you call for service..... 11
- Specification ..... 12
- Warranty ..... 13






Thank you very much for buying this SHARP product. Before using your SHARP refrigerator, please read this operation manual to ensure that you gain the maximum benefit from it.

This refrigerator is for household only, with ambient temperature between +5°C and +43°C. The refrigerator should not be subjected to temperatures of -10°C or below for a long period of time.

**Household use only**

## Safety information

	<b>Warning</b>	This means that there are high risks of death or serious injury.
	<b>Caution</b>	This means that there are high risks of material damage or personal injury.
	<b>Caution</b>	Fire marks means this refrigerator has risk of fire accident.



### Warning

#### Refrigerant

This refrigerator contains flammable refrigerant (R600a: isobutane) and insulation blowing gas (cyclopentane). Observe the following rules to prevent ignition and explosion.

- Do not damage the refrigerant circuit.
- Do not allow any sharp objects to have contact with the refrigeration system. The refrigeration system behind and inside the refrigerator contains refrigerant. Leaking refrigerant can ignite and may damage the eyes.
- Do not use mechanical devices or other means to accelerate the defrosting process. (This refrigerator has an automatic defrosting system.)
- Do not use electrical appliances inside the refrigerator.
- Do not block the space around the refrigerator.
- Do not use flammable sprays, such as spray paint near the refrigerator.
- Do not store flammable sprays, such as spray paint in the refrigerator.
- In the case of failure of the refrigeration system, do not touch the wall socket and use open flames. Open the window and air out the room. Then ask a service agent approved by SHARP for service.

#### Power cord, Plug, Socket

Read carefully the following rules to prevent electric shock or fire.

- Make sure to protect the power cord from being damaged during installation or moving. If the power plug or cord is loose, do not insert the power plug.
- Do not place multiple portable socket-outlets or portable power supplies at the rear of the refrigerator.
- Connect the power plug into the wall socket firmly and directly. Do not use an extension cord or adapter plug.
- Connect the power plug to the socket with the required rated voltage.
- Connect the earth pin to the earth terminal properly.
- Do not touch the power plug with wet hands.
- Disconnect from the main electricity supply by removing the main plug from the socket. Do not remove by pulling the power cord.

- Dust deposited on the power plug may cause fire. Wipe it off carefully.
- Pull out the plug if the refrigerator is not used for a long time.
- If the flexible supply cord is damaged, it must be replaced by service agent approved by SHARP in order to avoid a hazard.

#### Installation

- Do not install the refrigerator in a damp or wet location. It may cause the damage to the insulation or electrical leak. Dew may also appear on the outer cabinet and it causes rust.
- The refrigerator should be installed flatly and firmly on the floor.

#### In use

- Do not store volatile and flammable materials such as ether, petrol, propane gas, aerosol cans, adhesive agents and pure alcohol etc. These materials are easy to explode.
- Do not store temperature-sensitive products such as pharmaceutical products in the refrigerator. There are high risks of changes in product quality.
- Do not attempt to change or modify this refrigerator. This may result in fire, electric shock or injury.
- Do not place any object on the top of refrigerator. If the object falls down from the top, it may cause injury.
- This appliance can be used by children aged from 8 years or above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way or understanding the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

## Care and Cleaning

- Unplug the refrigerator first to prevent electric shock.
- Do not splash water directly on the outer cabinet or the interior. This may lead to rusting and deterioration of the electrical insulation.

## Trouble

 
- If you smell something burnt, pull out the power plug immediately. Then ask a service agent approved by SHARP for service.
- In case of gas leak, ventilate the area by opening window. Do not touch the refrigerator or the powersocket.



## Caution

### Transportation

- When you install or move your refrigerator, use curing mat to protect the floor from being damaged.
- Carry the refrigerator securely.  
If you lift up the refrigerator improperly, it may cause injury.

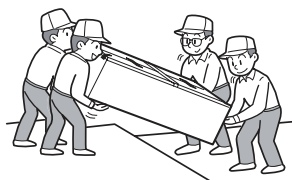

## Disposal

 
- Ensure that the refrigerator presents no danger to children while being stored for disposal. (e.g. remove the magnetic door seals to prevent child entrapment.)
- This refrigerator should be disposed appropriately. Take the refrigerator to a professional recycling plant for flammable refrigerant and insulation blowing gases.

### In use


- Do not touch foods or metal containers in the freezer compartment with wet hands. This may cause frostbite.
- Do not place bottled drinks and cans in the freezer compartment.
- Do not use other than potable water to make ice cubes.
- Do not open or close the door when other people put a hand near the door. There is a risk that the other people may get their fingers caught in the door.
- Do not put oversized object in the pockets of the door. If the object falls down from the pockets, it may cause injury.
- Make sure to handle the glass shelves with care to install or uninstall. If you drop the glass shelves, it may break or cause injury.

## 1 Keep adequate ventilation space around the refrigerator.


- The figure shows the minimum required space for installing the refrigerator. The amount of space around the refrigerator affects the amount of power consumption.
- Insufficient spacing will decrease cooling efficiency and increase energy consumption. This may reduce the life of the unit and void warranty.
- If using the refrigerator in the smaller space dimension than figured, it may cause temperature rise in the unit, loud noise and failure.
- The space between the rear of the refrigerator and the wall should be 50 mm or more.

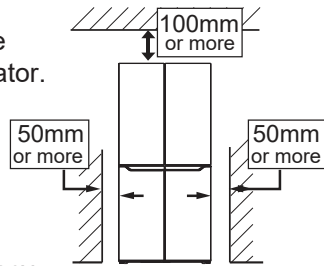

Overall space required in use

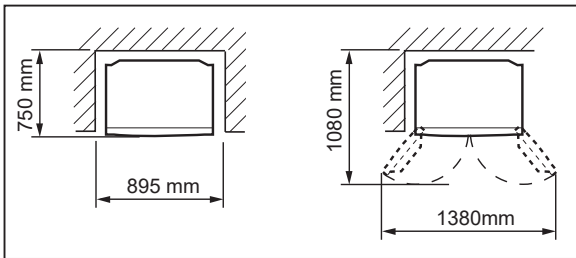 

## 2 Use the two front the adjustable feet to place the refrigerator flatly and firmly on the floor.


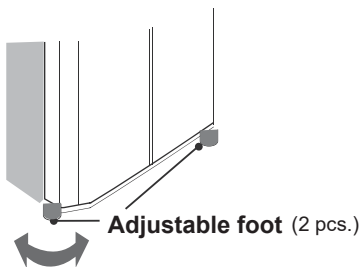 


## 3 Connect the appliance via a correctly installed socket.

### Note

- Position your refrigerator so that the plug is accessible.
- Keep your refrigerator out of direct sunlight and do not place next to heat generating appliance.
- Do not place your refrigerator directly on the ground. Insert suitable stand such as wooden board under the refrigerator.
  
# Description

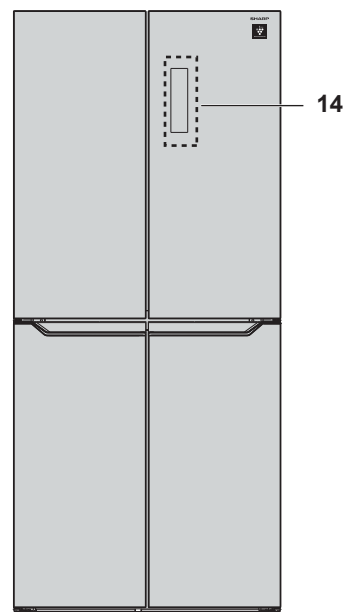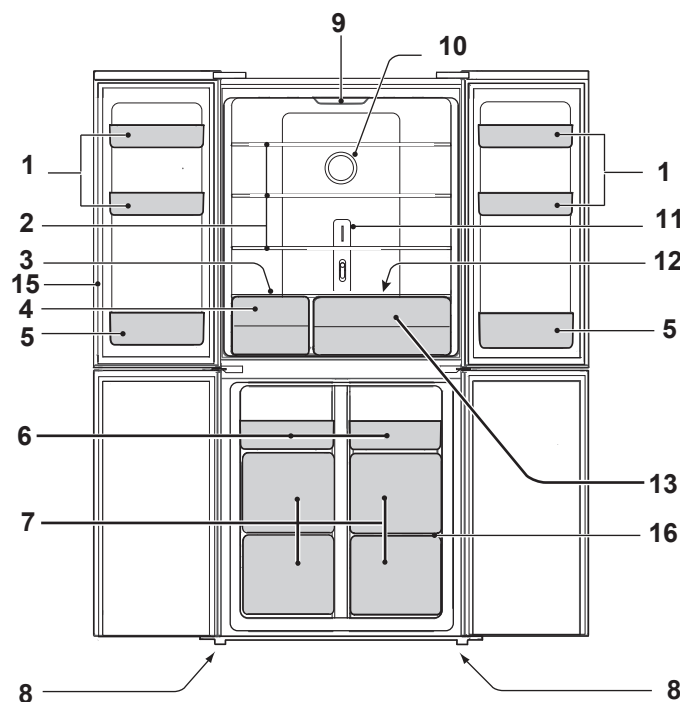

1. Door pocket (4 pcs)
2. Refrigerator shelf (3 pcs)
3. Crisper shelf
4. Fresh zone
5. Bottle pocket (2 pcs)
6. Freezer tray (2pcs)
7. Freezer Drawer (4 pcs)
8. Adjustable foot (2 pcs)
9. LED light
10. Plasmacluster indicator  
The indicator lights up when you open the refrigerator door after setting "Plasmacluster".
11. Chiller zone temperature control  
As for the details, refer to chapter "Operation".
12. Humidity adjustment  
As for the details, refer to chapter "Operation".
13. Crisper zone
14. Control panel

Following parts are included with shipment in the freezer drawer.

## Egg holder

Large



 
Small




## Ice cube tray



## 15. Vertical bar

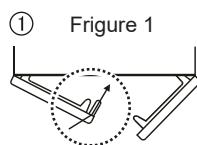

 The vertical bar is in correct position, the door can be closed.

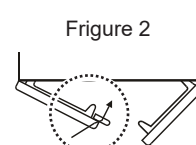


The vertical bar is not in correct position, the door can not be closed, you should reposit it as Figure 1.

- There is the heater inside the bar. You may feel the heat but you can store foods normally.

## 16. Freezer shelf
 
### How to make ice cubes

- Pour the water into the ice cube tray.
- Hold the ice cube tray upside down and twist the both ends of the tray to take out the ice cubes.

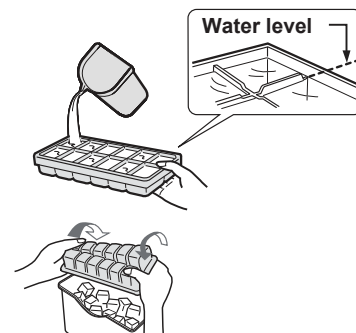

## Deodorizing unit

Deodorizing catalyst is installed on the routes of cold air. There is no need to operate and clean.

## Door alarm

- When the refrigerator or freezer door is left open for over 1 minute, the alarm sounds 5 times (Beep beep beep beep beep ).  
If you do not close the door, the alarm sounds every 30 seconds.
- The alarm stops after close all doors.

# Operation

## Setting temperature indication

The temperature that indicated on the control panel is not the exact temperature inside.

Compartment	Default setting
Refrigerator compartment	5°C
Freezer compartment	-18°C

## Mode icon

The icon of running mode lights up on the display.

	Function	Default setting
	Energy saving	OFF
	Vacation mode	
	Express freezing	
	Plasmacluster	
	Control panel lock	-

## Note

- When you press one of the keys, the display lights up.
- All modes are off initially.
- When there is no key operation for approximately 2 minutes, the display turns off.

## Control panel lock

- Control panel is locked automatically 25 seconds after the last key operation (Mode icon lights up on the display after the beep).
- If you want to lock the control panel, press button for 3 seconds or more right after the mode icons (selected temperatures) light up.
- Press button for 3 seconds or more again to unlock.



- Controlling temperature of Refrigerator compartment
- Plasmacluster setting
- Controlling temperature of Freezer compartment
- Mode select
- Lock / Unlock control panel

## Controlling temperature

The refrigerator controls its temperature automatically. You can adjust the temperature as below if you need.

### Refrigerator compartment

The temperature is adjustable between 2°C and 8°C in step of 1°C

(This setting is valid except for Energy saving and Vacation mode.)

#### How to operate

- 1 Press button and select temperature. (Temperature changes each time you press the button.)



- 2 (Flashing (5 sec.)) → (Selected temperature lights up.)

### Freezer compartment

The temperature is adjustable between -14°C and -22°C in step of 1°C

(This setting is valid except for Energy saving and Express freezing mode.)

#### How to operate

- 1 Press button and select temperature. (Temperature changes each time you press the button.)



- 2 (Flashing (5 sec.)) → (Selected temperature lights up.)


## **Energy saving**

- Use this mode to switch the appliance to energy-saving operation.




### How to operate

- 1 Select the mode icon.



- 2    
(The icon lights up.)

Follow steps **1** to **2** again to turn off this mode (the mode icon turns off) .

- The temperature setting of this refrigerator is adjusted according to the ambient temperature. Suitable temperature settings show up on the display.
- Temperature setting is not accepted during this mode.  
If you press  or  button, mode icon (  ) flashes 3 times.(Indicated temperature cannot be changed.)
- Cancel this mode if you feel the beverages are not cooled enough or ice making takes longer time.

### Tips for saving energy

- Install the refrigerator in a well-ventilated area and keep the space to ventilate.
- Keep your refrigerator out of direct sunlight and do not place it next to heat generating appliance.
- Avoid opening the door as much as possible.
- Hot food should be cooled before storing.
- Place the food evenly on the shelves to allow the cool air to circulate efficiently.

## **Vacation mode**

- Use this mode when going on a trip or leaving the house for a long time.



### How to operate

- 1 Select the mode icon.



- 2    
(The icon lights up.)

Follow steps **1** to **2** again to turn off this mode (the mode icon turns off) .

- Temperature setting for refrigerator compartment is not accepted during this mode.(Temperature is changed to 17°C automatically . )
- If you press  button, mode icon (  ) flashes 3 times.(Indicated temperature cannot be changed.)
- Temperature setting during this mode is as follows.  
Refrigerator compartment : 17°C (Unadjustable)  
Freezer compartment : -14°C ~ -22°C (Adjustable)

### Note

- For hygienic reasons, do not put foods in the refrigerator compartment while this mode is ON.




## Express freezing

- This mode is to freeze food quickly not to lose its flavor.

### How to operate

- 1 Select the mode icon.





- 2  (The icon lights up.)

Follow steps 1 to 2 again to turn off this mode (the mode icon turns off) .

- Temperature setting for freezer compartment is not accepted during this mode.(Temperature is changed to -25°C automatically . )
- Temperature setting during this mode is as follows.

Refrigerator compartment: 2°C ~ 8°C (Adjustable)  
Freezer compartment : -25°C (Unadjustable)

 
- If you press  button, mode icon (  ) flashes 3 times. (Indicated temperature cannot be changed. )
- This mode ends automatically 50 hours later after setting.

### Note


- Large food cannot be frozen in a single operation.
- Avoid opening the door as much as possible during operation of this mode.
- The operating sound may become louder than usual while this mode is ON but it is normal.

## Plasmacluster


The ionizer inside your refrigerator releases clusters of ions which are collective masses of positive and negative ions, into the refrigerator compartment. These ion clusters inactivate airborne mold fungus.

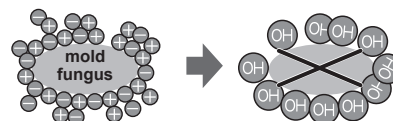


### How to operate

- 1 Press  button for 3 seconds or more.



- 2  (The icon lights up.)

 The indicator (blue) in the refrigerator turns on.

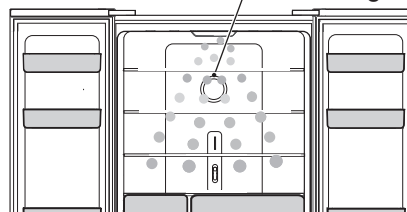

- Follow steps 1 to 2 again to turn off this mode (the mode icon turns off) .


### Note

 There may be a slight odor in the refrigerator. This is the smell of ozone generated by the ionizer. The amount of ozone is minimum and quickly decomposes in the refrigerator.

## Fresh zone temperature control

Temperature of the fresh zone can be adjusted according to the type of storage food.


- When the knob is placed at the “Crisper” position, you can use the chiller zone as a crisper. It is suitable for maintaining the appropriate temperature and humidity for fruits and vegetables.
- When the knob is placed at the “Fresh” position, it is suitable for short-term storage of fish or other fresh food. This is the best way to keep freshness. In this case, it is recommended to set the refrigerator temperature below 4°C and use the food within 3 days.

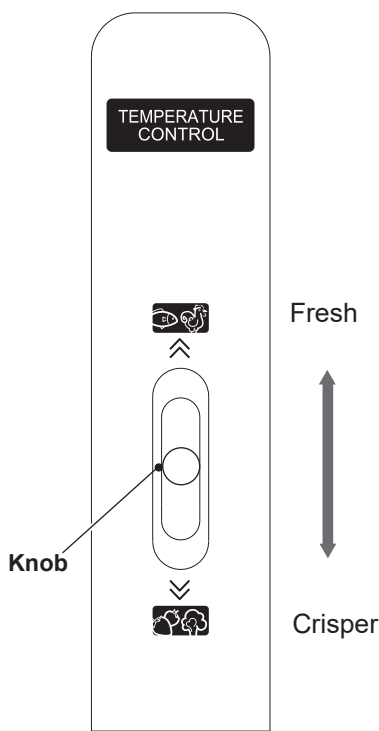

## Humidity adjustment for crisper zone

Humidity of the crisper zone can be adjusted.

 - It is suitable for vegetables when the knob is placed on the right.
- It is suitable for fruits when the knob is placed on the left.

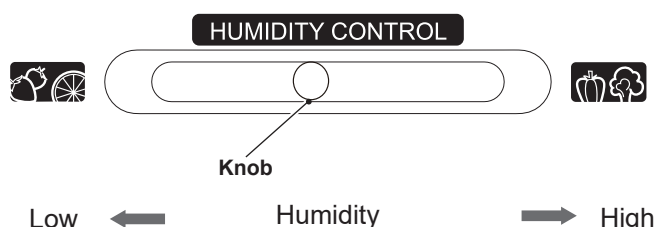

# Care and cleaning

## Important

**To prevent cracks on inside surfaces and plastic components, follow these tips.**

- Wipe out food oil adhered to plastic parts.
- Some household chemicals may cause damage, so use only diluted washing-up liquid (soapy water).
- If undiluted detergent is used or soapy water is not wiped off thoroughly, it may result in cracks of plastic parts.

## Cleaning

**For hygienic reasons, make sure to do following things regularly.**

- Remove the accessories (e.g. shelves) from the cabinet and the door. Wash them by warm soapy dishwashing water. After that, rinse them in clean water and dry.
- Clean the inside with a cloth soaked in warm soapy dishwashing water. Then, use cold water to wipe off soapy water thoroughly.
- Wipe the exterior with a soft cloth each time it gets dirty.
- Clean the magnetic door seal with a toothbrush and warm soapy dishwashing water.
- Wipe the control panel with a dry cloth.

## Note

- Do not use hot water, household cleaning powders, creams or spray-on cleaning products, or any other cleaning products such as mineral turpentine, methylated spirits, thinners, petrol etc. These may damage your refrigerator and may void any warranty.
- If the power supply is disconnected, please wait at least 5 minutes before re-connecting power.
- The glass shelves are heavy to carry. Hold them firmly when you remove the shelves from the cabinet.
- Do not drop objects inside the refrigerator or strike the inner wall. This may cause cracks to inner surface.

## Switching off your refrigerator

If the refrigerator needs to be switched off for an extended period, the following steps should be taken to reduce the growth of mold:

1. Remove all food.
2. Remove the power plug from the socket.
3. Clean and dry the interior thoroughly.
4. Keep all the doors open slightly for a few days to dry.

 
## Defrosting

Defrosting is automatically operated by a unique energy saving system.

## When the compartment light is blown

Contact the service agent approved by SHARP to replace the light. The light is not to be replaced other than by qualified service personnel.

# Storing food

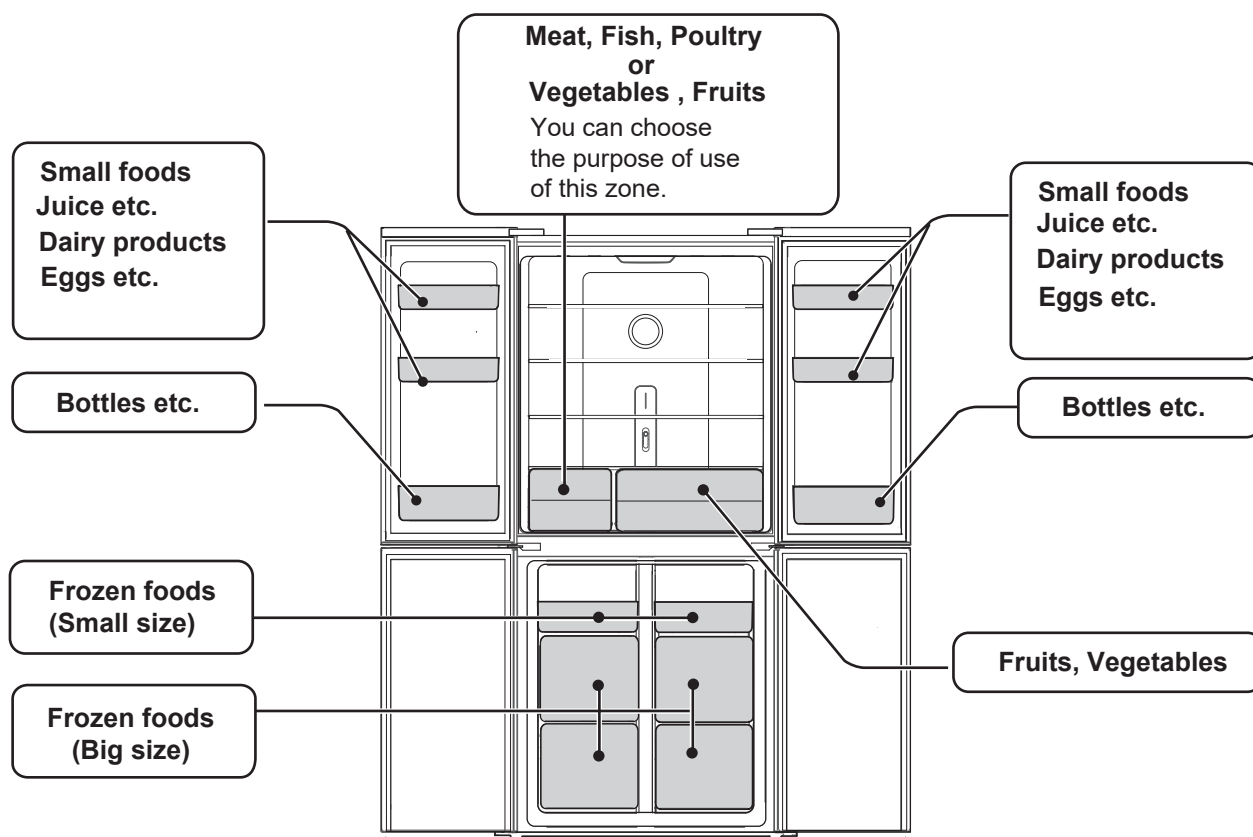

Refrigeration reduces the rate of food spoilage.

Ensure that the food is of the freshest possible quality to maximize the shelf life of perishable foods.

The following is a general guide to help promote longer food storage.

## Fruit / Vegetables

Fruit and vegetables should be loosely enclosed in a plastic material e.g. wrap, bags (do not seal) and placed in the Fruit and vegetable crisper to minimize moisture loss.

## Dairy Products & Eggs

- Most dairy products have their best-before date on the outer packaging which informs the recommended temperature and shelf life of the foods.
- Eggs should be stored in the Egg tray.

## Meats / Fish / Poultry

- Place on a plate or a dish and cover with paper or plastic wrap.
- For larger cuts or meat, fish, or poultry, place to the rear of the shelves.
- Ensure all cooked food is wrapped securely or placed in an airtight container

### \* Notes for fresh food:

- Fresh food (securely wrapped) should be stored in limited time to prevent spoilage and badly affecting other stored foods.

## For best freezing

 
- Quality of foods should be fresh.
- Freeze small quantities of food at a time in order to freeze them quickly.
- Food should be properly sealed or covered tightly.
- Place foods in the freezer evenly.
- Label bags or containers to keep an inventory of freezing food.

## Advice for preventing dew or frost inside the refrigerator

- Keep the door securely closed. If the food falls down, it may cause a gap between the cabinet and the door. Move it back to the shelf or the pocket.
- Food with high-moisture should be stored in airtight container or sealed tightly.

### Note

- Evenly place the food on the shelves to allow the cooling air to circulate efficiently.
- Hot foods should be cooled before storing. Storing hot foods increases the temperature in the unit and risk of food spoilage.
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Do not block the outlet and inlet of the cool air circulating circuit with foods or containers; otherwise the food is not be evenly cooled throughout the refrigerator.

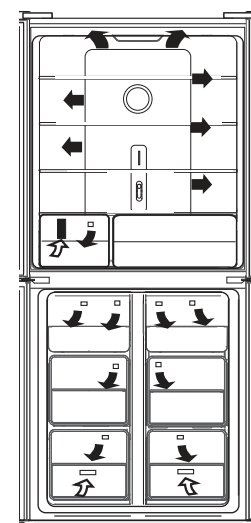

 

 




IN  
OUT

Do not place food directly in front of cold air outlet. This may lead to the food freezing.

# Before you call for service

Before calling for service, check the following points.

Problem	Solution / Situation
The outside of the cabinet is hot when touched.	It is normal. This is because of the hot pipe is in the cabinet in order to prevent dew generation
Refrigerator makes loud noise.	<p>Following sounds are normal.</p> <ul style="list-style-type: none"> <li>• The compressor makes loud noise when its operation starts. <ul style="list-style-type: none"> <li>-- Sound becomes quieter after a while.</li> </ul> </li> <li>• The compressor makes loud noise once a day. <ul style="list-style-type: none"> <li>-- Operating sound is made immediately after automatic defrost operation of the cooling unit.</li> </ul> </li> <li>• Sound of flowing fluid (gurgling sound, fizzing sound). <ul style="list-style-type: none"> <li>-- It is caused by refrigerant flowing in pipes (sound may become louder from time to time).</li> </ul> </li> <li>• Cracking or crunching sound, squeaking sound <ul style="list-style-type: none"> <li>-- It is caused by expansion and contraction of inner walls and internal parts during cooling.</li> </ul> </li> </ul>
Frost or dew appears inside or outside the refrigerator.	<p>This may occur in one of the following cases. Use a wet cloth for wiping frost and a dry cloth for wiping dew.</p> <ul style="list-style-type: none"> <li>• When the ambient humidity is high.</li> <li>• When the door is frequently opened and closed.</li> <li>• When food containing plenty of moisture are stored. (Wrapping is required.)</li> </ul>
The food in the refrigerator compartment are frozen.	<ul style="list-style-type: none"> <li>• Is the refrigerator temperature control set at 2°C for a long time? <ul style="list-style-type: none"> <li>-- Change the temperature control to 5°C or warmer.</li> </ul> </li> <li>• Is the freezer temperature control set at -22°C for a long time? <ul style="list-style-type: none"> <li>-- Change the temperature control to -18°C or warmer.</li> </ul> </li> <li>• If ambient temperature is low, food may freeze even if the refrigerator compartment is set at 8°C.</li> </ul>
Odors in the compartment.	<ul style="list-style-type: none"> <li>• Wrapping is required for the food with strong odors.</li> <li>• Deodorizing unit cannot remove all odors.</li> </ul>
Door alarm does not stop.	<ul style="list-style-type: none"> <li>• The alarm stops after close the door.</li> </ul>
The control panel does not work.	<p>This may occur in one of the following cases.</p> <ul style="list-style-type: none"> <li>• Control panel is locked automatically 25 seconds after the last key operation. Press  button for 3 seconds or more to unlock.</li> <li>• The panel or your finger is soiled with dripping, oil and etc.</li> <li>• When you touch the panel with gloved hand, adhesive bandage on your finger, nail or objects.</li> <li>• Sticker or tape is affixed on the keys.</li> <li>• Touch position is slightly off from the keys.</li> <li>• Operate time is not enough for the keys to work.</li> </ul>
Error indicator(       ) appears on the display.	Make sure to contact service agent approved by SHARP.

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support

Centre on (AU) 1300 886 649

Customer Helpline: (AU) 1300 886 649

Email: [info@tempo.org](mailto:info@tempo.org)

For an electronic copy of this manual, please contact our after sales support centre.

# Specification

		SJ-XP470HB
Rated voltage (V~)		220 - 240
Rated frequency (Hz)		50
Rated current (A)		1.5
Rated input of heating systems (W)		226
Defrosting input (W)		220
Climate class		T
Refrigerant		R600a
Charge (g)		66
Insulation blowing gas		Cyclo pentane
Rated gross volume (L)		473
Rated storage volume (L)		401
Group (AS / NZS 4474.1)		5B
Net weight (kg)		90
Overall dimensions (mm)	Height	1800
	Width	795
	Depth	700

# SHARP

## WARRANTY

### *Consumer Electronic Products*

#### **Congratulations on Your Purchase!**

This Sharp product is warranted against faults in material and manufacture for the period as stated in the table below.

If service is required during the warranty period, please contact your nearest Sharp Approved Service Centre. These repairs would be carried out at no charge to the owner, subject to the conditions specified herein.

This warranty does not extend to defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, lack of maintenance, accidental damage, improper voltage, liquid spillage, vermin infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim. This warranty is in addition to and in no way limits, varies or excludes any implied rights and remedies under any relevant legislation in the country of sale.

This warranty does not cover transportation to and from the Sharp Approved Service Centre. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. The repair of your goods may result in the loss of user generated data, please ensure that you have saved this data elsewhere prior to repair.

Australian customers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The criteria of a major failure is defined in the Australian Consumer Law. Should you require any assistance with a major failure please contact Sharp Customer Care.

#### **WARRANTY PERIODS**

Refrigerator 24 months

**IMPORTANT NOTICE:** This warranty applies only to products sold in Australia

# SHARP

FOR LOCATION ENQUIRIES WITHIN  
**AUSTRALIA**  
REGARDING YOUR LOCAL  
**SHARP APPROVED SERVICE CENTRE**  
Customer service helplines  
**1300 886 649**  
(calling within Australia)  
Monday - Saturday, 9am - 6pm  
Open Monday to Saturday except on public holidays.

Distributed by  
Tempo (Aust) Pty Ltd  
PO Box 6056 Frenchs Forest DC 2086 Australia  
[info@tempo.org](mailto:info@tempo.org)



**SHARP**  
SHARP CORPORATION