

SEIKI | S HOME

10KG HEAT PUMP TUMBLE DRYER

SC-1000AU10HP



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety Instructions	4
Product Overview	8
Getting Started	10
Instructions	11
Operation	12
Maintenance	15
Troubleshooting	17
Specifications	18
Customer Helpline	20

GENERAL SAFETY INSTRUCTIONS

IMPORTANT INFORMATION

Read this manual thoroughly before you start using the Clothes Dryers.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

Pay close attention to messages that follow this safety alert symbol or the words **DANGER**, **WARNING** or **CAUTION**. These words will be used to alert you of potential hazards that and injure you and others. Following these instruction will tell you how to reduce the chance of injury and the possible dangers if instructions aren't followed.

ELECTRICAL SAFETY

- **Voltage:** Plug the appliance to a 220-240V, 50Hz, properly earthed power outlet, it must be in good working order.
- **Power connection:** Do not use an adaptor or an extension cord.
Plug the power plug directly into a separate power point that cannot be accidentally turned off, and that is easily accessible so you can switch it off if needed.
- **Power cord:** Do not kink or damage the power supply cord. Make sure it is behind the appliance so no one can step on or place anything on the power supply cord or against it. A damaged power plug may overheat and cause a fire.
- **Damaged cord:** Do not use a cord that shows cracks or damage. Any damage to the cord may cause a short circuit, fire and/or electric shock.
Contact our support centre on info@ayonz.com for advice
- **Disconnection:** Never pull the power cord to unplug appliance. Grip the plug and pull straight out from the power point. After turning the device off, wait at least 2 minutes before turning the appliance back on again.
- **Electrical work:** If the installation of this appliance requires any electrical work, make sure it is carried out by an electrician.

WARNING

Make sure your home is fitted with a residual current device (Safety Switch).

GENERAL SAFETY INSTRUCTIONS (cont.)

To reduce risk of fire, electric shock or injury, always follow these basic precautions and accident prevention measures when using this appliance, including the below:

INSTALLATION

- The product is heavy, be careful when moving it. To avoid back or other injury, have 2 people lift or mechanical aid when installing.
- When unboxing, thoroughly inspect the appliance carefully for any damage. If there is any damage, do not install the appliance. Contact our support centre on info@ayonz.com for advice.
- While installing the appliance make sure that the power cord is not bent or flattened.
- Install appliance on a flat level and stable ground.
- Do not install appliance in a tight fitted cabinet.
- Do not install appliance near other heat sources such as radiators, heaters or direct sunlight.
- If not wall mounted, be sure that the appliance is not placed on any soft materials such as plastics or foams.

 
WARNING

Make sure that transport packaging is removed from the rear of the dryer. Do not overload the dryer with too many clothes.

IMPORTANT

Before using the washing machine, you must remove the 4 transport bolts from the rear of the machine.

If you do not remove these transport bolts before first time use, you will damage the unit and also void warranty. You must remove these transport bolts before first time use.

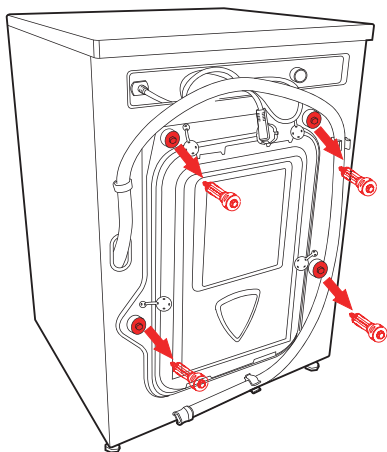

GENERAL SAFETY INSTRUCTIONS (Cont.)

USAGE CONDITIONS AND RESTRICTIONS

- Supervision over children is to ensure that they do not play with the appliance. Never allow them to use, play with or crawl inside the appliance. Cleaning and maintenance must not be done by children.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are being supervised or been given instructions on how to use of the appliance in a safe way and understand the hazards with using this appliance incorrectly.
- Do not block any ventilation openings. Ensure that vents are not covered by anything.
- Do not use this product for anything other than its intended purpose, and only use it as described in this manual. Do not attempt to alter or modify this appliance.
- Only load items that are suitable for the clothes dryer.
- Do not place any open source flames on the dryer such as candles, etc..
- The door/window will be hot after a long cycle, be sure not to touch the window and to keep children away from the appliance.
- Never stop the clothes dryer before the cycle finishes, the last stage of the cycle is a drying mode without heat to ensure items are left at a temperature that will not damage them.
- The only part that can be changed is the filter, other than this nothing else in the dryer contains user serviceable parts. Do not open, disassemble or try to repair the appliance yourself. Only have this appliance serviced by a qualified technician.
- Incorrect use can result in property damage, injury or death. We assume no liability for misuse of the appliance or noncompliance with these instructions.

WARNING

Never try to repair, modify or replace any part of the appliance, unless this manual says you can do so. All other servicing is to be done by a qualified technician, or contact our support centre on info@ayonz.com for advice.

IMPORTANT

Before using the washing machine, you must remove the 4 transport bolts from the rear of the machine.

If you do not remove these transport bolts before first time use, you will damage the unit and also void warranty. You must remove these transport bolts before first time use.

GENERAL SAFETY INSTRUCTIONS (Cont.)

CAUTION

ITEMS BELOW ARE NOT SUITABLE FOR DRYING. IT CAN CAUSE FIRE IN THE APPLIANCE OR EXTENSIVE DAMAGE. DO NOT PLACE FOLLOWING IN THE APPLIANCE

- Items containing rubber or foam like rubber or any other similar textured materials.
- Items that are spotted or soaked with cooking oil or any other flammable items. These other items include kerosene, stain removers, dry-cleaning solvents, alcohol, petrol, turpentine, waxes, hair care products, wax removers.
- Washing the items vigorously beforehand in hot water with extra detergent will reduce, but not completely eliminate the hazard.
- Undergarments that contain metal reinforcements (such as underwire bras). Plastic articles such shower caps and waterproof bibs.
- Rubber-backed articles, clothes with foam rubber pads, pillows, galoshes and rubber coated tennis shoes.
- Fabric softeners or similar products unless recommended by product manufacturer for use in a clothes dryer.
- **WARNING:** Never stop a dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

CAUTION

- Do not use the tumble dryer if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the dryer.
- Do not allow lint to accumulate around the tumble dryer. Clean the Lint Trap and Filter after every use.
- Enough ventilation has to be provided to avoid the backflow of gases into the room from appliances burning other fuels including open fires.
- Remove all objects from pockets such as lighters and matches.

 
If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate the hazard.



WARNING: Risk of fire


This symbol alerts you to take care as oil-affected items can ignite, especially when exposed to heat, such as in a clothes dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation causes heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so it will create a fire hazard.

PRODUCT OVERVIEW

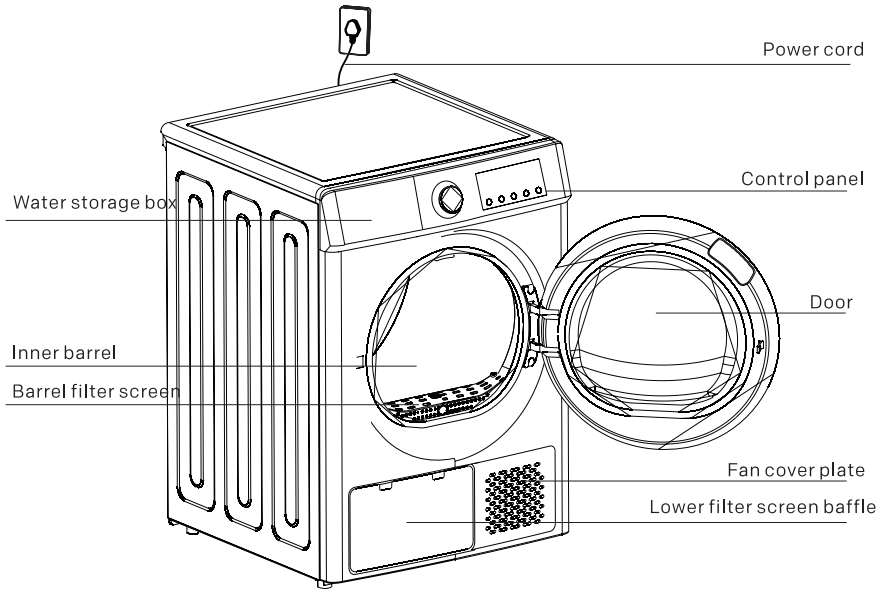

PRODUCT OVERVIEW (Cont.)

 CONTROL PANEL

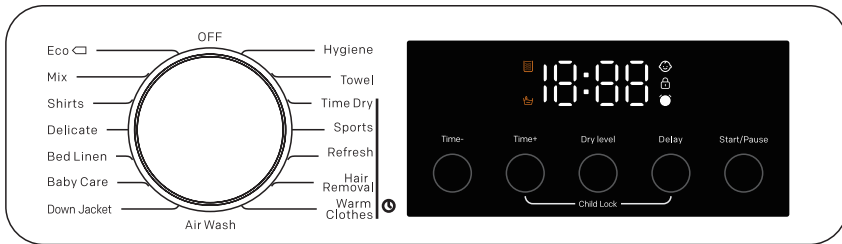

Start/Pause button

Press the “Start/Pause” button to start or pause the procedure.

Delay

Press the “Delay” button to enter the delay setting, press the “Delay” button again to select the delay time, and then press the “Start/Pause” button to start the delay. The delay time shall be selected after selecting the procedure and before pressing the “Start/Pause” button. After the delay is started, all buttons except the “Start/Pause” button are invalid.

Dry Level

Press the “Dry Level” button to select the degree of dryness. Different procedures have different setting ranges for dryness. As for timing procedure, degree of dryness cannot be selected. There are 3 degrees of dryness: L1(dry), L2(drier), L3(extra dry)

Time-, time+

It is used to adjust the clothes drying time. Different procedures have different setting ranges of drying time. In some procedures. it can’t choose drying time.

Child lock

In order to prevent children from mis-operation during the machine operation, the child lock function can be turned on.

 
During the running of the procedure, press the “Time+” and “Delay” button to enter the child lock state, and the child lock indicator is on. Press the “Time+” and “Delay” button again to release the child lock state, and the child lock indicator goes out. Under the child lock state, all buttons are invalid.

GETTING STARTED

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

INSTALLATION

- This clothes dryer can be installed on the floor (as supplied).
- This appliance can not be installed behind a lockable door, sliding or a door with a hinge on the opposite of the clothes dryer. In all ways that full opening of clothes dryer door is strictly not allowed.
- Make sure that all electrical connections are made by qualified technicians and all instructions in this manual are observed.
- Place the dryer in a dry, well ventilated area, away heat and direct sunlight.
- Exhaust air must not be discharged into the flue which is used for exhausting fumes from appliances burning gas or other fuels.
- Make sure to allow 10cm of spacing behind the dryer to the wall.

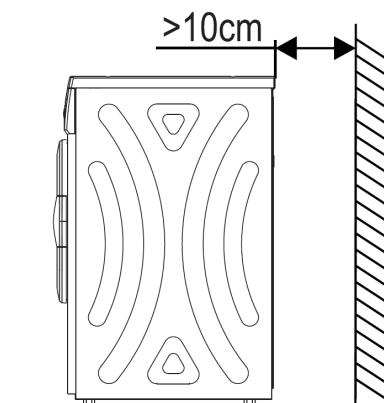

LEVELING THE APPLIANCE

- Make sure to position the dryer is on a level and stable ground. If the floor is uneven you can adjust the feet by twisting it as if to screw in the feet to the product, either clockwise or counter-clockwise to adjust the feet up or down until appliance is completely level.

NOTE: The Dryer will not work correctly unless it is positioned perfectly level.

- Do not install the dryer in a place that can easily be reached by rain
- Do not place the back of the dryer near curtains.
- Do not place the dryer near gas or flammable areas.













INSTRUCTIONS

CAUTION!

Make sure you read all safety precaution in this manual that cause a hazard if placed in the clothes dryer.

LOADING THE DRYER

- Before loading the dryer, check that none of the clothes you are inserting into the dryer have any symbols anywhere on them. These symbols indicate that there are not suitable for clothes drying.

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

- Make sure none of the items you are putting into the dryer have no combustible materials or foreign objects (such as coins, hair pins or lighters). Be sure to empty pockets of everything before putting into the dryer.
- Clean the filter before each use and make sure its properly back in place.
- To avoid items getting tangled in the dryer which can reduce drying performance, please insert items into the dryer one at a time.
- Turn items with cippers inside out and fasten buckles, as this will help to reduce impact noise with items hitting the drum while spinning.
- Make sure to check items for stains before inserting into the dryer, as drying can permanently set stains.
- As you dry large blankets or sheets from time to time open the dryer door take out the blanket or sheet and give it a shake then place back into the dryer. This will help larger items with drying process.

WARNING: Do not overload the dryer, maximum amount of items that can be dried in one load is 10 kg.

- Make sure only items that have been washed and are still we are placed in the dryer, no items that are dry are to be placed in.
- Be sure when closing the dryer door that not items are jammed in the door.
- Do not add items to the dryer while it is operating.

OPERATION

Name	Capacity(kg)	Introduction
OFF	--	Shut down the clothes dryer
ECO	9.0/10.0kg	Dry cotton fabric
MIX	4.5/5.0 kg	For the fabric blending cotton fabric and synthetic fabric
Shirts	1.0kg	Used for drying Shirts
Down Jacket	1.5kg	Used for drying down-filled coat/duvet
Delicate	3.0kg	Silk and other clothing that is not resistant to high temperatures
Hygiene	≤3.0kg	For the clothes stored for a long time, carry out sterilization treatment
Time Dry	--	Timed Procedures
Warm clothes	A little	Timing procedure/warm the clothes
Bed Linen	4.5/5.0 kg	Used for heavy loads such as sheets
Baby Care	1. 0kg	Drying baby cotton fabric clothes
Air Wash	A little	Tumbles with just warm air
Towel	3.0kg	Drying Towels
Sports	A little	Timed Procedures/Breathable clothing such as sportswear
Refresh	A little	Timer procedure/Deodorization Freshness
Hair Removal	A little	Timer procedure/cleaning lint

OPERATION (Cont.)

NOTE

The above procedures are the recommended procedures, and the users can choose appropriate procedures according to their personal habits. If the clothes are not completely dried, the users can choose the timing adjustable procedure to continue drying.

The timing adjustable procedure will not automatically judge the degree of wetness. If the clothes are still wet after the procedure finishes, please repeat the procedure or adjust the drying time until clothes are dried.

Large fabrics such as sheets or curtains are easy to be wrapped into a ball when drying. If so, stop the clothes dryer, take fabrics out and shake them, and then put them into the clothes dryer to continue drying.

When drying down-filled coat, before drying, please turn the inside of the clothes to the outside.

The time when the machine starts is the default time. In the actual operation, the temperature and humidity of the environment, the type and weight of clothes will affect the drying time. When the machine is running, the humidity sensor intelligently senses the humidity of clothes and automatically adjusts the drying time. The display time of the corresponding LED screen will increase or decrease synchronously, which is normal.

OPERATION (Cont.)

Preparations before drying clothes

1. Put some cloth strips in the inner cylinder.
2. Plug in power and press the “Power” button.
3. Select the “Timing drying” procedure and press the “Start/Pause” button.
4. After the procedure finishes, please clean the filter screen according to the content in the “Cleaning and maintenance”

NOTE

After handling, please stand the machine upright for more than 2 hours before using the machine, and pick soft cloth strips to clean the inner barrel before using it for the first time. During the operation of the clothes dryer, the compressor and drain pump will generate some sounds, and it is normal.

How to use

 
 
1. Please dehydrate the clothes before putting them into the clothes dryer. The drier the clothes are after dehydration, the more time and electricity are saved when drying clothes.
2. Please shake the clothes, zip them up, button them up and put them in the clothes dryer; to avoid the zipper or button from making noise during drying, please turn the clothes outside over before putting them into the clothes dryer.
3. Clean the filter screen before starting the clothes dryer.
4. According to the prompt of the procedure name, select the corresponding drying procedure according to the material type and label information of the clothes.
5. In order to get the ideal drying effect, please classify the clothes, and don't dry the clothes with different thickness or different degrees of dryness or wetness at the same time as far as possible.
6. When drying a small amount of clothes, it is recommended to use the timing adjustable procedure.
7. When drying sheets, curtains and other large-sized fabrics, if in the drying process, the fabrics are lumped, the operation can be suspended, and drying can continue after shaking.
8. For the clothes that need to be dried by the clothes dryer, it is recommended to use fabric softener when washing.
9. Some heavy clothes (jeans, big towels, etc.) are difficult to be dried locally because of the material characteristics; if you find that the drying is still incomplete after the end of the procedure, it is recommended to use the “Timing drying” procedure to adjust the drying time.

MAINTENANCE

CLEANING AND CARE

EMPTY THE WATER CONTAINER

1. Hold and pull out the water container with 2 hands.
2. Tilt the water container, pour out the condensate water into basin.
3. Install the water container.

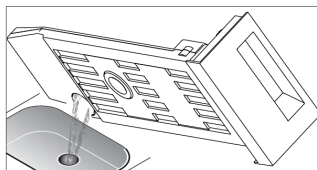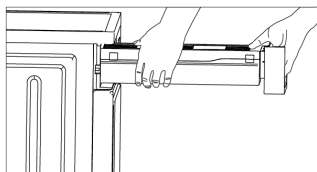


WARNING:

Empty the water container after each use, the programme will be paused and the water box will light if the water container is full during the drying process. After the container is emptied, the dryer can be restarted by pressing the “start/pause” button.

- Do not consume the condensate water.
- Do not use the dryer without the water container.

CLEAN THE FILTER DOOR

 
1. Open the door and take out the filter.
2. Clean the door filter; wipe off the scrap threads accumulated on the filter.
3. Re-install the filter back in the door.

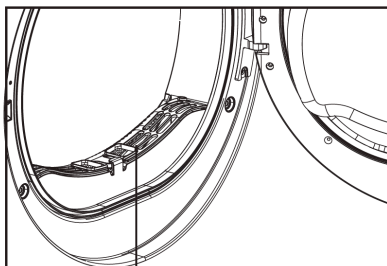

Filter door

CLEAN THE FILTER BASE

 1. Pull the lower filter screen baffle in the lower left corner of the machine.
2. Turn the knob, and take out the lower filter screen. Clean the lower filter screen with soft brush.
3. Put the lower filter knob, and baffle to the original position.

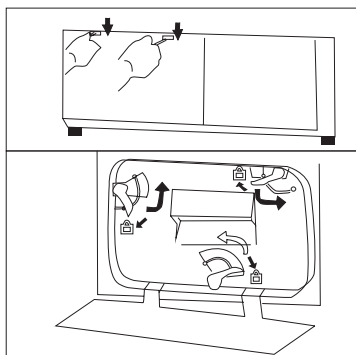

MAINTENANCE (Cont.)

WARNING:

 
- The fluff accumulated on the filter will block the air circulation, which will cause the extension of drying time and energy consumption.
- Make sure to disconnect the power from the wall socket before cleaning.
- Do not operate this dryer without the filter.
- Clean the filter after each use to prevent lint accumulation inside the dryer.
- Clean the heat exchanger. When doing this, please use gloves. According to the need, it is recommended to clean the heat exchanger once every month.

CLEAN THE FILTER BASE

1. Pull the lower filter screen baffle in the lower left corner of the machine.
2. Turn the knob, and take out the lower filter screen. Clean the lower filter screen with soft brush.
3. Put the lower filter knob, and baffle to the original position.

NOTE:

1. Do not press it hard when cleaning the heat exchanger, otherwise it will damage the heat exchanger.
2. Disconnect the power before cleaning.
3. Clean the drum clothes dryer.

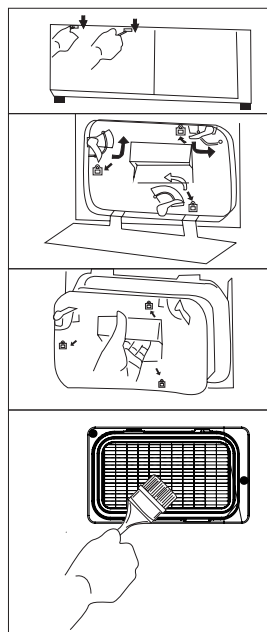

WARNING:

- Disconnect the power before cleaning!
- Please wear gloves when cleaning.
- When cleaning the surface or other parts of the clothes dryer, use a wet cloth soaked with clean water, otherwise the plastic surface or other parts may be damaged.
- Do not rinse the clothes dryer directly with tap water hose or high-pressure water gun.

Cleaning steps:


- Prepare a wet cloth soaked in clean water.
- Clean the door, especially the internal windows.
- Clean the sealing ring around the front support.
- Clean the humidity sensor of the drum.
- Clean fluff in the air duct. Before starting the machine, dry it with a soft cloth.


TROUBLESHOOTING

ERROR CODES

Alarm prompt	Alarm reason	Solution
OE	The water storage box is full or the drain pump is abnormal	If the fault is not solved after emptying the water storage box, please call the national service hotline
dE	The door is not closed or the door is not closed completely	If the fault has not been solved after closing the door again, please call the national service hotline
LE	The filter screen is not cleaned, or motor is abnormal	If the fault is not solved after cleaning the filter screen, please call the national service hotline
HE	The compressor is abnormal	Please turn off power and call our service number.
tE1	Temperature of front air duct is abnormal	
tE2	The condenser temperature is abnormal	
SE	The humidity sensor is abnormal	

Remarks:

When  appears during the machine operation, please check whether the water storage box is full. If so, please empty it and restart the machine. If not, please start the machine directly.

When  appears during the running machine, please check whether the barrel filter screen and the lower filter screen are full. If the filter screen is full of fluff, please clear it and restart the machine; if not, please start the machine directly.

TROUBLESHOOTING GUIDE

Use the below list to identify if your clothes dryer is having any issues and to identify and solve any problems. If you cannot solve the problem, contact our call centre on info@ayonz.com.

Problem	Solution
The computer plane does not display any content	Check whether the power or power plug is normal; check whether the power switch is turned on.
The clothes dryer is not started	Confirm whether the door of the clothes dryer is closed. Confirm whether the procedure is selected and the "Start /Pause" button is pressed.
The door opens automatically	Press and hold the door handle, so that the door lock can be locked in the corresponding position. Check whether the clothes are excessive.
The drying standard is not reached or the drying time is too long.	Clean the barrel filter screen and lower filter screen; use a more appropriate drying procedure; ensure that the fan cover is unobstructed.

SPECIFICATIONS

Power Supply	220-240V ~ 50Hz
Rated Power	850W
Grade of Waterproof	IPX4
Drying Capacity	10 kg
Weights	Net: 52 kg
	Gross: 58 kg
Dimensions	595 (w) x 670 (d) x 850 (h) mm

NOTE: The rated capacity is maximum capacity, make sure that the dry clothes which are loaded in to the appliance do not exceed the rated capacity each time.



CUSTOMER HELPLINE:

info@ayonz.com
02 8279 8606

DISTRIBUTED BY:

Ayonz Pty Ltd