

# **CONTENTS**

CONTENTS	2
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	3
ADDENDUM	3
SPECIFICATIONS	3
IMPORTANT SAFETY INSTRUCTIONS	4-5
TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION	6-8
SETTING UP YOUR OVEN	8
IMPORTANT INFORMATION ABOUT INSTALLING	9
FITTED UNITS	10
INSTALLATION DIMENSIONS	10
BUILDING IN	10-11
BEFORE FIRST USE	12
OPERATION INSTRUCTION	13-30
TROUBLESHOOTING	31

# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a trained person.

## **ADDENDUM**

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

# **Specifications**

Model:	EO45SMWB
Rated Voltage:	230-240V~50Hz
Rated Input Power(Microwave):	1550W
Rated Output Power(Microwave):	900W
Rated Input Power(Grill):	1300W
Rated Input Power(Convection):	1900W
Rated Input Power(Steam):	1500W
Rated Input Power(Maxinmum):	3450W
Oven Capacity:	34L
External Dimensions:	595×525×454 mm
Net Weight:	Approx. 33 kg

# **IMPORTANT SAFETY INSTRUCTIONS**

## WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

- Warning: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- Warning: It is hazardous for anyone other than a trained person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

  Children should be supervised to ensure that they do not play with the appliance.


  Cleaning and user maintenance shall not be made by children.
- 4. Keep the appliance and its cord out of reach of children.
- 5. Only use utensils suitable for use in microwave ovens.
- 6. The oven should be cleaned regularly and any food deposits should be removed.
- Read and follow the specific: "PRECAU-TIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
- 8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- 9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- 10. Do not overcook food.
- Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
- 12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.

- 13. Install or locate this oven only in accordance with the installation instructions provided.
- 14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- 15. This appliance is intended to be used in household and similar applications such as:
  - -staff kitchen areas in shops, offices and other working environments;
  - -by clients in hotels, motels and other residential type environments;
  - -farm houses;
  - -bed and breakfast type environments.
- 16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 17. Do not store or use this appliance outdoors.
- 18. Do not use this oven near water, in a wet basement or near a swimming pool.
- 19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
- 20. Do not let cord hang over edge of table or counter.
- 21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- 22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Metallic containers for food and beverages are not allowed during microwave cooking.

- 23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- 24. Children should be supervised to ensure that they do not play with the appliance.
- 25. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- 26. Accessible parts may become hot during use. Young children should be kept away.
- 27.Steam cleaner is not to be used.
- 28 During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- 29. Only use the temperature probe recommended for this oven.(for ovens provided with a facility to use a temperature-sensing probe.)
- 30. WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- 31. The appliance must not be installed behind a decorative door in order to avoid overheating.
- 32. Surface of a storage cabinet can get hot.
- 33. The microwave oven is intended for heating food andbeverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- 34. WARNING: When move the oven, do not carry handle. ( Oven is overweight, handles are easily broken.)
- 35. The water in the receiving tank, inside the oven and in the water tank should be cleaned up after each use.
- 36. Do not use the paper cups and plastic containers with temperature resistance below 120 degrees. The glass, ceramic, stainless steel utensils can be used.
- 37. Steam is the main heating function for this product.

WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

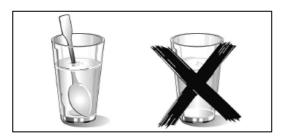

o If you are heating liquid in the microwave, then you must also place a teaspoon in the container. This will ensure that the liquid does not boil suddenly after being removed from the microwave cavity.

# READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

# To Reduce the Risk of Injury to Persons Grounding Installation

## **DANGER**

**Electric Shock Hazard** 

Touching some of the interna components can cause serious personal injury or death. Do not disassemble this appliance.

## WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

- 1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- 2. If a long cord set or extension cord is used:
- 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

- 2)The extension cord must be a groundingtype 3-wire cord.
- 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

## **CLEANING**

Be sure to unplug the appliance from the power supply.

- Clean the cavity of the oven after using with a slightly damp cloth and remove any food deposits.
- 2. Clean the accessories in the usual way in soapy water.
- The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch:

Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes.

Wipe the oven clean using a soft, dry cloth.

## **UTENSILS**

## **CAUTION**

Personal Injury Hazard
It is hazardous for anyone
other than a compentent person
to carry out any service or repair
operation that involves the removal
of a cover which gives protection
against exposure to microwave
energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

#### Utensil Test:

- 1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
- 2. Cook on maximum power for 1 minute.
- 3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- 4. Do not exceed 1 minute cooking time.

# Materials you can use in microwave oven


Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short–term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

# Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-	Metal shields the food from microwave energy. Metal trim may
trimmed utensils	cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

# SETTING UP YOUR OVEN

# **Names of Oven Parts and Accessories**

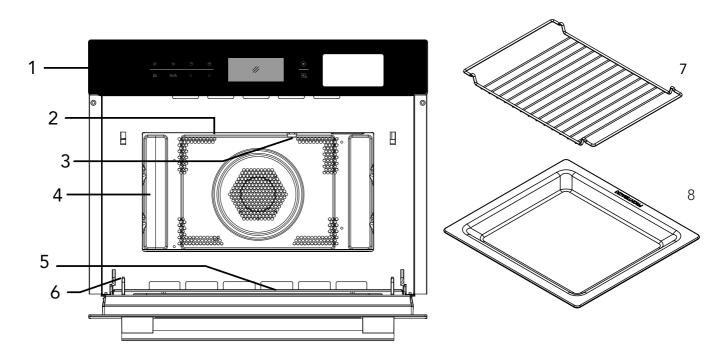

- 1. Control panel
- 2. Grill element
- 3. Light
- 4. Cavity
- 5. Door glass
- 6. Hinge

- 7. Grill Rack
- 8. Grill Pan

# IMPORTANT INFORMATION ABOUT INSTALLING

- This appliance is NOT intended for use in a commer cial environment.
- Please observe the installation instructions pr ovided and note that this appliance should only be installed by a quali fied technician.
- The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
- In case a new socket is needed, installation and cable connection must only be done
  by a quali fied electrician. If the plug is no longer accessible following installation, a
  pole disconnecting device must be present on the installation site with a contact gap
  of at least 3 mm.
- Adapters, multiway strips and extension cor ds must not be used. Overloading can result in fire.
- If the appliance is not fitted with a supply cord and a plug, the connection equipment
  must have a contact separation in all poles that provide full disconnection, and the
  appliance must be incorporated in the fixed wiring in accordance with the wiring rules.


The accessible surface may be hot during operation.



# Fitted units

- This appliance is only intended to be fully fitted in a kitchen.
- This appliance is not designed to be used as a tabletop appliance or inside a cupboard.
- The fitted cabinet must not have a back wall behind the appliance.
- A gap of at least 45 mm must be maintained between the wall and the base or back panel of the unit above.
- The fitted cabinet must have a ventilation opening of 250 cm<sup>2</sup> on the front. To achieve this, cut back the base panel or fit a ventilation grille.
- Ventilation slots and intakes must not be covered.
- The safe operation of this appliance can only be guaranteed if it has been installed in accordance with these installation instructions.
- The fitter is liable for any damage resulting from incorrect installation.
- The units into which the appliance is fitted must be heat-resistant up to  $90 \, ^{\circ}\text{C}$  .


# Installation dimensions

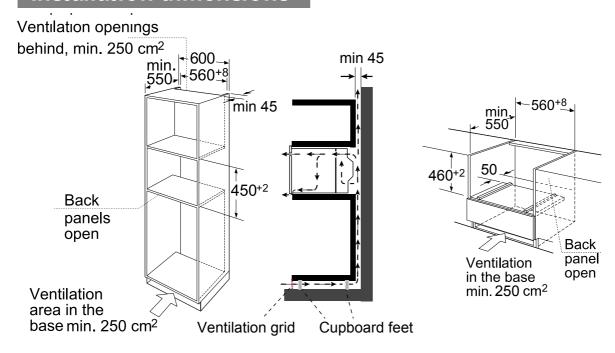

Note: There should be gap above the oven.

# **Building in**

- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.
- 1. Carefully push the oven into the box, making sure that it is in the centre.
- 2. Open the door and fasten the oven with the screws that were supplied.

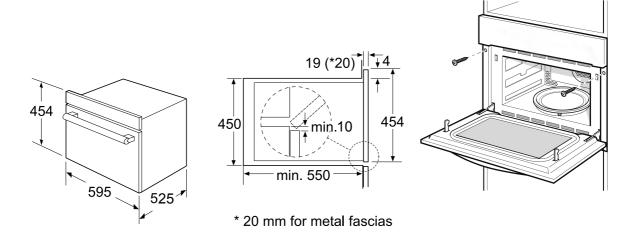

- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.
- The gap between the worktop and the appliance must not be closed by additional battens.

#### **Important information**

The appliance must be fitted with means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III conditions, and these means must be incorporated in the fixed wiring in accordance with the wiring rules.

The appliance is designed to be permanently installed with a three-pin power cord and may only be connected by a licensed expert in accordance with the connection diagram.

Only a qualified electrician who takes the relevant regulations into account may replace the power cord.

Do not use multiple plugs, power strips or extensions. Overloading causes a risk of fire.

If the connection is no longer accessible following installation, an all-pin isolating switch with a contact gap of at least 3 mm must be provided in accordance with the wiring rules.

#### Connect the wires of the mains power cord in accordance with the following colour coding:

Green and Earth wire (E)

yellow

Blue Neutral wire (N)

Brown Live (L)

#### **Great Britain and Australia:**

Do not connect the appliance using a 13 A plug or protect it with a 13 A fuse. The appliance must be protected using a fuse that is rated 16 A or higher. The appliance must be disconnected from the power supply during all installation work. When the appliance is installed, protection must be provided against accidental contact in the future.

# **BEFORE FIRST USE**

# Initial cleaning and heating

Removing the microwave oven all of the protection foil on the front. For more information see the "CLEANING". Before the first use of the appliance,

- Remove all accessories and wash out of the microwave.
- Electric heating empty containers. New appliances typically smell when first used. Before using the electrical appliance to cook food faster to heat it helps to banish odors.
- Before heating, it is best to wipe the microwave oven interior with a damp cloth. In this way, storage and untwisting appliances accumulated in the packaging process in furnace dust or residual packing material can be removed.
- Touch " ▶ " keys. Appliance turn on, the main menu appears in the display.
- Raise the temperature to maximum temperature. This can be achieved by using adjustment keys to achieve.
- Touch " symbol next to the sensor keys. Heat the empty oven for at least an hour.
  - When you do this, make sure that the room well ventilated. Close the door to the other room to avoid odor pervaded the House.
- Let the appliance cool down to room temperature. Then solution of neutral detergent mixed with hot water to clean inside the microwave oven, then wipe dry with a clean soft cloth.
  - Keep the door open until completely dry in the oven.

# **OPERATION INSTRUCTION**

## **Control Panel**



This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

## 1. Clock Setting

When the microwave oven is electrified, "00:00" will blink, buzzer will ring once.

- 1) Press " ( " or " ) " to set the right time(between 00:00 and 23:59.)

Note: 1) If you want to change the time, you have to press and hold the " button for 3 seconds. The actuall time disappears and then the time will blink in the display.

Press" \( \times \) " to set the new time and press the " \( \times \) " button to confirm the setting.

2) When you set the clock, long press " < " or " > " when adjusting 10MIN, short press time (each time you adjust 1MIN).

NOTE: When press " ∴ ",you could choose Microwave,Grill,Convection, Grill+Fan,MW+Convection, MW+Grill function,Microwave+Grill+Fan.

- 2. Microwave Cooking
- 1) Press the " : button to activate the microwave function. "01:00" displays and the microwave icon appears.
- 2) Press " : or " < " or " > " to select cooking mode.
- 3) Press "  $\longleftrightarrow$  ", then press "  $\swarrow$  " or "  $\searrow$  " to adjust the microwave power (900W,700W,450W,300W, 100W). The default power is 900W.
- 4) Press " ", then press " " or " " to set the cooking time.

  The max. cooking time depends on the power that has been set. When the power is 900W, the MAX. time is 30 minutes and other powers are 90 minutes.
- 5) Press " button to start cooking.

#### Microwave Power Chart

Microwave Power	100%	80%	50%	30%	20%
Display	900W	700W	450W	300W	100W

You can see from the table below from which power levels you can choose and for which foods the power levels are suitable.

Power level	Food
900 W	- Boiling water, reheating
	- Cooking chicken, fish, vegetables
700 W	- Reheating
	- Cooking mushrooms, shell fish
	- Cooking dishes containing eggs and cheese
450 W	- Cooking rice, soup
300 W	- Defrosting
	- Melting chocolate and butter
100 W	- Defrosting sensitive/delicate foods
	- Defrosting irregularly-shaped foods
	- Softening ice cream
	- Allowing dough to rise

# 3. Grill Cooking

- 1) Press the " " button to activate the microwave function. "01:00" displays and the microwave icon appears.
- 2) Press " or " < " or " > " to select grill mode. The default grill power is the third level.
- 3) Press "  $\longleftrightarrow$  " to choose the grill level.
- 4) Press "  $\left\langle \right\rangle$  " or "  $\left\langle \right\rangle$  " to select the level 3(the MAX.), level 2 or level 1 ( the MIN.).
- 5) Press " " to select the time setting mode. The default time is 10 minutes.
  - Press" < "or " > " to select the cooking time of grill. The MAX.time is 90 minutes.

1	Convection	$C \circ \circ$	kind
4.	Convection	C00	KIIIC

- 1) Press the " " button to activate the microwave function. "01:00" displays and the microwave icon appears.
- 2) Press "•• or " < " or " > " to select convection mode.

  The default temperature is 180 degrees.
- 3) Press "  $\longleftrightarrow$  " to enter to the temerpature mode.
- 4) Press" < " or " > " to select temerpature. The temperature is from 50 to 230 degrees.(50,100,105,110,115,120,125,130,135,140,145,150,155,160, 165,170,175,180,185,190,195,200,205,210,215,220,225,230)
- 5)Press " " to select the time setting mode. The default time is 10 minutes.

  Press " " or " " to select the cooking time. The MAX.time is 5 hours.

## 5. Grill Fan Cooking

- 1) Press the " " button to activate the microwave function. "01:00" displays and the microwave icon appears.
- 2) Press "• "or " \rightharpoonup "or " \rightharpoonup " to select grill fan mode. The default temperature is 180 degrees.
- 3) Press "  $\longleftrightarrow$  " to enter to the temperature selection.
- 4) Press " < " or " > " to select the temperature . The temperature is from 35 to 180 degrees.(35,100,105,110,115,120,125,130,135,140,145,150, 155,160,165,170,175,180)
- 5) Press" " to select the time setting mode. The default time is 10 minutes.

  Press " ( " or " ) " to select the cooking time. The MAX.time is 5 hours.
- 6) Press " ( button to start cooking.

6.	Microwave +	Grill	Cooking
----	-------------	-------	---------


- 1) Press the " to utton to activate the microwave function. "01:00" displays and the microwave icon appears.
- 2) Press"  $\stackrel{\bullet}{\bullet}$  " or "  $\stackrel{\bullet}{<}$  "or "  $\stackrel{\bullet}{>}$  " to select the " MW+GRILL" combination mode.
- 3) Press " ( ) " to enter to the grill level selection.
- 4) Press"  $\langle$  "or "  $\rangle$  " to select the level 3(the MAX.), level 2 or level 1(the MIN.).
- 100W). The default power is 300W.
- 7) Press" (L) " to select the time setting mode. The default time is 10 minutes.
- 8) Press"  $\Big<$  "or "  $\Big>$  " to select the cooking time . The MAX.time is 90 minutes.

## 7. Microwave + Convection Cooking

- 1) Press the " 😜 " button to activate the microwave function. "01:00" diaplays and the microwave icon appears.
- 2) Press"  $\stackrel{\bullet}{\overset{\bullet}{\overset{\bullet}}}$ " or "  $\stackrel{\checkmark}{\overset{}}$  "or "  $\stackrel{}{\overset{}}$ " to select the "MW+ CONV."combination mode.
- 3) Press " ( to enter to the temperature selection.

The default temperature is 180 degrees.

- 4) Press " < " or " > " to select the temperature between 50 to 230 degrees. (50,100,105,110,115,120,125,130,135,140,145,150,155,160,165,170,175,180,185,190,195,200,205,210,215,220,225,230)
- 100W). The default power is 300W.

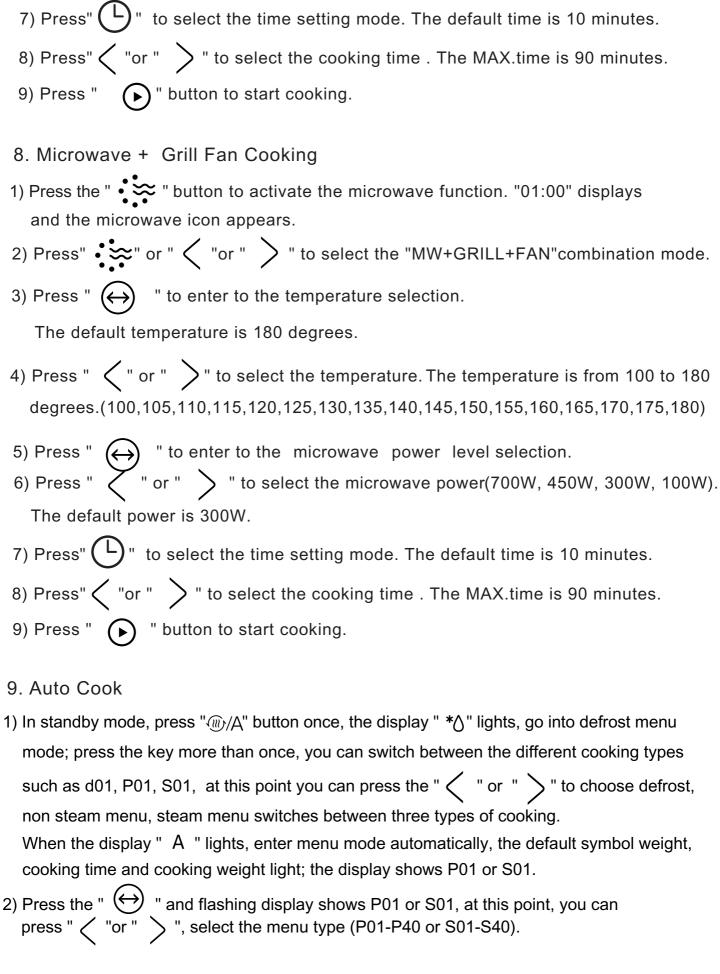

Note:

1) For non-steam menu (P01-P20), press " → " to confirm menu selection and enter the weight of menu selection state automatically, at this point, you can press " ✓ " or " ➤ ", choose the automatic menu weight cooking time display.

2) For the steam menu, at this time, if you need to adjust the default cooking time, you can press □ , and makes the default cooking time of flashing, at this point, press " ✓ " or " ➤ " to adjust the Cook time menu.

3) Press " ▶ " button to start cooking.

#### NOTE:

- 1) After steam auto menu, the water pump will withdraw the water back to water tank, there will be some noise sound.
- 2) After steam auto menu, you need to clean the water on cavity and door panel.
- 3) If the menu need preheating, don't put the food in the oven during preheating.

  Only when the temperature is reached, can you put in the food to start cooking.

#### 10. Defrost

- 1) In standby mode, press" (w/A" button once, select defrost mode, the display "\*\O" lights, into auto defrost mode; display displays d01, initial weight, cooking time and cooking signs light up;
- 2) Press " , to confirm the selected defrost mode and enter the defrost weight selection state, press " ("or") "to select automatic defrost weight cooking time display;
- 3) Press " ( ) " button to start cooking.

# 11. Preheating Function

The prehating function can be activated after you have set the functions: Convection, Grill fan, ,MW-convection,MW-Grill fan.

- 1) Press "(1)/A" button. When the preheat icon appears in the display.
- 2) Press " button to start preheating. When the right temperature is reached, you will hear three beeps. You can stop the preheating by opening the oven door or by pressing the " button.

Note: The preheating function only works if you have already chosen one of the modes above. During preheating, the microwave function is switched off. During preheating, don't put the food in the oven. Only when the temperature is reached, can you put in the food to start cooking.

#### 12. Steam Function


- 1) In standby mode, press " \\\\\ " button, enter the steam mode, time lights up by default 10:00. The icon is displayed, signs light up, there is no Parallax display "10:00", "Min" and "°C "symbol lit, tank icon on the right show the current water level (Water, lack of water). The default temperature 100 lights up.
- 3) Press" " to select the time setting mode. The default time is 10 minutes.
- 4) Press"  $\langle$  "or "  $\rangle$  " to select the cooking time . The MAX.time is 90 minutes.


#### 13. Convection+Steam Function


- 2) Press "  $\longleftrightarrow$  " to enter to the temperature selection.
- 3) Press "  $\langle$  " or "  $\rangle$  " to select temperature.(180,190,200,210,220 degree)
- 4) Press " button, adjust the steam(10,20,30), and steam the display flashes, then press " < " or " > " to set steam (default 30 percent), if the steam is not in Flash, you can press the " wey to make it Flash and then press " < " and " > " to set the steam.
- 5) Press" " to select the time setting mode. The default time is 10 minutes.
- 6) Press"  $\Big<$  "or "  $\Big>$  " to select the cooking time . The MAX.time is 90 minutes.

### 14. Microwave+Steam Function

1) In standby mode, press " \\\	" button, enter the steam mode, time lights up by default
10:00. Press " \\\ " or " \left\ " o	or " $>$ " to select MW+Steam mode. The icon is displayed,
then displays 300W.	

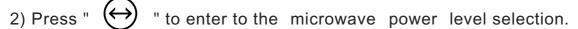

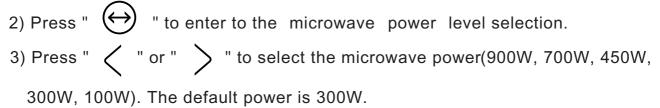

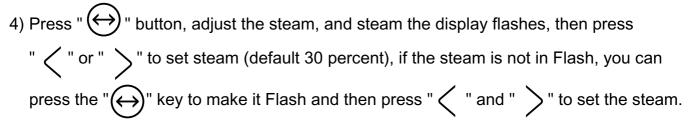

- 5) Press" ( to select the time setting mode. The default time is 10 minutes.
- 6) Press"  $\Big<$  "or "  $\Big>$  " to select the cooking time . The MAX.time depends on the power that has been set. When the power is 900W, the MAX.time is 30 minutes and other powers are 90 minutes.
- 7) Press " button to start cooking.

The ratio of the steam under different microwave power:


Microwave Power	Steam Ratio
100W	10%,20%,30%
300W	10%,20%,30%,40%,50%,60%
450W	10%,20%,30%,40%,50%,60%,70%
700W	10%,20%,30%,40%,50%,60%,70%
900W	10%,20%,30%,40%,50%,60%,70%,80%90%,100%

# 15. Lock-out Function for Children

Lock: In standby mode, press " II " for 3 seconds, there will be a long "beep" denoting entering into the children-lock state and " " indicator will light. Unlock: In locked mode, press " II n for 3 seconds, there will be a long "beep" denoting that the lock is released, and " 😛 " indicator will disapear.

### 16. Display Specification

- (1) When setting, if no other operation, it will confirm automatically after 10 seconds. Except clock setting for the first time.
- (2) During setting program, after adjusted for 3 seconds, it will confirm automatically. Except auto menu, it will confirm after adjusted for 10 seconds.
- (3) When the oven is in setting state or pause state, including auto menu and defrost program, if no operation in 5 minutes, it will enter into the off state.
- (4) The oven lamp will light all the time if the door is open.
- (5) The oven lamp will light all the time if the oven is paused.
- (6) " button must be pressed to continue cooking if the oven door is open during cooking process.
- (7) The " Logist " button can be press in any state to open the water tank.

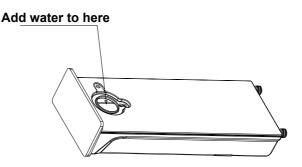

### Steam note:

## 1. Before steam cooking:

Before starting the steam cooking mode, if the tank is short of water, press button, abnormal buzzer will ring and the screen icon will show water scarcity status of water level to remind you to add water.

Note: Before starting the steam cooking mode, please clean the water tank.

## 2. During steam cooking:

During steam cooking mode, if the tank is short of water, abnormal buzzer will ring and the screen icon will show water scarcity status of water level to remind you to add water. After adding water, it can work normally.

# 3. After steam cooking:

- 1-After steam function is finished , the water in boiler will be withdraw to water tank. This process lasts for about 1 minute.
- 2-During the process to withdraw the water back to water tank, if the water tank is full, the system will be beeping 10 times to remind you clean up the tank. After the water tank is empty, the system will continue to withdraw water.

Note: After steam cooking, please remove the water from water tank.

#### **Defect codes**

Below defect codes may occur during steam functions:

E-06: 1-Water tank is not close well.

- E-05: water system abnormal, need to contact for Engineer to check, below is the possibilities.
  - 1-The water sensor is abnormal.
  - 2-The water pipe is abnormal.
  - 3-The water pump is abnormal.
  - 4-The water tank is abnormal.

#### 17. Auto Scale Removal Function

For best cleaning results, we recommend that you use detergent sodium citrate, which were randomly for descaling steam microwave oven. Follow the manufacturer's instructions on the packaging. It is suggested that descaling function should be used after the steam function has been run for 20 hours.

- 1) Power up the system, remove the water tank, inject 1000ml of fresh water into the water tank, adding a pack of descaling agent.
- 2) Push the water tank into the appropriate location of the appliance.
- 3) In standby mode, press " \(\infty \setm \A\)" button, the display " \(\begin{align\*} \begin{align\*} \begin{a
- 4) Press " (III)/A" repeatedly, when "CLE" indicator lighten, it means to enter Scale Removal function. "Min" and default time "20:00" lighten, tank icon show the current water level (Water, lack of water, full of water), other icons disappear.
- 5) Press " ( ) " to start the program.
- 6) Stay whole 1 minute after the program has finished, take out the water tank and pour the water in the tank. Thoroughly clean the water tank.
- 7) Replace the fresh water, repeat steps 3 to 6.

Note: the descaling process shall not be shut down. If the descaling process shut down before the end, the entire program must be started from step 3.

# STEAM MENU

AUTO-MENU	DISPLAY	WEIGHT	POWER
		200	
		300	Ct = 400°C
Trout	S01	400	Steam100°C +300W
		500	+30000
		600	
		200	
		300	
Salmon Filet	S02	400	Steam100°C
		500	+100W
		600	
		200	
		300	
Pikeperch	S03	400	Steam100°C
		500	+300W
		600	
		200	
		300	
Prawns	S04	400	Steam100°C
		500	
		600	
	S05	200	
		300	
Halibut filet		400	Steam100°C
		500	+300W
		600	
		200	
	S06	300	
Cockles		400	Steam100°C+100W
		500	
		600	
		200	
		300	
Cod filet	S07	400	Steam100°C
		500	+300W
		600	
		200	
		300	1
Herring	S08		Steam100°C
	300	400	+300W
		500	-
		600	
		200	
		300	Steam100°C
Tuna filet	S09	400	+100W
		500	-
		600	

			,
		2	
Crab	040	3	Steam100°C
	S10	4	+300W
		5	
		6	
		200	
		300	
Chicken leg	S11	400	Steam100°C+300W
		500	
		600	
		200	
		300	
Object		400	011000
Chicken	S12	500	Steam100°C
breast		600	+300W
		700	
		800	
		200	
		300	
Meatball	S13		Steam100°C
IVICALDAII	313	400	+300W
		500	
		600	
		400	
Turkey		500	Steam100°C
escalope	S14	600	+300W
		700	
		800	
		200	
		300	0
Pork filet,	S15	400	Steam100°C
whole		500	+300W
		600	
		200	
		300	
Saucagos	S16	400	Steam100°C
Sausages	310	500	+100W
		600	
Runny eggs	S17	1	Steam100°C
Training Oggo	017	3	Oldani 100 0
		1	
Eggs, hard	S18		Steam100°C
		3	
Eggs, soft	S19	1	Steam100°C
_ggo, co.:		3	Ottourn 100 C
Brown rice +		200g+400mL	Steam100°C+ 450W/
water	S20	400	Steam100°C+ 300W
		400g+800mL	
Rice + water	S21	200g+300mL	Steam100°C+ 450W/
. tioo · water	021	400g+600mL	Steam100°C+300W
·	<del></del>	<del></del>	

_			<del>_</del>
		200	Steam100°C+300W
Eggplant/		300	
Aubergine	S22	400	
Aubergine		500	
		600	
		200	Steam100°C
		300	+300W
Beans	S23	400	
		500	
		600	
		200	Steam100°C
		300	
Broccoli	S24	400	
		500	
		600	
		200	Steam100°C
		300	+300W
Cauliflower	S25	400	
		500	
		600	_
		200	Steam100°C
			+300W
Peas	S26	300 400	-
1 645	320	500	_
		600	
Detetees		1	
Potatoes with skin		2	_
( whole,	S27	3	Steam100°C+ 300W
small)		4	_
,		1	
Potatoes with skin (whole, big)		2	_
	S28	3	Steam100°C+ 300W
		4	
		200	
Potatoes		300	
without skin	S29	400	Steam100°C+ 300W
(pieces)		500	
		600	
		200	Steam100°C+300W
		300	
Carrots	S30	400	
33.73.6		500	
		600	
		2	Steam100°C+300W
		3	
Corn cobs	S31	4	
		5	
		6	

	1		0110000
		200	Steam100°C
		300	
Bell peppers	S32	400	
		500	
		600	
		200	Steam100°C
		300	
Hot peppers	S33	400	
		500	
		600	
		200	Steam100°C+300W
		300	<del> </del>
Mushrooms	S34	400	7
		500	
		600	
		200	Steam100°C+300W
		300	
Leeks	S35	400	
		500	
		600	
		200	Steam100°C
		300	
Brussels sprouts	S36	400	
		500	
		600	
		200	Steam100°C+300W
Celery		300	
	S37	400	
		500	_
		600	
		700	_
		800	
		200	Steam100°C+100W
	S38	300	
Asparagus		400	
		500	
		600	
		200	Steam100°C+300W
		300	_
Spinach	S39	400	_
		500	-
		600	Stoom 100°C + 200\4/
		300	Steam100°C+300W
Couractte	C40	400	-
Courgette	S40	500	╡
		600	
	<u> </u>	1 000	

# **NO-STEAM MENU**

AUTO-MENU	DISP LAY	WEIGHT	POWER
		100	450W
Melt chocolate	P01	150	450W
or shoodato		200	450W
		100	450W
Melt butter	P02	150	450W
		200	450W
		200	100W+220°C
Sweet potato	P03	400	100W+220°C
Onoor polato	' "	600	100W+220°C
		800	100W+220°C
Chicken Whole	P04	1000	100W+220°C
Chicken Whole		1200	100W+220°C
			450W+220°C
		200	
		300	450W+220°C
Chi akan Lag	P05	400	450W+220°C
Chicken leg	105	500	450W+220°C
		600	450W+220°C
		700	450W+220°C
		800	450W+220°C
Chi cken Wngs		200	300W+220°C
		300	300W+220°C
		400	300W+220°C
	P06	500	300W+220°C
		600	300W+220°C
		700	300W+220°C
		800	300W+220°C
		1	100W+220°C
Fish Whole	P07	2	100W+220°C
		3	100W+220°C
Fish Steak		200	100W+220°C
	P08	300	100W+220°C
		400	100W+220°C
		500	100W+220°C
		600	100W+220°C
Fresh pizza		200	Pre-heat/200°C conv.
		300	Pre-heat/200°C conv.
	P09	400	Pre-heat/200°C conv.
		500	Pre-heat/200°C conv.
		600	Pre-heat/200°C conv.
		200	100W+220°C
Frozen Pizza	P10	300	100W+220°C
		400	100W+220°C
		400	Pre-heat/150°C
Cake	P11	500	Pre-heat/150°C
Jane			
		600	Pre-heat/150°C

		400	4E0/\/±330°C
		500	450W+220°C 450W+220°C
		600 700	450W+220°C
Roast Pork	P12		450W+220°C
		800	450W+220°C
		900	450W+220°C
		1000	450W+220°C
		200	100W+220°C
	P13	300	100W+220°C
Chicken kabobs		400	100W+220°C
		500	100W+220°C
		600	100W+220°C
		200	Pre-heat/220°C
Shrimp	P14	400	Pre-heat/220°C
		600	Pre-heat/220°C
		400	100W+220°C
		500	100W+220°C
		600	100W+220°C
Beef steak	P15	700	100W+220°C
		800	100W+220°C
		900	100W+220°C
		1000	100W+220°C
barbecued		200	100W+220°C
	P16	400	100W+220°C
Sparenes		600	100W+220°C
Chocolate cookies	P17	500	Pre-heat/180°C
lemon cookies	P18	400	Pre-heat/200°C
		200	Pre-heat/220°C
Sausage	P19	400	Pre-heat/220°C
		600	Pre-heat/220°C
finger food	P20	200	Pre-heat/220°C
		300	Pre-heat/220°C
		400	Pre-heat/220°C
Reheat	P21	200	900W
		300	900W
		400	900W
		500	900W
		600	900W
Potato		1	900W
	P22	2	900W
	1	3	900W
Bervage	Dec	1	900W
	P23	2	900W
		3	900W

Pasta P24				
Pasta         P24         water) 150 (+1000ml cold water) 200 (+1200ml cold water)         700W           Soup         P25         2 900W           Pizza         P26         2 900W           Muffin         P27         1 900W           Muffin         P27         2 900W           A 1				
Pasta       P24       150 (+1000ml cold water) 200 (+1200ml cold water)       700W         Soup       P25       2 900W         Pizza       P26       2 900W         Muffin       P27       3 900W         Muffin       P27       3 900W         A 1 1 1 1 2 2 3 3 4 4 50+500ml water       900W         Data A 4 50+500ml water       100+1000ml water       900W/450W         Baked Apple       P29       3 700W         Sandwich       P30       2 900W         Sandwich       P30       2 900W         Popcorn       P31       50 900W         Fudge Brownies       P32       800 100W+180°C         Bread       P33       150 Grill Level3         Bread       P33       150 Grill Level3	Pasta			
Pasta         P24         (+1000ml cold water)         700W           200         (+1200ml cold water)         900W           Soup         P25         2         900W           Pizza         P26         2         900W           Muffin         P27         2         900W           Muffin         P27         2         900W           A         1         900W           A         50+500ml water         900W/450W           150+1500ml water         900W/450W           Baked Apple         P29         3         700W           Sandwich         P30         2         900W           Sandwich         P30         2         900W           Popcorn         P31         50         900W           Fudge Brownies         P32         800         100W+180°C           Bread         P33         150         Grill Level3           200         200         200           300         300         300				
Water   200		D2/I		700W
Soup	i asia	1 24	-	
Company   Continue   Continue			,	
Soup   P25   1				
Soup         P25         2         900W           Pizza         P26         2         900W           Muffin         P27         1         900W           Muffin         P27         2         900W           A         900W         900W           A         100+1000ml water         900W/450W           Baked Apple         P29         3         700W           Baked Apple         P29         3         700W           Sandwich         P30         2         900W           Sandwich         P30         2         900W           Fudge Brownies         P32         800         100W+180°C           Fudge Brownies         P33         150         Grill Level3           200         200         300			-	
Pizza   P26   2   900W			1	
Pizza         P26         1 2 900W           Muffin         P27         1 2 900W           Muffin         P27         2 900W           Baked Apple         P28         100+1000ml water 100+1000ml water 150+1500ml water         900W/450W           Baked Apple         P29         3 700W           Sandwich         P30         2 900W           Popcorn         P31         50 900W           Fudge Brownies         P32         800 100W+180°C           Bread         P33         150 Grill Level3           200         200           300         300	Soup	P25		900W
Pizza         P26         2         900W           Muffin         P27         1         900W           Au         2         900W           Au         50+500ml water         900W/450W           Baked Apple         P29         3         700W           Baked Apple         P29         3         700W           Sandwich         P30         2         900W           Sandwich         P30         2         900W           Popcorn         P31         50         900W           Fudge Brownies         P32         800         100W+180°C           Bread         P33         150         Grill Level3           200         200         300				
Muffin     P27     3			1	
Muffin     P27     1 / 2 / 3 / 4 / 4 / 4 / 4 / 4 / 4 / 4 / 4 / 4	Pizza	P26	2	900W
Muffin     P27     2     900W       Oatmeal     P28     50+500ml water       Baked Apple     P29     3     700W       Baked Apple     P29     3     700W       Sandwich     P30     2     900W       Sandwich     P30     2     900W       Sandwich     P31     50     900W       Fudge Brownies     P32     800     100W+180°C       Bread     P33     150     Grill Level3       200     200       300			3	
Muffin         P27         3         900W           Oatmeal         P28         50+500ml water         900W/450W           Looked Apple         P28         100+1000ml water         900W/450W           Baked Apple         P29         3         700W           Sandwich         P30         2         900W           Sandwich         P30         2         900W           Popcorn         P31         50         900W           Fudge Brownies         P32         800         100W+180°C           Bread         P33         150         Grill Level3           200         300         300			1	
Oatmeal     P28     3       Date and selection of the proof of the	Muffin	D27	2	00014/
Oatmeal     P28     50+500ml water 100+1000ml water 150+1500ml water 150+15000ml water 150+15000ml water 150+15000ml water 150+15000ml water 150+15000ml water	IVIUIIIII	PZI	3	90000
Oatmeal       P28       100+1000ml water       900W/450W         150+1500ml water       150+1500ml water       700W         Baked Apple       P29       3       700W         Sandwich       P30       2       900W         Sandwich       P30       2       900W         Popcorn       P31       50       900W         Fudge Brownies       P32       800       100W+180°C         Bread       P33       150       Grill Level3         200       200       300			4	
Sandwich   P28			50+500ml water	
Sandwich   P28	0.1	Boo	100+1000ml water	00004//450/4/
Baked Apple     P29     3     700W       Sandwich     P30     2     900W       Popcorn     P31     50     900W       Fudge Brownies     P32     800     100W+180°C       Bread     P33     150     Grill Level3       200     200       300	Oatmeal	P28	100 · 10001111 Water	900VV/450VV
Baked Apple       P29       3       700W         Sandwich       P30       1       900W         Popcorn       P31       50       900W         Fudge Brownies       P32       800       100W+180°C         Bread       P33       150       Grill Level3         200       200       300			150+1500ml water	
Sandwich   P30   1			2	
Sandwich     P30     1     900W       Popcorn     P31     50     900W       Fudge Brownies     P32     800     100W+180°C       Bread     P33     150     Grill Level3       200     200       300	Baked Apple	P29	3	700W
Sandwich     P30     2     900W       Popcorn     P31     50     900W       Fudge Brownies     P32     800     100W+180°C       Bread     P33     150     Grill Level3       200     200       300			4	
Popcorn   P31   50   900W			1	
Popcorn         P31         50         900W           Fudge Brownies         P32         800         100W+180°C           Bread         P33         150         Grill Level3           200         200         300	Sandwich	P30	2	900W
Popcorn         P31         100         900W           Fudge Brownies         P32         800         100W+180°C           Bread         P33         150         Grill Level3           200         200         300			3	
Fudge Brownies P32 800 100W+180°C  Bread P33 150 Grill Level3 200 200 300		<b>D</b> 0.1	50	2224
Fudge Brownies         P32         800         100W+180°C           Bread         P33         150         Grill Level3           200         200           300         300	Popcorn	P31	100	900W
Bread P33 150 Grill Level3 200 200 300	Fudge Brownies	P32		100W+180°C
Bread         P33         150         Grill Level3           200         200           300         300				
200 200 300	Bread	P33		Grill Level3
200 300		1 00		31111 20V010
300				
		P34		
	Chick nuggots			100\\/+220 °€
500	Office Huggets			100VV+220 C
600				
		1		
200	French Fries	P35		
French Fries P35 300 100W+220°C				100W+220°C
400				
500			500	
Oatmeal raisin cookies P36 600 Pre-heat/180°C		P36	600	Pre-heat/180°C
pecan crisps P37 500 Pre-heat/180°C	pecan crisps	P37	500	Pre-heat/180°C

peanut chocolate cookies	P38	500	Pre-heat/180°C
hanburg	P39	2 4	100W+220°C
_		6	
Muffin	P40	840 (70g*12)	Pre-heat/180°C

# TROUBLE SHOOTING

Normal		
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.	
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.	
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.	
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.	

Trouble	Possible Cause	Remedy
	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
Oven can not be started.	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to W aste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

