

Your new dryer

Congratulations – You have opted for a modern, high-quality domestic appliance of the Bosch brand. The condenser dryer is distinguished by its economical energy consumption.

Each dryer which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

If you have any questions, please do not hesitate to contact our customer service.

Environmental disposal

Dispose of packaging in an environmentally friendly manner.

This appliance has been identified in accordance with the European directive 2002/96/EG on Waste Electrical and Electronic Equipment – WEEE.

The directive specifies the framework for an EU-wide valid return and recycling of old appliances.

Contents

Page

- Preparation 2
- Setting programmes 2
- After drying 4
- About the washing 5
- Servicing and cleaning 6
- Overview of programmes 7
- Installation 8
- Technical specifications 9
- Optional accessories 9
- What to do if ... 10
- Safety instructions 11

Intended Use

- only in the household;
- only for drying textiles which have been washed with water.

- Do not leave children unattended near the dryer!
- Keep pets away from the dryer!



Preparation

For installation see page 8

- Never use a damaged dryer!
Notify customer service!

- With dry hands only!
Take hold of the plug with dry hands only!

- Sort and put in the washing

- Take all objects out of the pockets.
Look out for cigarette lighters!
- The drum must be empty before it is loaded!

See overview of programmes on page 7.

Selecting + setting programme

Select drying programme ...

... and adjust


All buttons are sensitive,
a gentle tap is adequate!

Select Start button

1

2

3

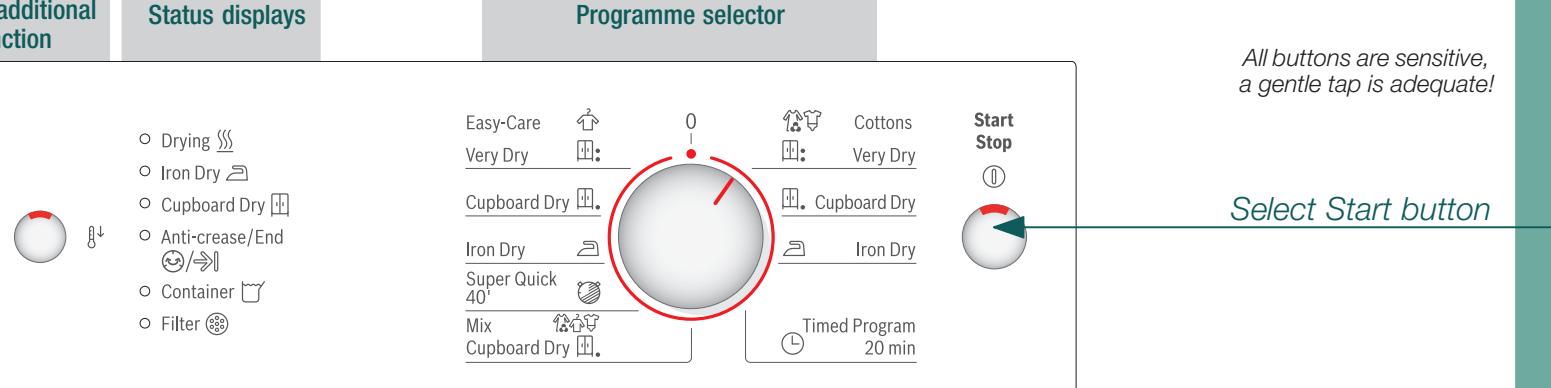

Low heat Reduced temperature for sensitive textiles e.g. polyacrylic, polyamide, etc. Longer drying time

appliance www.boschappliances.com.au Australia's largest online appliance retailer

Drying

- Check the dryer

- Insert the mains plug

- Condensation container
- Door handle
- Drum
- Control panel

- Door handle
- Control panel

- Switching off the dryer

- Set programme selector to 0 (Off).

- Do not leave damp washing in the dryer!

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the Reduced Ironing function is also selected – depending on model).

Programme end as soon as the light comes on

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

Overview of programmes

See also page 5

	After drying:	Iron the washing	lightly iron the washing	do not iron the washing	mangle the washing
Cottons					
max. 7 kg					
Iron Dry	☒	☒	☒	☒	☒
Cupboard Dry	☒	☒	☒	☒	☒
Very Dry	☒	☒	☒	☒	☒
Easy-Care					
max. 3 kg					
Iron Dry	☒	☒	☒	☒	☒
Cupboard Dry	☒	☒	☒	☒	☒
Very Dry	☒	☒	☒	☒	☒
Mix	☒	☒	☒	☒	☒
Mix Cupboard Dry	☒	☒	☒	☒	☒
Super Quick 40					
max. 2 kg					
Iron Dry	☒	☒	☒	☒	☒
Cupboard Dry	☒	☒	☒	☒	☒
Very Dry	☒	☒	☒	☒	☒
Timed Program					
max. 3 kg					
Iron Dry	☒	☒	☒	☒	☒
Cupboard Dry	☒	☒	☒	☒	☒
Very Dry	☒	☒	☒	☒	☒
Super Quick 40					
max. 2 kg					
Iron Dry	☒	☒	☒	☒	☒
Cupboard Dry	☒	☒	☒	☒	☒
Very Dry	☒	☒	☒	☒	☒
Timed Program					
max. 3 kg					
Iron Dry	☒	☒	☒	☒	☒
Cupboard Dry	☒	☒	☒	☒	☒
Very Dry	☒	☒	☒	☒	☒
20 min					

Further information and a selection of our products can be found on our Internet page: <http://www.boschappliances.com.au>

Installation




- Included in standard delivery: dryer, operating and installation instructions!
- Mains plug not inserted!
- Check dryer for damage which may have been caused in transit!
- Dryer is heavy. Do not lift it by yourself!
- Beware of sharp edges!
- Do not install in a room where there is a risk of frost! Freezing water may result in damage!
- If in doubt, have a technician connect the appliance!
- Do not lift the dryer by projecting components (e.g. door) – risk of breakage!

1. Installing the dryer



Take all accessories out of the drum.
Drum must be empty!

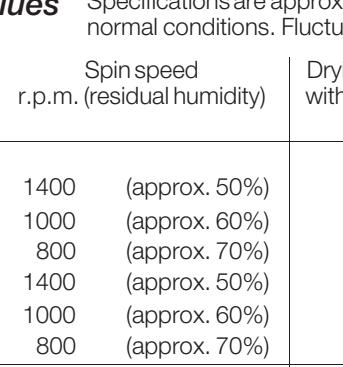

Do not obstruct cooling grille

2. Mains connection



see Safety instructions, page 11.

- Connect correctly to an a.c. earthed socket. If in doubt, have the socket checked by an electrician!
- Mains voltage must correspond with the voltage specifications on the appliance rating plate (see page 9)!
- Wattage and required fuse are indicated on the appliance rating plate.

Frost protection/ transportation



Do not operate the dryer
if there is a risk of frost!

Preparation

1. Empty condensation container, see page 4.
2. Set programme selector to any programme.
3. Select **Start/Stop** button → condensation is pumped into the container.
4. Wait 5 min., empty condensation container again.

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

</

Your new dryer

Congratulations – You have opted for a modern, high-quality domestic appliance of the Bosch brand. The condenser dryer is distinguished by its economical energy consumption.

Each dryer which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

If you have any questions, please do not hesitate to contact our customer service.

Environmental disposal

Dispose of packaging in an environmentally friendly manner.



This appliance has been identified in accordance with the European directive 2002/96/EG on Waste Electrical and Electronic Equipment – WEEE.

The directive specifies the framework for an EU-wide valid return and recycling of old appliances.

Contents

	Page
Preparation	2
Setting programmes	2
After drying	4
About the washing	5
Servicing and cleaning	6
Overview of programmes	7
Installation	8
Technical specifications	9
Optional accessories	9
What to do if ...	10
Safety instructions	11

Intended Use

- only in the household;
- only for drying textiles which have been washed with water.




- Do not leave children unattended near the dryer!
- Keep pets away from the dryer!

Preparation

! Never use a damaged dryer!
Notify customer service!



With dry hands only!
Take hold of the plug with dry hands only!

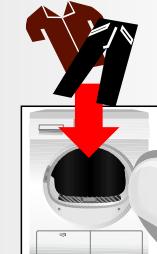

Sort and put in the dryer

Take all objects
Look out for
The drum must be empty

See overview of programmes on page 7.

Selecting + setting programmes

Select drying pr...

All buttons a gentle...

Select...

Select additional function	Status displays	Programme selector
<input type="radio"/> Low Heat	<input type="radio"/> Drying <input type="radio"/> Iron Dry <input type="radio"/> Cupboard Dry <input type="radio"/> Anti-crease/End <input type="radio"/> Container <input type="radio"/> Filter	 0 Easy-Care Very Dry Cottons Very Dry Cupboard Dry Iron Dry Super Quick 40' Mix Cupboard Dry Start Stop Timed Program 20 min
Service displays	<input type="checkbox"/> Container <input type="checkbox"/> Filter	Empty condensation container Clean fluff filter and/or air cooler
<input type="checkbox"/> Low heat	Reduced temperature for sensitive textiles e.g. polyacrylic, polyamide, elastane, acetate, for longer drying time	

appliance

Australia's largest online appliance retailer

ation see page 8



le washing

out of the pockets,
or cigarette lighters!
before it is loaded!

rogramme

rogramme ...

.. and adjust


ons are sensitive,
the tap is adequate!

Start button

1
2

3

Drying

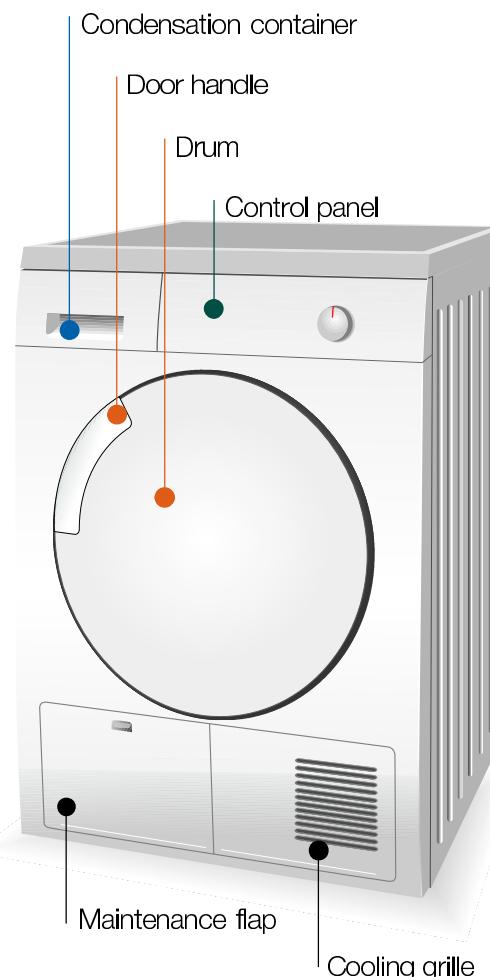


Drying



Draining the condensation

Empty container **after** each drying operation!


1. Pull out the container and keep in a horizontal position.
2. Pour out the condensation.
3. Insert the container until it locks into position.

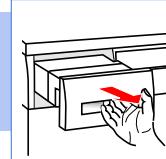

Cleaning the fluff filter

1. Open door, pull out filter and open.
2. Remove fluff (run hand over filter).
3. Close filter, re-insert and close door.


Rinse extremely soiled or blocked filters with warm water and dry thoroughly.

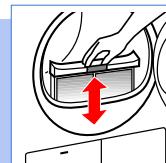

Switching off the dryer

Set programme selector to 0 (Off).

Do not leave damp washing in the dryer!

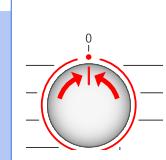

Removing washing

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the **Reduced Ironing** function is also selected – depending on model).



Programme end

as soon as the light comes on



Topping up or removing washing

1. Open door, the drying process is terminated.
2. Top up or remove washing and close door.
3. If required, reselect programme and additional functions.
4. Select ① Start/Stop button.



Drum and door may be hot.

About the washing ...



Identifying textiles

Follow care information of the manufacturer!

 Dry at normal temperature.

 Dry at low temperature -> also select **Low heat** .

 Do not dry by machine.

 Do not dry the following textiles in the dryer.

- Airtight textiles (e.g. rubberised).
- Delicate fabrics (silk, synthetic curtains) -> anti-creasing!
- Dripping wet washing -> high energy consumption!
- Oil-contaminated washing.

Drying tips

- For uniform drying result, sort the washing according to fabric type and drying programme.
- Close zips, hooks and eyelets, button up quilt covers, tie fabric belts, apron strings, etc.
- Do not overdry the washing -> risk of creasing! Leave the washing to air.
- Do not iron the washing immediately after drying, fold up the washing for a while -> residual moisture will then be distributed evenly.
- Knitted textiles (e.g. T shirts, knitted underwear) often shrink when dried for the first time -> Do not use the : **Very Dry** programme.
- The drying of starched washing should be limited -> Starch leaves a coating which impairs drying.
- Use the Timed Programme for a small load.

Protection of the environment / Conservation of energy

- Before drying, thoroughly spin the washing in the washing machine -> Higher spin speeds reduce the drying time and lower the energy consumption; also spin easy-care washing.
- Use the maximum recommended load, but do not exceed -> Page 7, "Overview of programmes".
- Ensure that the room is well ventilated during the drying process.
- Clean the fluff filter after each drying process -> Page 4.
- Keep the air cooler clean -> Page 6 "Servicing and cleaning".
- Ensure that the cooling air flow is not obstructed -> Do not block or seal the cooling grille.

Servicing and cleaning

 Appliance must be switched off

Dryer housing, control panel, cooling grille

- Rub with a soft, damp cloth.
- Do not use any caustic cleaning agents/solvents.
- Immediately remove washing and cleaning agent residue.

3 - 4 times a year or if  **Filter** flashes continuously after the fluff filter has been cleaned.

Air cooler

- Leave the dryer to cool down.
- Residual water may escape, place an absorbent cloth under the maintenance flap.

1. Unlock the maintenance flap.
2. Completely open maintenance flap.



3. Screw both locking levers towards each other.
4. Pull out the air cooler

 *Do not damage the air cooler!
Clean with warm water only; do not use hard/sharp-edged objects!*

5. Clean the air cooler completely, drain thoroughly.
6. Clean the seals.
7. Re-insert the air cooler, handle at the bottom!
8. Unscrew both locking levers.



9. Close the maintenance flap until it locks into position.



Moisture sensor

The dryer is equipped with moisture sensors made of stainless steel. The moisture level of the washing is measured with the moisture sensors. After a longer operating time, a fine layer of limescale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensor using a damp sponge with a rough surface (scouring pad).



 *Do not use steel wool or abrasive materials.*

Overview of programmes

See also page 5

After drying:	
iron the washing	☒
lightly iron the washing	☒
do not iron the washing	☒
mangle the washing	☒

衣物

Cottons max. 7 kg

IronDry	☒
Cupboard Dry	☒
Very Dry	☒

易护理

Easy-Care max. 3 kg

IronDry	☒
Cupboard Dry	☒
Very Dry	☒

混合

Mix Cupboard Dry max. 3 kg

Very Dry	☒
Timed Program	☒
Super Quick 40'	☒

Timed Program max. 3 kg
20 min
For pre-dried, multi-ply, delicate textiles made of acrylic fibres or for individual small items.
Also for subsequent drying.

For cottons and coloured items made of cotton or linen.	☒
For non-iron washing made of synthetic and blended fabrics, cotton, cotton or blended fabrics, cotton or blended fabrics (mix).	☒
For washing which is to be dried quickly, e.g. made of synthetic fabrics, cotton or blended fabrics. Actual values may differ from the values given, depending on fabric type, mixture of items to be dried, residual moisture in the fabric and load size.	☒
For pre-dried, multi-ply, delicate textiles made of acrylic fibres or for individual small items.	☒
Also for subsequent drying.	☒

WTE84101AU
0909 en
90000 483237

Installation




- Included in standard delivery: dryer, operating and installation instructions!
- Mains plug not inserted!
- Check dryer for damage which may have been caused in transit!
- Dryer is heavy. Do not lift it by yourself!
- Beware of sharp edges!
- Do not install in a room where there is a risk of frost! Freezing water may result in damage!
- If in doubt, have a technician connect the appliance!
- Do not lift the dryer by projecting components (e.g. door) – risk of breakage!

1. Installing the dryer



Take all accessories out of the drum.
Drum must be empty!

- Mains plug must be accessible at all times!
- Place the dryer on a clean, level and firm surface!
- Do not obstruct cooling grille at the front of the dryer.
- Keep the area around the dryer clean.
- Align the dry with the height-adjustable feet.
Use a spirit level.
- Never remove the height-adjustable feet!

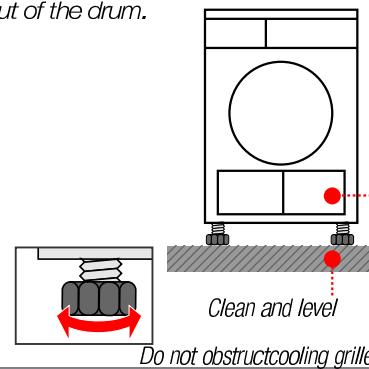

2. Mains connection

see Safety instructions, page 11.

- Connect correctly to an a.c. earthed socket. If in doubt, have the socket checked by an electrician!
- Mains voltage must correspond with the voltage specifications on the appliance rating plate (see page 9)!
- Wattage and required fuse are indicated on the appliance rating plate.

Frost protection/ transportation



Preparation

1. Empty condensation container, see page 4.
2. Set programme selector to any programme.
3. Select **Start/Stop** button → condensation is pumped into the container.
4. Wait 5 min. empty condensation container again.
5. Set programme selector to 0 (Off).

Further information and a selection of our products can be found on our
Internet page: <http://www.boschappliances.com.au>



Do not operate the dryer
if there is a risk of frost!

Technical specifications

- Dimensions (D x W x H)	60 x 60 x 85 cm (height-adjustable)
- Weight (net)	approx. 45 kg
- Max. capacity	7 kg
- Condensation container	4.2 l
- Supply voltage	
- Connected load	
- Fuse	
- Product number	
- Production number	

The appliance rating plate is situated on the rear of the dryer.

Consumption values

Specifications are approximate values determined under normal conditions. Fluctuations up to 10 % are possible.

	Spin speed r.p.m. (residual humidity)	Drying time in min. with 8 min. cooling time**	Energy consumption in kWh**
Cottons 6 kg			
■ Cupboard Dry*	1400 (approx. 50%)	100	3.0
	1000 (approx. 60%)	118	3.6
	800 (approx. 70%)	140	4.2
■ Iron Dry*	1400 (approx. 50%)	76	2.2
	1000 (approx. 60%)	94	2.8
	800 (approx. 70%)	116	3.4
Easy-Care 3 kg			
■ Cupboard Dry*	800 (approx. 40%)	42	1.2
	600 (approx. 50%)	53	1.5

* Test programmes according to DIN EN 61 121 and IEC 61 121

** Actual values may differ from the values given, depending on fabric type, mixture of items to be dried, residual moisture in the fabric and load size.

Drum light (depending on model) (Bulb E14, 15 W)

The drum is lit when the door is opened and closed or when the programme starts; it goes out automatically.

Optional accessories

Order no.

WTZ
1110

Connection fittings for condensation outlet

The condensation is conveyed directly via a hose.

WTZ
11310

Connection set for washing-drying column

To save space, the dryer can be placed on a suitable washing machine which has the **same depth and width**.

This connection set must always be used to secure the dryer to the washing machine.

WTZ
11300

Same as WTZ 11310 but with removable worktop.

WTZ
10290

Installation underneath the worktop

Risk of electric shock!

Instead of the appliance covering plate, you must have a metal cover fitted by an expert.

What to do if ...



Repairs may be carried out by customer service or authorised technicians only! Before you call customer service, please check whether you can correct the fault yourself. A technician will charge you for advice, even during the warranty period. Please give customer service the product number (E-Nr.) and the production number (FD) of the appliance (see inside of door).

① Start/Stop indicator light does not come on. Is the mains plug inserted? Programme selected? Check fuse in the house.

☐ Container and ① Start/Stop indicator lights are flashing. Empty condensation container. If featured, check hose for condensation outlet.

② Filter and ① Start/Stop indicator lights are flashing. Clean air cooler, page 6 "Servicing and cleaning". Clean fluff filter, page 4.

Dryer does not start. ① Start/Stop button selected? Door closed? Programme set? Ambient temperature higher than 5 °C?

Water is running out. Align dryer horizontally. Clean air cooler seal.

Door is opening by itself. Press door until it "clicks" into position.

Degree of dryness was not reached or drying time too long. Clean fluff filter/air cooler, page 4/6. Empty condensation container. Check water outlet (if featured). Ambient temperature above 30 °C → adequate ventilation. Cooling grille may be blocked → unblock. Unsuitable programme set? Page 7.

Dryer installation too restricted? Provide air circulation. Power failure → restart dryer. Fine layer of lime scale on the moisture sensors → clean the moisture sensors, page 6.

Washing damp. Use next higher drying programme or also the Timed programs, page 7. Warm washing feels damper than it actually is!

Humidity in the room is increasing significantly. Ventilate room adequately. Cooling grille blocked? → Unblock. Ensure that the air cooler has been inserted.

One or more indicator lights for programme status are flashing. Clean filter and air cooler, page 4/6. Check installation conditions, page 8. Switch off, leave to cool down, switch on again, restart programme.

Does the interior light (depending on model) work? Pull out the mains plug. Open cover inside the appliance above the door (with a Torx 20 screwdriver) and change the bulb. Close the cover flap.


If you cannot correct a fault yourself or if a repair is required:

- Set programme selector to 0 (Off).
- Pull out the mains plug.

Safety instructions



Emergency	- Immediately pull out mains plug or interrupt fuse.
Use dryer ONLY ...	- in the house. - for drying textiles.
NEVER ...	- use dryer for other purposes than those described above. - modify the technology or properties of the dryer.
Hazards	- Children and uninstructed persons must not use the dryer. - Do not leave children unattended near the dryer. - Keep pets away from the dryer. - Take all objects out of the pockets. Look out for cigarette lighters -> risk of explosion! - Do not lean or sit on the door -> risk of dryer tipping over! - Open the door carefully. Hot steam may escape.
Installation	- Frost damage possible below 0 °C. - Attach loose cables or hoses, otherwise risk of tripping.
Mains connection	- Connect the dryer correctly to an a.c. earthed socket, otherwise safety cannot be ensured. - Cable cross-section must be adequate. - Use residual-current-operated circuit-breaker with this symbol only:
	- Mains plug and socket must match. - Do not use multiple plug/couplings and/or extension leads. - Do not take hold of the mains plug with damp hands. - Never pull the mains plug out of the socket by tugging the cable. - Do not damage the power cord.
Operation	- Load the drum with <i>washing only</i> . Check the contents before switching on the dryer. - Do not use the dryer if the washing has come into contact with solvent, oil, wax, grease or ink (e.g. setting lotion, nail varnish remover, stain remover, solvent naphtha, etc.) -> risk of fire/explosion! - Dust hazard (e.g. coal dust, flour): do not use the dryer -> risk of explosion! - Do not use the dryer if the washing contains foam/rubber -> elastic material may be destroyed and the dryer may be damaged by possible deformation of the foam. - Switch off the dryer when the programme ends. - Do not drink the condensation!
Defect	- Do not use the dryer if it is defective or considered to be defective; repairs by customer service only. - Do not use the dryer if the power cord is defective. To prevent hazards, have a defective power cord replaced by customer service only. - Before changing the interior light bulb, always pull the mains plug out of the socket.
Spare parts	- For reasons of safety use original spare parts and accessories only.
Disposal	- Dryer: pull out the mains plug, then sever the power cord on the appliance. Dispose of at a public waste disposal centre. - Packaging: do not allow children to play with packaging parts -> risk of suffocation! - All materials are environmentally friendly and recyclable. Dispose of in an environmentally friendly manner.

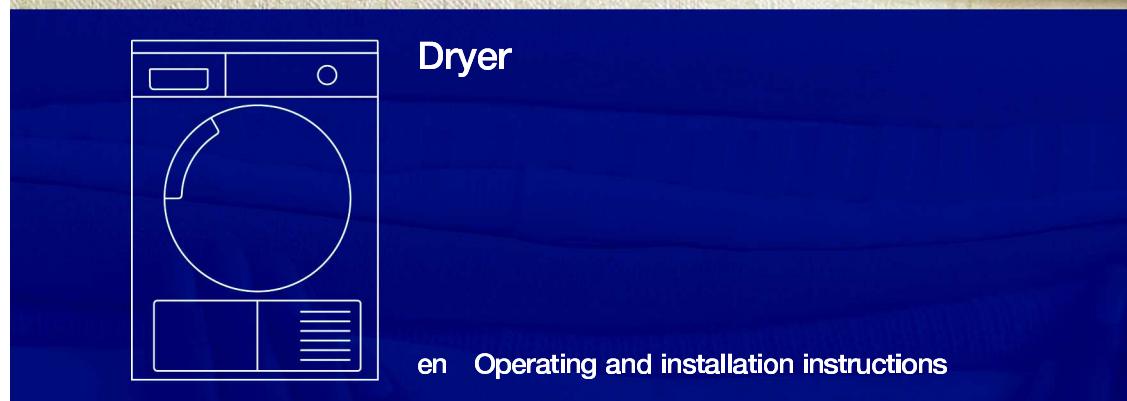

Read these instructions before switching on the dryer!



Follow instructions on page 11!



BOSCH