



SMART
Vacuum Cleaner

Instruction Manual



**For correct usage, read these instructions carefully and keep in
a safe place for future reference**

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from date of purchase.

Table of Contents







Table of Contents	01
Safety Instructions	02
Structure of the Robot	03
a. Robot	03
b. Dustbin	04
c. Charging dock	04
Robot Operation	05
a. Charging Preparation	
b. Turning on the Robot	
c. Charging Status	
d. Robot Operation	06
e. Introduction of the charging dock	07
Product Features	08
a. Automatic Cleaning	
b. Spot Cleaning	
c. Wall follow cleaning	
d. Trouble Processing	
e. Schedule Cleaning	
Removal and Cleaning of the Robot	09
a. Cleaning of the Robot	
b. Cleaning of the Side Brush	
Common Failures and Troubleshooting	10
Dimensions and Parameters	11
Wifi Manual	12

Safety Instructions













Before using this product, please read the following safety instructions and follow all routine safety precautions!

- Please read these instructions carefully.
- Please keep this book of instructions.
- Any operation not in compliance with this book is likely to cause damage to the product.

Warning

Anyone except our designated service technicians should not disassemble, repair or modify the product. Otherwise it may lead to fire, electric shock or injury.		Do not use any recharger other than the one accompanying this appliance. Otherwise it may cause fire resulting from product damage, electric shock or high voltage.	
Do not touch any high voltage power cable of the appliance with wet hands, as this may cause electric shock.		Do not over bend the power cord or place heavy objects on it. Doing so may damage the cord, causing a fire or electric shock.	
Attention must be given to avoid clothes or any part of body (head, fingers, etc.) getting tangled in the brush or wheels of the vacuum cleaner. Doing so may result in personal injury.		Keep away from cigarettes, lighters, matches and heat source objects and from flammable materials (such as using gasoline to clean the machine).	

 
Attention

Turn off the power before transporting or exposing it to prolonged storage. Otherwise, the battery may be damaged.		Plug the power cord of the recharger tightly, or it may cause electric shock, short circuit, smoke or fire.	
Check the connection between the recharger and the socket for reliability. Otherwise it may result in non-charging and consequential fire.		To prolong battery life, recharge it for at least 16 hours after the first use or before reuse after a long idle period. The battery will not achieve its optimum performance until 2-3 complete recharging-discharging cycles.	
Before leaving vacuum cleaner to a long idle period, please recharge the battery to full, then take the battery to a cool place, keep bottom of the appliance dry.		Prior to use, remove all damage-prone objects (luminous objects, fabrics, glass bottles, etc.). Otherwise it may cause damage to these objects, or affect the performance the appliance.	
Please use the cleaner with caution in the presence of children to avoid being startling or hurting them.		Do not stand or sit on the vacuum cleaner so as not to cause damage to it or injuries to humans.	
Attention: Do not let the robot submerge into water or other liquids which may result to product being damaged.		Do not use the vacuum cleaner in confined spaces (small table, chair) which may lead to product damage.	
Outdoor use is prohibited, as doing so may cause product damage.		Do not use the vacuum cleaner on commercial premises, otherwise product damage may follow	


Structure of the Robot

a. Robot

Unit top

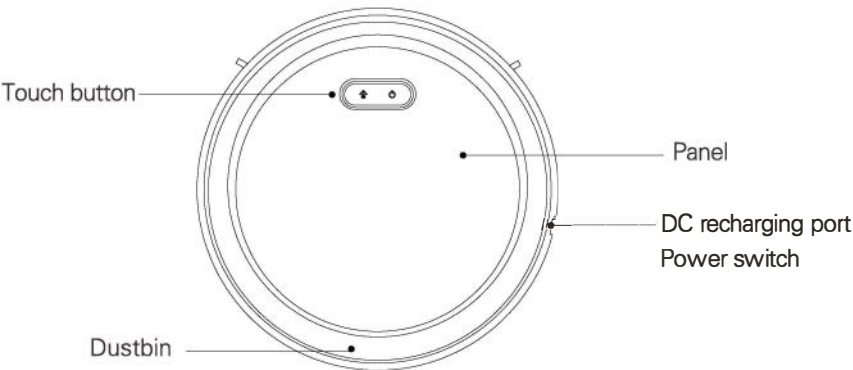

Unit bottom

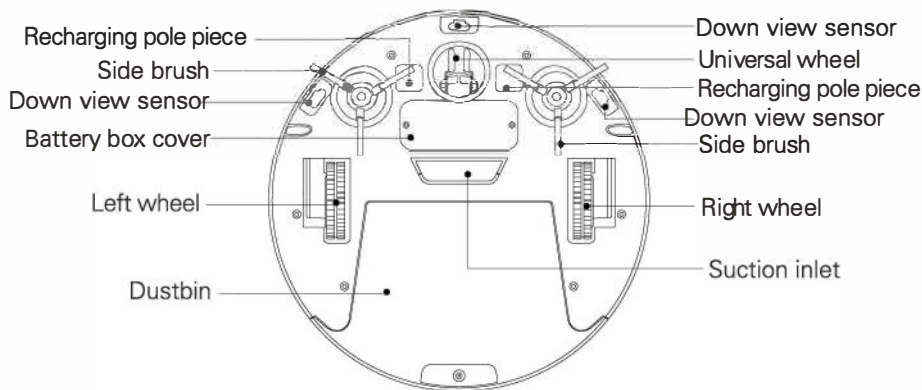 


Structure of the Robot

Cleaner and Accessories



 Vacuum Cleaner

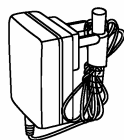

Power Adapter



Charging dock station



Dustbin

 


HEPA




Side brush

b. Dustbin

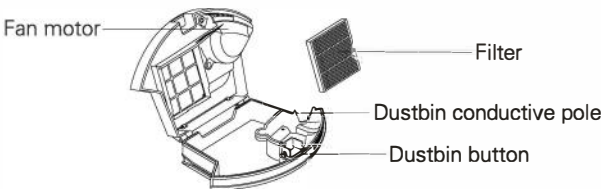

 
c. Charging dock

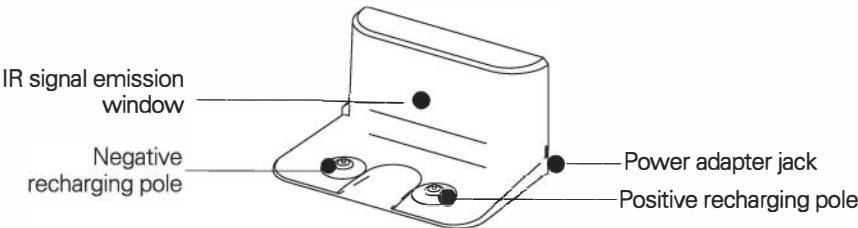

Robot Operation

a. Charging preparation

 1. Connect the power adapter jack to the charging dock.
2. Locate an electrical outlet on the wall close to the ground and plug in the power adapter.
3. Place the charging dock in a position flat on the ground with the back pushed up against a wall.
There should be no other objects or obstructions, keep a distance of two meters in front, one meter to the left, and one meter to the right and above the charging dock

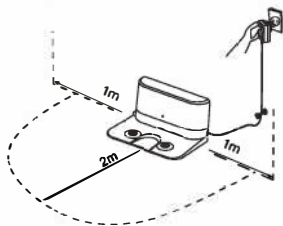


b. Turn on the Robot

1. Press and hold the robot at the left button for 2 seconds, until the indicator light flashes blue in colour, while waiting for the robot gyroscope to initialize successfully. After the indicator light is flashing, press the power button of the robot to start working.
2. When the robot finished working, it is better to keep it power on, and let the robot go to the dock station for auto charging.



c. Charging Status

 1. During the charging process, when the battery power is less than 20%, this means, the red light is breathing, while the battery power is between 20% – 50%, this means, the pink light is breathing, when the battery power is above 50%, this means, the blue light is breathing, and after the robot fully is charged, the blue light will continue to turn on for a few minutes, until it turns off.
2. Robot can also be charged by connecting the power adapter to the DC recharging port on the side of the robot.

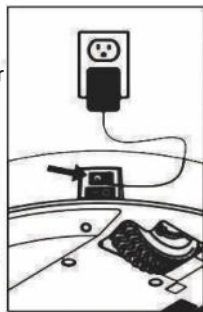

Robot Operation

d. Robot Operation

1. Press the right button for 2 seconds, then the robot will be set to stand by mode. Then press the button again, the robot starts to clean, then the blue light turns brighter. Press the right button for 5 seconds, then the robot will turn off. (Figure 1)
2. Press the left or right button on the robot panel briefly, and blue light will turn on, at this time, the machine will be under the standby mode, waiting for the next command (Figure 2).

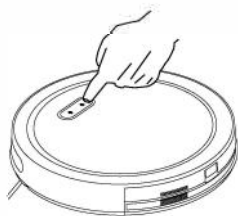 


Figure 1



Figure 2

3. Press the left button on the panel when the robot is at standby mode, at this point, the robot will go to the auto charging station. (low battery recharge mode: the red light is on), during the recharging process, the red/blue light is blinking, and when the blue light is on after the charging, it means it is charged.
4. Keep the robot on the charging dock after it is finished cleaning, in order to do the next cleaning.
5. If the robot is not used on a regular basis:
 - a.) turn off the robot to protect the battery.
 - b.) recharge the robot once a month to maintain the battery.



 
Attention

1. Lift up the robot 10cm when the robot is cleaning. The planing path will be delete.
- 2: After the robot is turned on, the robot will not operate within 10 seconds or press and hold the left button for 3 seconds, the robot will automatically enter the sleep mode.


Robot Operation

e. Introduction of the Charging Dock

1. Before using the dock station, please make sure it is connected to the power supply and adaptor.
2. Place the charging dock in a position flat on the ground with the back pushed up against a wall. There should be no other objects with strong reflectors like mirror or obstructions two meters in front of and one meter to the left, right and above the charging dock. And also avoid direct sunlight.

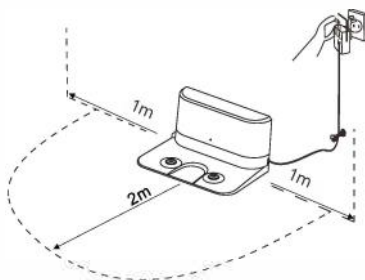

 3. When the robot is finished in the planned cleaning, it will return to the charging dock automatically.
4. During the cleaning process, if the power is too low, the robot will go to dock station for charging automatical l y(The robot will stop cleaning and alarm. Every 5 seconds will repeat alarm.)

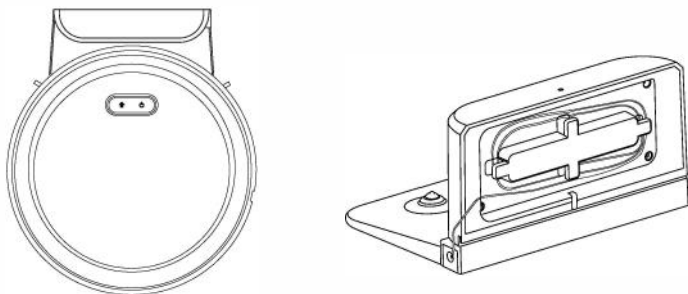

Product Features

a. Automatic Cleaning Mode

- b. In the standby mode, press the right button or intelligent model button on APP, the robot enters automatically cleaning.
- c. In the automatic cleaning mode, press the left or right button or intelligent model in APP, the robot enters standby mode. (Figure 1)

b. Spot Cleaning

1. Under standby mode/working mode, press spot cleaning mode in the APP, then the robot enters the spiral fixed point cleaning state.
2. In the spot mode, press the left button/right button of the robot or the spot cleaning mode button on the APP to enter the standby state; press other cleaning mode on the APP to enter other cleaning states.
3. Prompt after cleaning is completed (buzzer sounds three times, three times)。 (Figure 2)

c. Wall follow Cleaning

1. In standby mode, press the wall mode button on the APP interface, and the machine enters the edge cleaning state.
2. In the wall follow mode, press the left/right button of the robot to enter the standby mode; press the other cleaning mode button on the APP interface to enter other cleaning states. (Figure 3)

d. Trouble Processing

1. If the robot stuck, continue to perform the back and rotation. If the escape is successful, continue to perform the cleaning mode before the escape; if it is not successful, the alarm will be triggered.

e. Schedule Cleaning

1. Setting time and date:
After the robot successfully connects to the mobile APP and opens the APP control interface, Click the settings button, then click "Timer" and select "Add Timing" ;
Click the "Only once" button to enter the time from Monday to Sunday;
Go back to the previous level and click "Save".
2. Cancel appointment:
In the APP control interface, click the Settings button, then click "Timer";
Long press the time you have reserved, then prompt to delete;

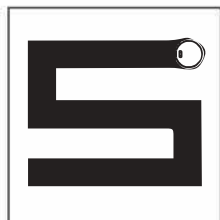 


Figure 1

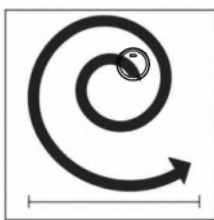 


Figure 2
08

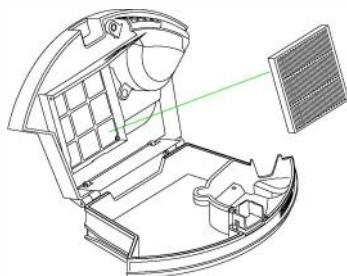 


Figure 3

Removal and Cleaning of the robot

 
 
a. Removal and Cleaning of the dustbin

1. Press the dustbin button on the panel, take out the dustbin.
2. Open the upper cover of the dustbin, pour out the dirt and other junk.



b. Removal and Cleaning of the side brush

1. Gently pick up the robot and lay it with its wheels facing up.
2. Use the mop to clean the hair off the brush.
3. Firmly grasp one of the plastic spokes containing the wire brushes and pull straight up.
4. The side brush should only be replaced if the previous side brushes become damaged.

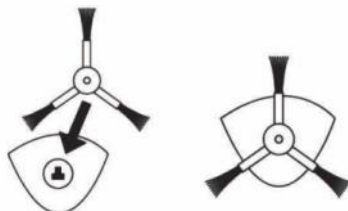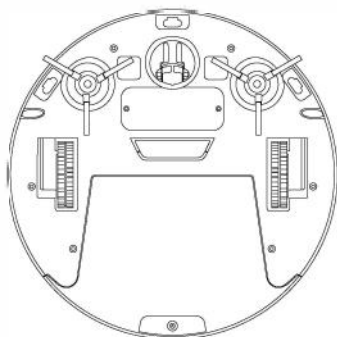

Common Failures and Troubleshooting

NO.	Cause	Warning Sound	Indicator light	Troubleshooting
1	Drive wheel failure	1 sound 3 times	The red indicator light is on	Check the wheel if tangled, remove the obstacle
2	Side brush failure	2 sound 3 times	The red indicator light is on	Check if the side brush is entangled and clean the side brush
3	Fan motor failure	3 sound 3 times	The red indicator light is on	Clean the garbage and wind tunnel
4	Ground detective failure	2 sound 3 times	The red indicator light is flashing	The robot is lifted up, please move to, ground clean the ground detective sensor
5	Trouble processing	3 sound 3 times	The red indicator light is flashing	Trouble processing failure, move to empty place
6	Low power	4 sound 3 times	The red indicator light is flashing	The voltage is too low and needs manual assistance to charge
7	Adaptor failure	5 sound 3 times	The red indicator light is flashing	Change to 12V adaptor
8	Charging failure	6 sound 3 times	The red indicator light is flashing	Check if turn on the robot, or the battery if connected correct.

Dimensions and Parameters

Technical Specification for the Cleaner

No.	Item	Index parameter
1	Model	My genie smart
2	Rated voltage	DC 14V
3	Rated power	30W
4	Operating temperature range	-10℃-45℃
5	Input voltage/current	14V/0.5A
6	Infrared remote control	38KHZ
7	Dimension	Φ310*68mm
8	Weight	2 KG
9	Battery	Lithium-ion 2600mAh
10	Dustbin capacity	650ml

Technical specification for the recharging bay

No.	Item	Index parameter
1	Applicable model	My genie smart
2	Dimension	L*W*H: 194*15*105mm
3	Input voltage/current	14V/0.5A
4	Operating temperature range	-10℃-45℃
5	Operating humidity range	85RH

Wifi Manual

 
1.Scan the bar code below to download Tuya WIFI APP-- "smart life" .




2.Open APP "smart life" , registered your account by phone number or email etc.

3.Enter "Add device" surface.

4.Enter "Add Manually" , click one of icon to add, any icon is OK.

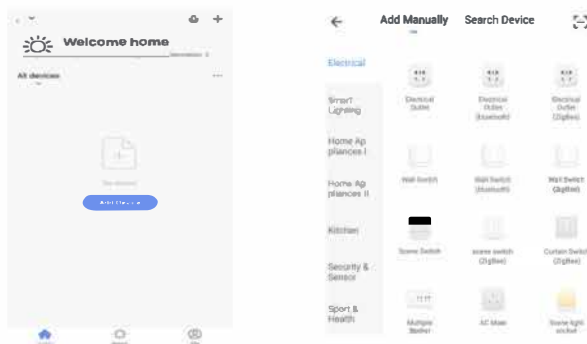


 5.Firstly press and hold the right button for 5 seconds to turn on the robot, you will see the two lights flashing blue, after 5 seconds, if the lights will not flash and keep lights on, then please press right button and left button at same time , until you heard a voice of "bee"

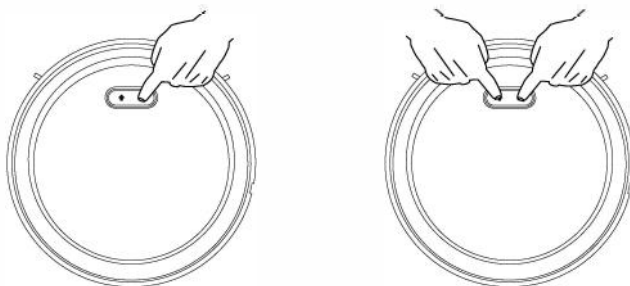


Wifi Manual

 6. Select the available network, only support 2.4GHz, enter the correct WIFI password, click to confirm.
7. After confirmed, the "Connecting" progress of the robot will be displayed.
8. After the connection is successful, it will appear "Device added successfully"

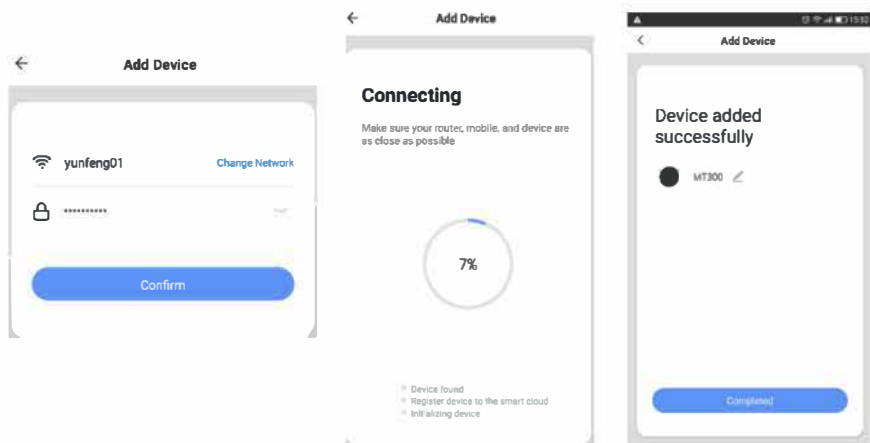

 9. You can enter the operation interface to control the robot now.
10. Click "Settings", you can see "Timer", click it to add schedule cleaning for robot.

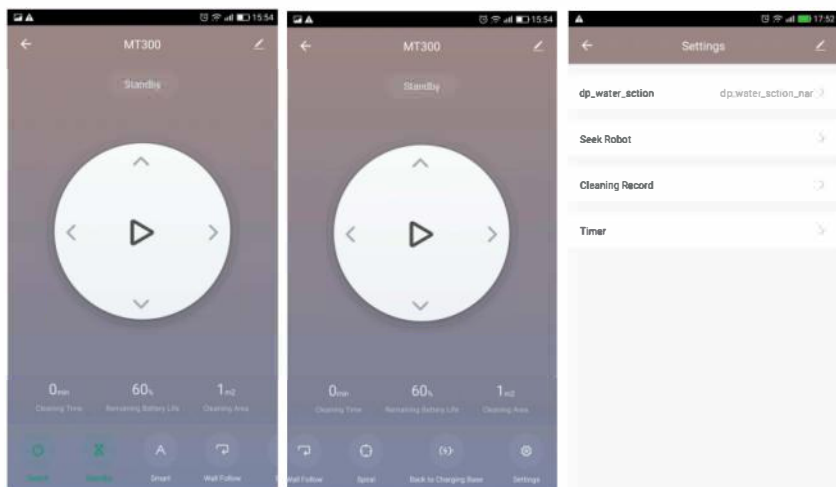



www.mygenieshop.com.au



Consumer Warranty

MyGenie would like you to enjoy your new purchase.
This warranty card is provided to ensure that you get satisfaction.

Our goods come with guarantees that cannot be excluded under Australian Consumer Law.

You are entitled to a replacement or refund for a major failure for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits of this warranty are in addition to the consumer's rights and remedies under law.

Warranty Period

The warranty is 12 months from the date of purchase

Registering Your Purchase

Please register your purchase on www.mygenieshop.com.au

Procedure for claiming under warranty

Should you need to make a claim under this warranty please email direct to
support@mygenieshop.com.au

Please retain your original receipt as proof of purchase