

# Warranty and Installation Guide

## Fixed Low Profile Flat Panel Wall Mount

Thank you for purchasing this Crest TV Wall Mount.

Crest prides itself on supplying quality audio visual accessories to consumers and businesses throughout Australia. If you follow this guide carefully, we are confident this product will help maximise the enjoyment you obtain from your audio visual equipment for many years.

Please keep this guide for future reference.

### TECHNICAL SUPPORT

If you have any questions regarding the warranty, installation or use of this product, please contact our Technical Support Centre on 1800 812 261.

### INSTALLATION INSTRUCTIONS

#### IMPORTANT

1. Installation of this TV mount will be easier if two people are involved.
2. Some images in this guide may vary slightly from the actual components supplied.
3. Ensure this Installation Guide is completely read and understood before attempting installation.
4. Mount **MUST NOT** be installed solely in plasterboard, fibre cement and similar surfaces.
5. Mount **MUST** be installed in sound supporting structures such as those made of timber, steel or masonry using appropriate fasteners.
6. The supporting structure must be capable of sustaining the combined weight of the TV mount and the display otherwise the structure must be reinforced.
7. The fasteners supplied in this hardware pack allow for fixing into timber and masonry only. If installing into a supporting structure made of steel, appropriate fasteners must be used and sourced from an appropriate supplier.
8. Use appropriate tools and safety equipment and ensure adequate ventilation during installation.
9. If uncertain about any aspect of installation, contact Crest or an installation professional.

### TV COMPATIBILITY SPECIFICATIONS

Note the TV Compatibility Specification of this mount.

**CBFP1F** This model will suit most flat panel TV sizes from **32 to 60 inches (81 to 152cm)** as long as they weigh **75kg maximum** and possess a maximum mounting hole pattern of **400 x 600mm (h x w)**

### TOOLS REQUIRED

#### Drywall (Timber Frame) Installation

- Stud finder
- Spirit level
- Pencil
- Drill
- Phillips head screwdriver
- 5 to 6mm diameter high speed drill bit
- Adjustable spanner










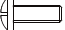

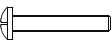



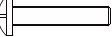

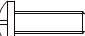

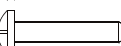
#### In addition, for Masonry Installation

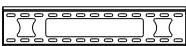- Drill with hammer function
- 10mm masonry drill bit
- Hammer



165 South Pine Rd  
PO Box 5658  
Brendale  
Qld 4500
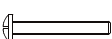
### WALL MOUNT FASTENERS DIAGRAM


Item	Image	Description	Qty	Item	Image	Description	Qty
A		Wall Plate	1	K		M8 Lock Washer	4
B		Monitor Bracket	2	L		M8 Spacer	4
C		Lag Bolt	6	M		M4x15mm Bolt	4
D		Masonry Anchor	8	N		M4 x 30mm Bolt	4
E		M4/M5 Washer	8	O		M5 x 15mm Bolt	4
F		M6/M8 Washer	6	P		M5 x 30mm Bolt	4
G		M8 Washer	4	Q		M6 x 15mm Bolt	4
H		M4 Lock Washer	4	R		M6 x 30mm Bolt	4
I		M5 Lock Washer	4	S		M8 x 25mm Bolt	4
J		M6 Lock Washer	4	T		N8 x 40mm Bolt	4

# Warranty and Installation Guide Fixed Low Profile Flat Panel Wall Mount

## STEP 1 – ATTACH WALL PLATE TO WALL


### A. Installing in Drywall (Timber frame). See Figure 1.

1. Use the wall plate as a template. Use a 6mm drill bit to make 4 holes, 50mm deep in the center of the studs. Ensure you use a stud finder to locate the centerpoint of each stud for optimal mounting strength.
2. **Installing the Wall Plate.**  
Put the wall plate on the wall and then screw four lag bolts into the wall. Do not over tighten.

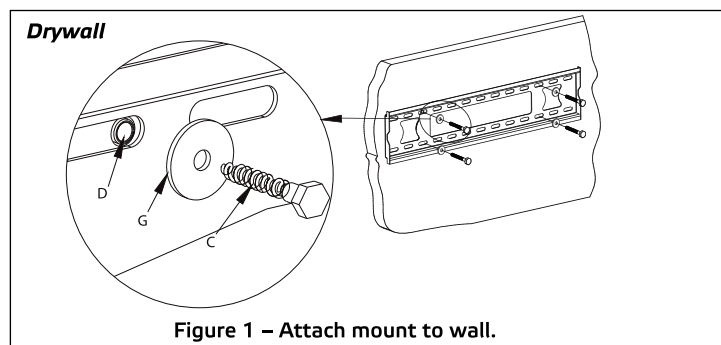


### B. Installing in Masonry. See Figure 2.

1. Use the wall plate as a template. Use a 9.5mm drill bit to make 6 holes, 50mm deep in the masonry wall. Wedge six plastic masonry anchors in the holes.
2. **Installing the Wall Plate.**  
Put the wall plate on the wall and then screw six lag bolts through a plastic masonry anchor and metal washer, then into the wall. Do not over tighten.

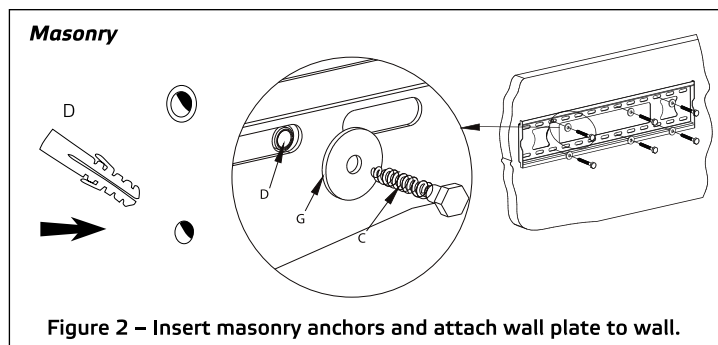

## STEP 2 – ATTACH ARMS TO TV. See Figure 3.

1. Screw two bolts into the holes on the back of the flat panel TV to install each monitor bracket. Make sure the distance from each bracket to the top of the TV is equal, and also as centered as possible. Select the parts you need in accordance with the dimensions of the holes in the back of the TV. Use spacers as required with curved back TVs.

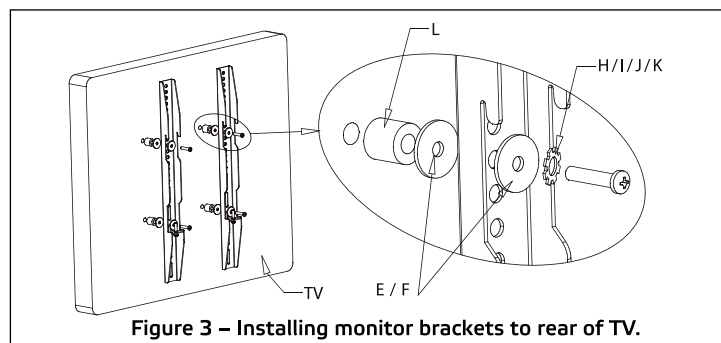

## STEP 3 – MOUNT TV. See Figure 4.

1. Hang the two monitor brackets together with the panel TV on the wall plate. Gently lower the TV until firmly attached to the wall plate.
2. Fix the two bolts under the monitor brackets on the inside of the wall plate by screwing them down. This secures the mount against accidental tipping or knocking.

