

# CONTENTS

- 02 Package Contents
- 02 Technical Specifications
- 03 Important Safety instructions
- 06 Assembly and parts
- 07 Instructions
- 08 Cleaning and Maintenance
- 09 Wiring Diagram
- 09 Troubleshooting

---

## AFTER SALES SUPPORT

Email: [service@prolinkbrands.co.nz](mailto:service@prolinkbrands.co.nz)

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

# *PACKAGE CONTENTS*

1 x Sheffield 70L Beverage Centre  
1 x Instruction Manual  
1 x Warranty Card

Confirm all parts before disposing of carton. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

## *TECHNICAL SPECIFICATION*

Model:	PL70L
Rated Voltage:	220-240V~, 50Hz
Power Consumption:	65W
Gross Volume:	70L
Climate Class:	N; SN; St; T
Power Consumption:	0.488 kWh/24h
Min/Max Temperature:	3°C - 10°C
Working Environment:	5°C – 32°C
Min Temp Difference:	>15°C
Size (W x H x D):	430 x 450 x 740mm
Net Weight:	21.3kg

---

### **AFTER SALES SUPPORT**

Email: [service@prolinkbrands.co.nz](mailto:service@prolinkbrands.co.nz)

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm



## **IMPORTANT SAFETY INSTRUCTIONS**

### **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

Carefully read this manual before using this appliance.

- Ensure that you know how the appliance functions and how to operate it.
- Maintain the appliance in accordance with the instructions to ensure that it functions properly.
- Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
- The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Do not use this appliance if it has been dropped or damaged in any way, or if the supply cord is damaged.

### **Intended Use**

- Indoor domestic use only: this appliance is intended for indoor domestic use only. Do not use it outdoors. Do not use in moving vehicles or boats.
- Intended Purpose: Do not use the appliance for anything other than its intended purpose, and only use it as described in this manual
- Accessories: Do not use any accessories with the appliance that are not supplied or specifically recommended.

**WARNING:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

**WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer.

### **Supply Cord and Plug**

Always unplug from mains supply when not in use. Do not abuse or damage the power cord. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Ensure that the socket is located near the appliance and easily accessible in order to quickly unplug the appliance from the mains in the event of an operating problem. Always pull out the plug from the socket (pull on the plug, not the cable)

---

### **AFTER SALES SUPPORT**

Email: [service@prolinkbrands.co.nz](mailto:service@prolinkbrands.co.nz)

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Page 3

Never bend the mains lead and never wind it around the appliance as this may lead to cable breakages. Risk of electrocution!

**WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.

**WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Avoid the use of an extension cord as this may overheat and cause a risk of fire. Do not run cord under carpeting and do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.

### **Earth Safety**

This appliance must be earthed. Only connect to a suitably earthed 220-240V ~ 50Hz supply socket.

### **Use and Environment**

Ensure that the appliance is placed on a flat, stable, slip-free and dry surface. Do not cover the appliance while it is operating. Ensure that there is sufficient clearance and that a safe distance to walls, ceilings and other objects are kept.

To avoid a hazard due to instability, the unit must be fixed in accordance with the instructions.

The air intake and outlet openings must never be covered or blocked. Clean the ventilation slots regularly to keep them free of dirt and prevent the openings from clogging.

Do not place any objects on the appliance.

**WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

### **Supervision**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

### **Damaged or Dropped**

Always inspect your appliance before use. Check parts are correctly attached. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water. Return it to an authorised service dealer for examination and repair.

---

#### **AFTER SALES SUPPORT**

Email: [service@prolinkbrands.co.nz](mailto:service@prolinkbrands.co.nz)

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

## **Water**

Do not immerse the appliance or its supply cord in water. Do not use with wet hands or use in damp situations. Do not use near a laundry, bath, shower or swimming pool.

If the appliance does fall into water, first remove the plug from the mains socket before lifting the appliance out of the water! Do not turn the appliance on again until it has been checked at an approved service point. The same applies if the mains lead or appliance is damaged, or if the appliance has fallen on the floor. Risk of electrocution!

**Do not operate near flammable gas or fumes.**

**Do not use the Cooler in any other orientation other than upright as shown in this manual.**

## **Disposal**

WARNING: Risk of child entrapment.

Junked or abandoned appliances are dangerous, even if they "just sit around in the garage a few days"

- Before you throw away your cooler; take the door off, leaving the shelves in place so that children may not climb inside easily.
- Never allow children to operate, play with or crawl inside the appliance.

## **Environment Friendly Disposal**

Old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out Wheeled Bin symbol on the product reminds you of your obligation that when you dispose of the appliance, it must be separately collected. Contact your local authority for information concerning the correct disposal of your appliance.

## **Refrigerant: Flammable Refrigerant Gas!**

WARNING: Do not damage the refrigerant circuit.

DANGER - Risk of fire or explosion. Flammable refrigerant used. DO NOT use mechanical devices to defrost Beverage cooler. DO NOT puncture refrigerant tubing.

To be repaired only by trained service personnel.

Consult repair manual / owner's guide before attempting to service this product. All safety precautions must be followed.

Dispose of property in accordance with federal or local regulations. Flammable refrigerant used.

---


## **AFTER SALES SUPPORT**

Email: [service@prolinkbrands.co.nz](mailto:service@prolinkbrands.co.nz)

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

CAUTION - Risk of fire or explosion due puncturing of refrigerant tubing. Follow handling instructions carefully. Flammable refrigerant used.

## ASSEMBLY AND PARTS

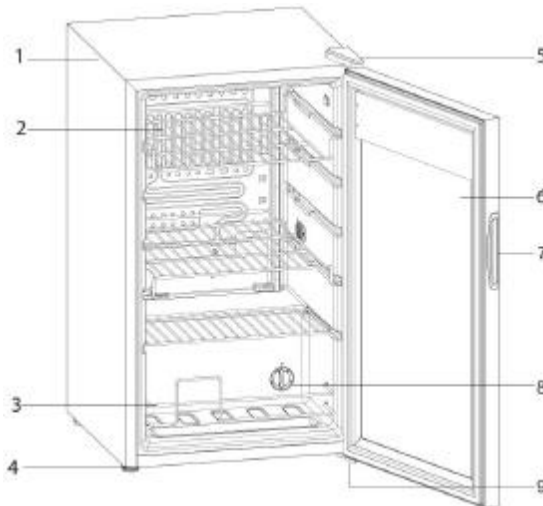

- |                     |                        |
|---------------------|------------------------|
| 1. Cabinet          | 6. Glass door          |
| 2. Shelf            | 7. Door handle         |
| 3. Retainer bar     | 8. Temperature control |
| 4. Foot             | 9. Bottom hinge        |
| 5. Upper door Hinge |                        |

### Before First Use

1. Remove all packaging materials and safely dispose of.
2. Remove any stickers or labels from the appliance. (Except the rating label!).
3. Wipe the outside of the appliance with a moist cloth and dry with a towel.

---

### AFTER SALES SUPPORT

Email: [service@prolinkbrands.co.nz](mailto:service@prolinkbrands.co.nz)

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

## Installation and Clearance

- This appliance is designed to be free standing only, and should not be recessed or built-in.
- Position your Cooler so that the plug is accessible.
- Keep your Cooler out of direct sunlight.
- Do not place next to heat generating appliance.
- Place the Cooler on a levelled surface that is strong enough to support the unit when it is fully loaded. To level your Cooler, adjust the front feet located at the bottom of the unit.
- Before connecting the unit to a power source, allow it stand upright for approximately 3 hours. This will reduce the possibility of any system malfunctions which may have occurred from handling during transportation.
- When positioning the cooler, 15cm of space at the back and 25cm of space both sides are suggested. Do not put any objects on top of the unit which may block the air circulation.
- Do not remove the feet of the Cooler. Keep at least 50mm of ground clearance.

WARNING! DO NOT COVER THE APPLIANCE


WARNING! DO NOT BUILD THE APPLIANCE INTO CABINETRY

# INSTRUCTIONS

## Power

1. Connect the supply plug to a suitable 220-240V AC 50Hz power outlet and switch on.
2. After plugging the appliance, allow the unit to cool down for 2-3 hours before placing beverage into the cooler compartment.

## Setting the Temperature.

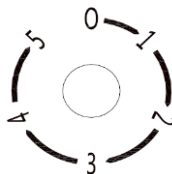

- Your unit has only one control for regulating the temperature in the compartment. The temperature control is located at the bottom right-hand side of the compartment.
- The first time you turn the unit on, set the temperature control to "5".
- The range of the temperature control is from position "0" to "5". After 24 to 28 hours, adjust the temperature control to the setting that best suits your need. The setting of "3" or "4" should be appropriate for home or office use.

---

## AFTER SALES SUPPORT

Email: [service@prolinkbrands.co.nz](mailto:service@prolinkbrands.co.nz)

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

- To turn the appliance off, turn the temperature control to "0".
- Turning the temperature control to "0" position stops the cooling cycle but does not shut off the power to the unit.
- If the unit is unplugged, has lost power, or is turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the unit will not start.

### **Energy Saving Tips**

- The unit should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.
- Overloading the unit forces the compressor to longer.
- Be sure to wipe items dry before placing them in the unit. This cuts down on frost build-up inside the unit.
- Unit storage area should not be lined with aluminium foil, wax paper, or paper towelling. Liners interfere with cold air circulation, making the unit less efficient.
- Remove as many items as needed at one time, and close the door as soon as possible.

## ***CLEANING and MAINTENANCE***

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

### **Before Cleaning**

- When not in use or before cleaning, always disconnect the appliance from the mains supply.

### **Care and Cleaning**

- Wipe the main outer body with a hot damp cloth and mild cleaning agent only, dry with a dry towel, and do not immerse this appliance in any liquid. Do not put water into the appliance.
- Wipe the inside of the appliance with a warm damp cloth.
- Wash the racks in hot soapy water, dry with a dry towel.
- Spray and wipe the door with a suitable glass cleaner.

**NOTE:** Never use rough scouring pads or abrasive cleansers on any plastic or metal parts as the surface may be damaged.

---


### **AFTER SALES SUPPORT**

Email: [service@prolinkbrands.co.nz](mailto:service@prolinkbrands.co.nz)

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Page 8

# Wiring Diagram

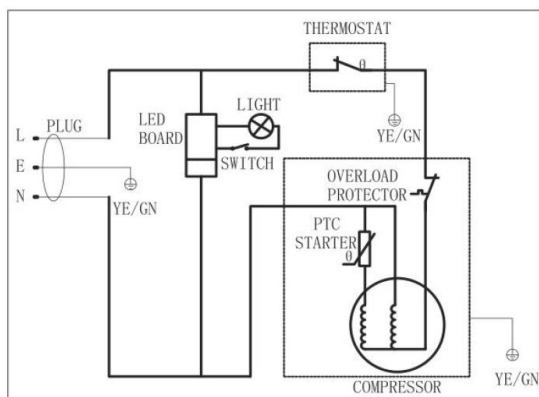

## Troubleshooting

Problem	Possible Cause
Unit does not operate.	<ul style="list-style-type: none"> <li>Not plugged in.</li> <li>The circuit breaker tripped or a blown fuse.</li> </ul>
Turns on and off frequently.	<ul style="list-style-type: none"> <li>The room temperature is hotter than normal. A large amount of bottles has been added to the unit.</li> <li>The door is opened too often.</li> <li>The door is not closed completely.</li> <li>The temperature control is not set correctly. The door gasket does not properly seal.</li> <li>The unit does not have the correct clearances.</li> </ul>
Vibrations	<ul style="list-style-type: none"> <li>Check to ensure that the unit is level.</li> <li>Check the fan.</li> </ul>
The unit seems to make too much noise.	<ul style="list-style-type: none"> <li>The rattling noise may come from the flow of the refrigerant. This is normal.</li> <li>As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your unit.</li> <li>Contraction and expansion of the inside walls may cause popping and cracking noise.</li> <li>The unit is not level.</li> </ul>
The door will not close properly.	<ul style="list-style-type: none"> <li>The unit is not level.</li> <li>The gasket is dirty or bent.</li> <li>The shelves, bins, or baskets are out of position.</li> </ul>

### AFTER SALES SUPPORT

Email: [service@prolinkbrands.co.nz](mailto:service@prolinkbrands.co.nz)

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm